



ISSUE 775 JUNE 2017

COMBAT VEHICLES	3	As Time Changes, So Does PS!	27-34
M88A1 Recovery Vehicle, Final Drive Sprocket Ch	eck 4	MISSILES	35
M88A2 Recovery Vehicle, Engine PMCS Tips M119A3 Towed Howitzer, Platform Wear M119A2/A3 Towed Howitzer, Breechblock Pin	5-7 8	Javelin PM Tips M142 HIMARS Pivot Joint MWO	36-37 38
Vital	9-10	Patriot Spare Tire PMCS	39
M2/M3-Series Bradley, M242 Storage Stand Plans	10	SMALL ARMS	40
TACTICAL VEHICLES	11	New Dummy Rounds Fielded	40-41
HMMWV Steering Shaft Lube Points	12	M249, M240-Series Machine Gun Barrel BFAs MK19 PM Pointers	41 42-44
M1235A4/A5 MaxxPro Dash ISS w/OGPK/CROWS Battery Box, Fuel Tank Access Cover	13	M240B Trigger Spring Pin NSN	45
CONSTRUCTION EQUIPMENT	14	TOOLS	45
M1272 Buffalo Battery Disconnect	15	SATS Ramp Safety Strap NSNs	45
120M Grader Cab Steps, Circle Drive Hose Damag D7R II Tractor Decelerator Pedal Saves Transmission		SOLDIER SUPPORT	46
AVIATION	18	M59A Field Range, Mod for 10-Gal Stock Pot Fit	47-48
M230 Automatic Gun PM	19-21	COMMUNICATIONS	49
AH-64 Main Rotor Blade Turn-in Apache Support Actuator Turn-in	21 21	Electronic Equipment Codes Decoded	49-53
B-1 Maintenance Stand Caster w/ Lock Assembly UH-60 Armament Protection Kit Part Number Change	22-23	LOGISTICS MANAGEMEN	T 54
H-60M Engine Igniter Trouble UH-60 MEDEVAC, FLIR a Two-Person Lift	23 24	SMR Codes Explained	55-59
UH-60A/L, HH-60M Pro-Seal Removal Tool	25	WIN-T Items Reconfigured in MMDF	60
M144 Mounts Modifications	26	Connie's Post Scripts	61

TB 43-PS-775, The Preventive Maintenance Monthly, is an official publication of the Department of the Army, providing information for all Soldiers assigned to combat and combat support units and all Soldiers with unit maintenance and supply duties. All information published has been reviewed and approved by the agency responsible for the equipment, publication or policy discussed. Aplication of the information is optional with the user. Masculine pronouns may refer to both genders. The use of product or company names does not constitute endorsement of those products, services or companies by the U.S. Army. The use of non-DoD hyperlinks, along with their content, does not constitute endorsement by DoD or DA. Neither DoD nor DA exercises any editorial control over, and cannot vouch for, content on non-DoD websites.

PS, The Preventive Maintenance Monthly (ISSN 0475-2953) is published monthly by the Department of the Army, Redstone Arsenal, AL 35898. Periodical postage is paid at the Huntsville, AL post office and at additional mailing offices. Postmaster: Send address changes to PS. The Preventive Maintenance Monthly. USAMC LOGSA (AMIXLS-GP), Bldd. 3303. Redstone Arsenal. AL 35898.

You are invited to send PS your ideas for improving maintenance procedures, questions on maintenance and supply problems and questions or comments on material published in PS.

Just write to:

MSG Half-Mast

PS, the Preventive Maintenance Monthly

USAMC LOGSA (AMXLS-GP) Bldg. 3303

Redstone Arsenal, AL 35898

Or emai

usarmy.redstone.logsa.mbx.psmag@mail.mil

ernet address. https://www.logsa.army.mil/psmag/pshome.cfm By order of the Secretary of the Army:

MARK A. MILLEY

General, United States Army Chief of Staff

Official:

June B D June

Administrative Assistant to the Secretary of the Army

1708013

PS MAGAZINE GOES Digital!

For 66 years *PS Magazine* has provided exceptional articles about combat and tactical vehicles, helicopters and unmanned aerial vehicles, weapons, radios, electronics and logistics. It has been a tremendous accomplishment by a staff of writers and editors, contract artists and printers. Its impact on Army readiness and on Soldiers, from enlisted through commissioned, who operate that equipment has been substantial.


With this issue, the Army Materiel Command recognizes that hard work, and the Army's appreciation for the magazine's accomplishments even as we end the printing of this outstanding technical bulletin.

But the end of printing isn't the demise of *PS Magazine*. Over the past 14 years, we have developed a corps of leaders and Soldiers who have become accustomed to a predictable system that provided vehicles, weapons and equipment maintained by contractors. The contractors did that well, but to meet future adversaries the Army must return to being an expeditionary force, one that is able to make forcible entry, to travel long distances, and be able to maintain materiel readiness without the support of contractors, and perhaps even without Logistics Assistance Representatives. Just as the Army introduced *PS Magazine* in 1951 to bring Soldiers back to preventive maintenance practices, U.S. Army Materiel Command is using the PS Magazine Mobile App to bring Soldiers and leaders back to unit maintenance, preventive maintenance. So this outstanding publication will continue on as a Mobile App, supporting Soldiers not only with the articles and illustrations that it has excelled in, but with resources, Hot Topics, a search tool, and videos that will offer so much more than the printed publication could.

I am confident that Soldiers and their leaders will find PS Magazine to be a much



PS 775 1 JUN 17

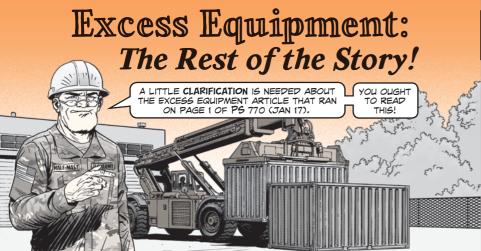

This update answers the question of whether maintenance dollars should be used on equipment that will be turned in to DLA.

Should units spend money to bring excess equipment up to -10/20 standards and then turn the equipment in to DLA-DS? The answer is no. But to know whether your equipment is being divested, your command must ask for and receive USAMC's disposition instructions.

When the Army changes its force structure, in addition to when it modernizes, some units are stuck with excess equipment for which they have no authorization. Furthermore, that equipment must be maintained at -10/20 until the unit turns in the equipment for disposal. You can see this future excess situation up to two years in advance of it being applied to your unit's property books.

Army EXORD 008-16's mission is to build readiness by clearing out excess equipment, reducing Army storage costs, and not spending unit maintenance funds on excess equipment.

If your unit has excess equipment, do not delay coordinating with your property book managers to obtain disposition instructions through the Logistics Support Activity's Lead Materiel Integrator Decision Support Tool (DST).


Once DST disposition instructions are received to turn in to DLA-Disposition Services, excess equipment will be turned in "as is," meaning the intent is to not conduct additional repairs on the equipment.


Commanders should only make the repairs and scheduled services needed to get excess equipment safely to the turn-in point.

For further assistance on disposing equipment, go to the DLA Digital Disposal Support Representative's website: http://www.dla.mil/ddsr

Details of the turn-in standards are found in FRAGO 1, Equipping, to EXORD 008-16, Army Reorganization: https://www.milsuite.mil/book/docs/DOC-327639

COMBAT VEHICLES

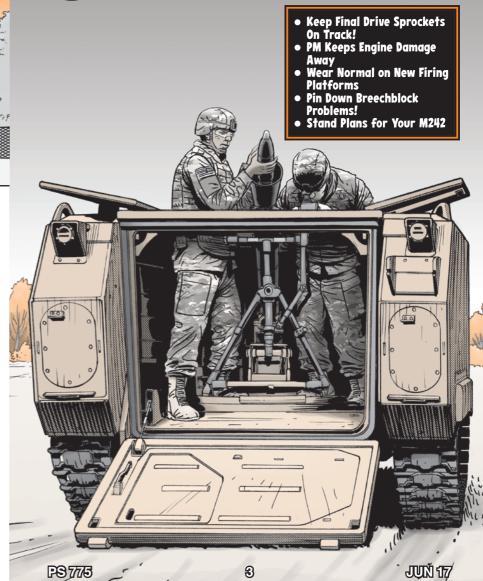

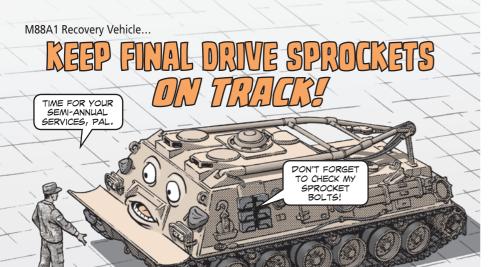


MECHANICS, THE FINAL DRIVE HUB SPROCKET'S THREADED BOLT HOLES ON YOUR M88AI CAN STRIP OR EVEN BREAK IF YOU **DON'T** DO PM.

> THAT COULD LEAVE YOUR VEHICLE WITH A **WOBBLY** FINAL DRIVE SPROCKET.





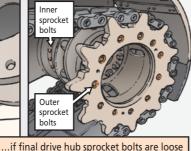


HERE'S HOW TO KEEP THOSE BOOD SHAPE AND YOUR FINAL DRIVE SPROCKET ON TRACK...

can strip or break...


- During semi-annual PMCS, inspect the final drive hub bolts. Re-torque loose bolts, NSN 5306-00-799-7722, to 225-250 lb-ft. Locking nuts, NSN 5310-00-225-6408 should be torqued to 70-90 lb-ft.
- Only use those locking nuts once. If they're loose or have to be removed, replace 'em.
- Always use a dab of GAA on the final drive hub sprocket bolts and locking nuts during installation.

M88A2 Recovery Vehicle... PM Keeps Engine Damage Away

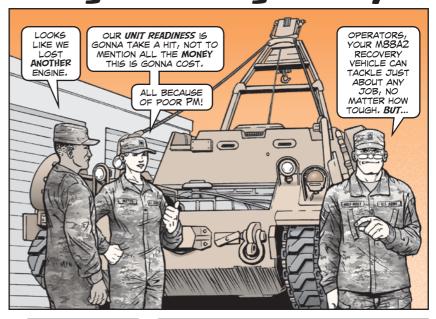

... IT CAN'T DO ITS JOB
IF YOU DON'T DO YOUR
JOB OF PROTECTING
THE ENGINE.



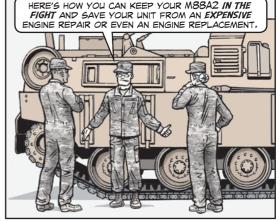




Check Engine Oil Level

DOING THE BASICS, LIKE CHECKING THE ENGINE OIL, IS *CRITICAL*. AN ENGINE THAT'S LOW ON OIL OR OVERFILLED IS A **DISASTER WAITING TO HAPPEN**.

CHECK THE OIL BEFORE AND DURING OPERATIONS.

MAKE SURE YOU DO THE BEFORE CHECK ON LEVEL GROUND AND ONLY AFTER THE ENGINE HAS BEEN STOPPED FOR AT LEAST TWO HOURS.

CHECK THE OIL EVERY EIGHT HOURS DURING EXTENDED OPERATIONS WITH THE ENGINE RUNNING. VERIFY THE OIL LEVEL WITH THE ENGINE STOPPED AS SOON AS POSSIBLE.

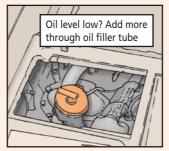

SERVICE, CLEAN OR CHANGE OIL FILTERS, ACCORDING TO THE -13&P TM, WHEN:

- service is recommended by Army Oil Analysis Program (AOAP) laboratory analysis.
- it's been 12 months since the last AOAP-directed oil and filter change.

Air Filter Maintenance

THE AIR
CLEANER IS THE
ONLY SOURCE
OF AIR FOR THE
ENGINE.

WITHOUT AIR, YOUR VEHICLE'S ENGINE WON'T



MAKE SURE THE AIR INTAKE SCREENS ARE FREE OF OBSTRUCTIONS LIKE $\overline{\text{DIRT}}$, $\overline{\text{MUD}}$ OR LEAVES THAT $\overline{\text{BLOCK}}$ THE FLOW OF AIR THROUGH THE SCREENS.

CLEAN THE FILTER AT LEAST DAILY, YOU MIGHT NEED TO CLEAN IT MORE OFTEN DURING OPERATIONS. CHECK OUT THE -10 TM FOR INFO ON CLEANING THE FILTER.

THE AIR CLEANER
PUST COVER HAS TO
BE REMOVED AND
CLEANED DAILY, AND
MORE OFTEN PURING
OPERATIONS.

OPEN THE DUST
COVER CAP, REMOVE
ANY DUST AND CLEAN
WITH A DAMP RAG,
MAKE SURE THE
FILTER ELEMENT
WINGNUT IS TIGHT
EACH TIME BEFORE
YOU REINSTALL THE
DUST COVER,


REPLACE OR CLEAN THE FILTER ELEMENT WHEN THE RESTRICTION GAUGE IS RED.




Avoid Water Damage

A CLEAN VEHICLE IS A HAPPY VEHICLE. BUT SOME OF YOU GO A LITTLE TOO FAR WITH THE SPRAY WHEN YOU HIT THE WASH RACK.
BE SURE TO BALANCE CLEANING YOUR VEHICLE WITH DAMAGE PREVENTION.

TOO OFTEN, HIGH-PRESSURE WATER IS GETTING SPRAYED IN PLACES IT **SHOULDN'T.**THAT INCLUDES THE AIR FILTER INTAKE VENTS ON BOTH SIDES OF THE VEHICLE.

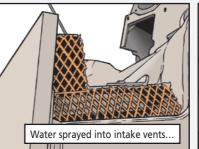

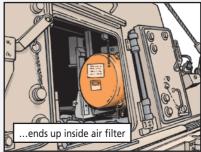

AT THE NEXT STARTUP, THAT WATER GETS SUCKED DIRECTLY INTO THE AIR FILTER WHERE IT SOAKS THE CANISTER. THAT CUTS OFF AIR FLOW AND CAN LOCK UP THE ENGINE.

WHEN CLEANING YOUR VEHICLE, KEEP THE HIGH-PRESSURE WATER **BELOW** THE TRACK LINE.

PQDRs

IF YOU FIND SOMETHING **WRONG** WITH A REPLACEMENT PART FOR YOUR VEHICLE'S ENGINE, YOU SHOULD FILE A PROPUCT QUALITY DEFICIENCY REPORT (PQDR), FILE PQDRS THROUGH THE PROPUCT DATA REPORTING AND EVALUATION PROGRAM (PDREP), ACCESS PDREP AT.

https://www.pdrep.csd.disa.mil/


FOR HELP WITH PDREP OR FILING PQDRS, REFER TO AR 702-7 OR CONTACT CUSTOMER SUPPORT AT DSN 684-1690, (207) 438-1690, OR EMAIL:

webptsmh@navu.mil


ALSO, BE SURE TO LEAN ON YOUR LOCAL LOGISTICS ASSISTANCE REPRESENTATIVE (LAR) OR FIELD SERVICE REPRESENTATIVE (FSR) ANYTIME YOU HAVE QUESTIONS OR NEED ASSISTANCE. THEY'RE A GREAT RESOURCE AND ARE THERE TO HELP.



PS 775 6 JUN 17

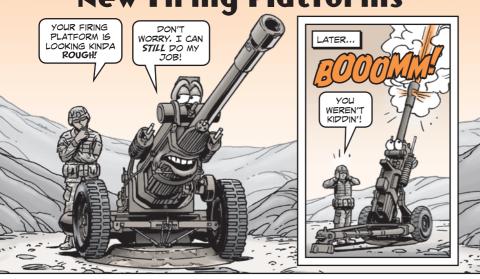


LREWMEN, IF YOUR MI19A3 TOWED HOWITZER IS RETROFITTED WITH THE FIXED RECOIL SYSTEM AND SUSPENSION LOCK-OUT SYSTEM (\$LOS), BE AWARE THAT PAINT CHIPPING AND SURFACE WEAR ON THE FIRING PLATFORM IS NORMAL.

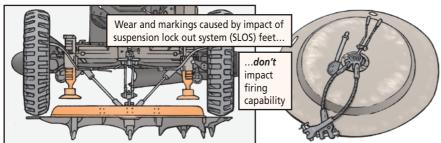

RETROFITTED M119A36 WILL HAVE EITHER AN ALUMINUM FIRING PLATFORM, NSN 1015-01-540-1245, OR A TITANIUM FIRING PLATFORM, NSN 1015-01-620-6129. SURFACE WEAR CAUSED BY THE SLOS FEET DURING FIRING IS NORMAL AND DOESN'T AFFECT YOUR HOWITZER'S MISSION CAPABILITY.

YOU STILL NEED TO CLOSELY INSPECT THE FIRING PLATFORM AS A REGULAR PART OF PM. CHECK OUT THE FULL SCOOP ON INSPECTING THE ALUMINUM FIRING PLATFORM IN TM 9-1015-252-24 (NOV 12) AND THE TITANIUM FIRING PLATFORM IN TM 9-1025-260-24 (MAY 13, W/CH 1, JAN 15).

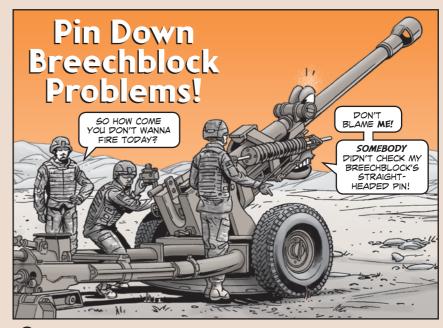


Crewmen, when removing or installing your M119A2/A3 towed howitzer's breechblock, make sure the straight headed pin is in place. The pin can wear over time causing it to fall out when the breechblock is removed or installed. This can also happen if the coating on the pin is removed.



This is more likely to happen to the M119A2 and the M119A3 with the new breechblock design.

A new straight headed pin design is in the works. To prevent this from happening to your howitzer, keep your eye on it during disassembly and maintenance of the breechblock and make sure the pin is installed prior to installing the breechblock.

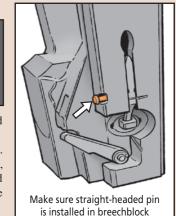





Dear Half-Mast,

We know it's not good to lay the M242 gun's receiver on the floor or stand the barrel against a wall. That's how parts like the 14-pin connector get damaged. We've seen some Bradley units who have stands to set their M242s on. Is there an NSN for the stand?


SGT D.T.

Plans help you build stand for storing M242


Dear Sergeant,

There is no NSN, but TACOM has provided plans to PS for making the stand. If you would like a copy, email: usarmy.redstone.logsa.mbx.psmag@mail.mil

Half-Mast

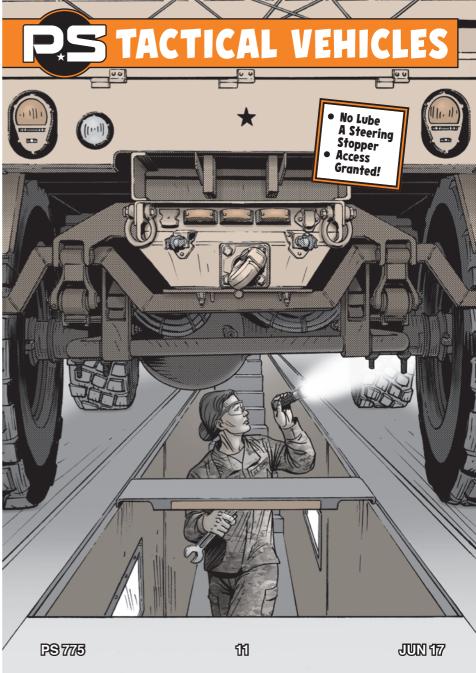

HMMWV... NO LUBE A STEERING STOPPER

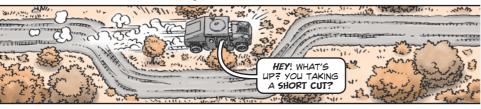





THE PRINCIPLE
BEHIND YOUR
HMMW/S
STEERING
WHEEL IS
PRETTY SIMPLE:
YOU JUST
TURN IT IN THE
DIRECTION YOU
WANT TO GO.

BUT THINGS GET A LOT MORE COMPLICATED WHEN YOU FORGET TO LUBE THE INTERMEDIATE STEERING SHAFT! WITHOUT LUBE, THE STEERING SHAFT BINDS. THOSE SIMPLE LEFT AND RIGHT TURNS AREN'T SO EASY ANYMORE. THAT'S REAL BAD NEWS IF YOU'RE TOOLING DOWN THE ROAD AND ENTERING A CURVE!


KEEP THE STEERING WHEEL TURNING DURING NORMAL OPERATIONS BY LUBING THE INTERMEDIATE STEERING SHAFT, CLEAN EACH OF THE FITTINGS TO REMOVE DIRT AND OLD GREASE, LUBE WITH GAA ANNUALLY OR EVERY 3,000 MILES, WHICHEVER COMES FIRST, WHEN DRIVING CONDITIONS ARE SEVERE OR ABNORMAL, SERVICE THE LUBE FITTINGS EVERY 1,000 MILES.

MAKE SURE YOU PUMP IN ENOUGH GREASE TO PURGE AIR AND PIRT. IF ONE OR MORE OF THE FITTINGS WON'T PURGE, TRY SHAKING AND ROTATING THE SHAFT TO LOOSEN THE OLD GREASE. IF THE PROBLEM PERSISTS, TAP THE SHAFT WITH A RUBBER MALLET.

DON'T FORGET THAT THE SHAFT HAS THREE LUBE POINTS!


THE ONE ON THE SHAFT AND THE ONE ON THE TOP KNUCKLE OF THE U-JOINT USUALLY GET LUBED. THE ONE THAT GETS MISSED IS ON THE LOWER KNUCKLE, WHICH IS BLOCKED FROM ABOVE BY THE ALTERNATOR.

GET UNDER THE TRUCK AND HAVE SOMEONE TURN THE STEERING WHEEL UNTIL YOU CAN GET A GOOD SHOT AT THE FITTING.

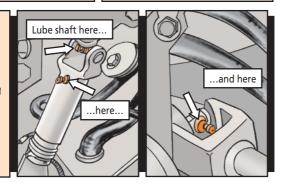

M1235A4/A5 MaxxPro Dash ISS w/OGPK/CROWS...


ACCESS GRANTED!

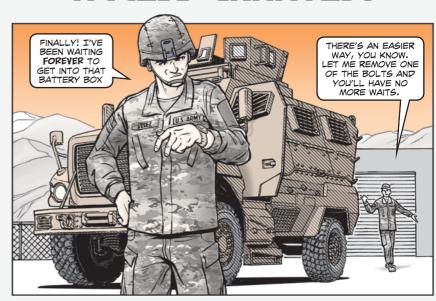

Operators, some procedures in TM 9-2355-441-10 require access to your MaxxPro Dash ISS MRAP's battery box or fuel cover. Unfortunately, that means calling in a mechanic. You can't get in by yourself because of the hardware that has to be removed. That can be a pain for you and your mechanic.

So instead, get him to remove the top-rear bolt on both the battery box and fuel tank access cover. That's all it takes!


With the bolt removed, you'll be able to get at the battery box and fuel cover without help. And removing the bolts won't affect the durability and survivability of the MaxxPro vehicles.

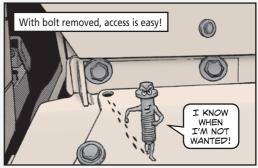

For more details, check out TACOM MA #16-041:

https://tulsa.tacom.army.mil/Maintenance/message.cfm?id=MA16-041.html


M1272 Buffalo...

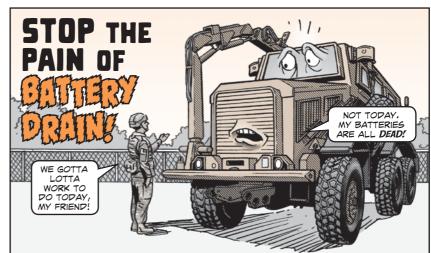

IT'S NO SECRET THAT THE **ELECTRONICS** INSIDE THE M1272 BUFFALO HAVE A BAD HABIT OF RUNNING THE VEHICLE'S BATTERIES DRY. AND THOSE BATTERIES CAN LOSE THEIR CHARGE IN JUST




NO JUICE MEANS A SLAVE START OR YOU'LL BE GOING NOWHERE AT ALL. SO AFTER THE DAY'S RUN, USE THE TWO BATTERY DISCONNECT SWITCHES TO PROTECT THOSE BATTERIES.

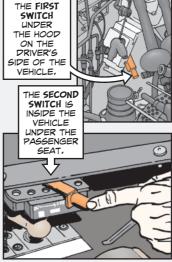

15


WHILE YOU'RE AT IT, MAKE SURE THE #1 AND #2 POWER DISTRIBUTION MODULE (PDM) SWITCHES ARE TURNED TO THE OFF POSITION. THAT TURNS OFF ALL POWER TO COMMO GEAR

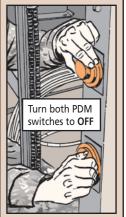

YOU'LL FIND THE PDM SWITCHES INSIDE THE BACK OF THE VEHICLE.


PS 775

JUN 17

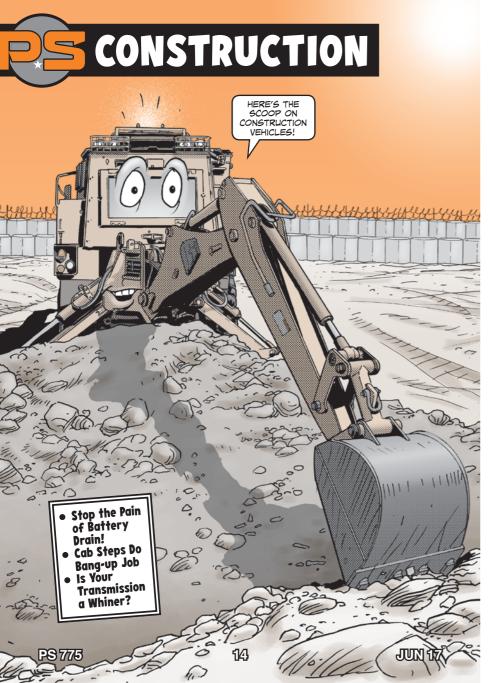

120M Road Grader...

CAB STEPS DO BARGUD JOB

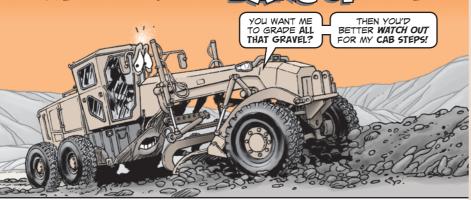

THE STEP ASSEMBLY THAT HANGS BELOW THE CAB ON YOUR 12OM ROAD GRADER DOES A BANG-UP JOB... ...AT LEAST UNTIL IT GETS SNAGGED BY THE END OF THE BLADE.

THAT CAN HAPPEN WHENEVER THE BLADE IS RAISED, SET TO CUT A V-DITCH, OR TURNED FOR GRAVEL. THEN IT'S THE STEPS THAT GET BANGED UP!

THE RUBBER VERTICAL RAILS HANDLE THE ABUSE PRETTY WELL. BUT THE METAL STEPS CAN GET CRUSHED. SO WHEN POSITIONING THE BLADE, MAKE SURE THE STEPS AREN'T IN THE WAY.




Circle Drive Hydraulic Hose

ANOTHER AREA TO WATCH OUT FOR IS THE HYDRAULIC HOSE THAT MOUNTS INTO THE CIRCLE PRIVE'S BLADE SIDE-SHIFT CYLINDER.

THIS EXPOSED HOSE GETS KNOCKED AROUND PRETTY REGULARLY. THAT CAN RESULT IN OIL FLOW RESTRICTION OR A HYDRAULIC LEAK.

THING IS, YOU PROBABLY WON'T NOTICE IT UNLESS YOU CROUCH DOWN TO LOOK!

SO DURING YOUR MORNING INSPECTIONS EYEBALL THE HOSE FOR ANY DENTS OR LEAKS. IF YOU FIND ANY PROBLEMS, TELL YOUR MECHANIC ABOUT IT NOW!

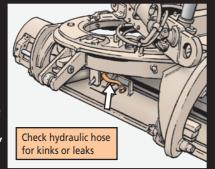

D7R II Tractor...

IS YOUR TRANSMISSION A WHINER?




Operators, your D7R II dozer just pushed a load of dirt out of the way and you're heading back for more. But when you slam the gears into reverse to move out, you hear something loud and whining. Uh-oh! Is that the transmission?

Every time you shift in or out of reverse without reducing engine speed, you put unnecessary strain on the dozer's transmission. That's a sure way to shorten its life.


Want to know how to change that tune?


Here's how:

- While your dozer's still on the move, press down on the decelerator pedal. That slows engine speed without changing the governor control setting.
- 2. Stop your dozer dead in its tracks.
- 3. Shift in or out of reverse.
- **4.** Ease up on the decelerator pedal. That speeds up the engine and returns it to the governor control setting.

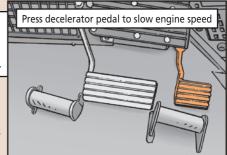


PS 775 16 JUN 17 PS 775 17 JUN 17

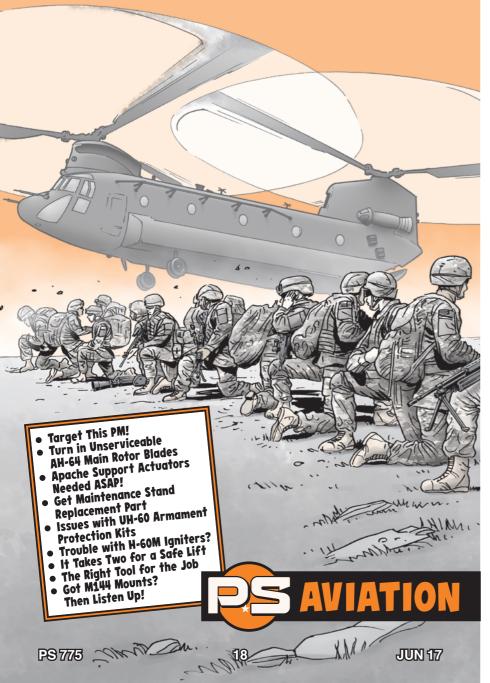

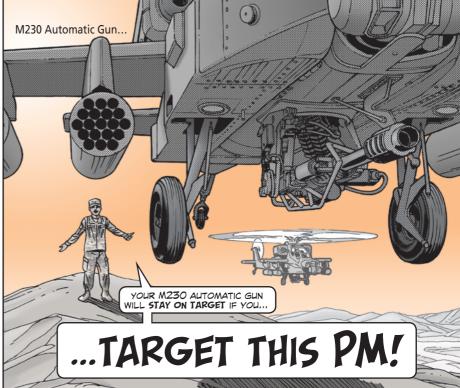

Use GMD (grease, molybdenum disulfide)...unless you're in the desert. Some units have gotten the idea TW-25B is a much better lubricant that GMD. Not true! GMD holds up much better to the intense heat the M230 produces. But if you're shooting in the desert, it's a different story. TW-25B attracts much less sand than GMD.


Units can't decide on their own, though, to use TW-25B. TACOM must approve. Your TACOM LAR can help get authorization.

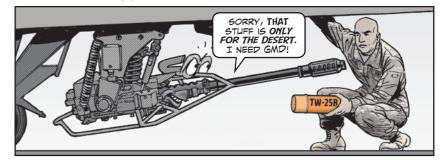




Anytime you change lubes, you must *completely* clean off the old lube with isopropyl alcohol. Lubes don't mix. They cause each other to break down.

Whatever you use, take it to the field. You don't want the lube sitting on the shelf when your M230 needs it miles away.

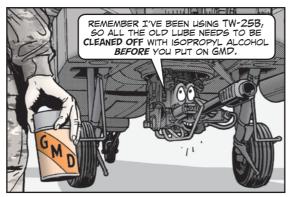


Load like this. AUTOMATIC mode should always be used. It's much safer for your fingers and for the loading system itself than using MANUAL. If you must use MANUAL because AUTOMATIC isn't working, make sure to turn off the sideloader/magazine controller (S/MC) when you're done. Otherwise, the ammo handling system can be damaged.

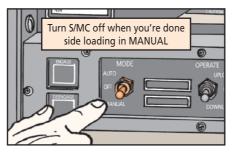




Check the recoil adapter viewing hole for the correct amount of damping fluid. Just look for the indicator groove in the viewing hole. If it's there, you're good. If not, you need to add or drain fluid per the Apache IETM to prevent damage. Remember to change the O-ring when you add or drain fluid. That prevents leaks. Be aware drastic temperature changes change the damper fluid level. So the level may be good one day, but low or high the next

even though the M230 hasn't been fired.

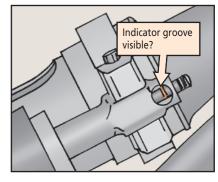

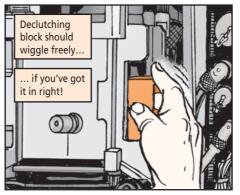

Careful with the sideloader declutching block. Put it in wrong and the guide for the ammo tray gets bent. The guide should fit in the groove of the block and the block should be flush against the front plate. If the block can be wiggled freely, you've got it right. If the block won't move, make sure the guide is positioned in the block groove.



Turn in Unserviceable AH-64 Main Rotor Blades

If you have unserviceable Apache main rotor blades around the hangar, turn them in to: Plant 7015/RIC B52, Corpus Christi Army Depot, TX 78419-5255

The blades are experiencing high wash out caused by "soft" trailing edges. Check for these NSNs and turn in all P/N configurations:


1615-01-332-0702 1615-01-553-2853 1615-01-310-4978 1615-01-415-6397 1615-01-330-5098

Apache Support Actuators Needed ASAP!

Mechanics, check your area and your shops for unserviceable Apache support actuator assemblies, NSN 1615-01-527-3781 (PN 7-311525062-19).

Turn them in for repair to: Plant 7001/RIC BR4 Red River Army Depot TX 75507


PS 775 20 JUN 17 PS 775 21 JUN 17

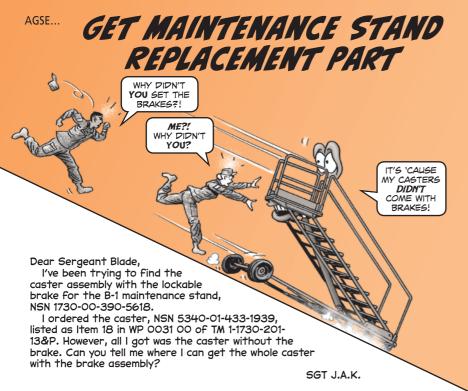




WE SURE CAN, SERGEANT! GET THE CASTER WITH THE BRAKE/LOCK ASSEMBLY WITH NON 5340-01-453-0784 (PN A-A-5516-8PBL).

THE AGSE
HEADSHED IS IN
THE PROCESS OF
UPDATING THE
TM WITH THIS
NEW NON AND TO
ADD THE ARMY
AS A USER.

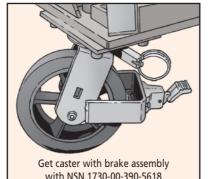

TO KEEP CURRENT ON AGSE INFORMATION, OR TO AGK QUESTIONS ABOUT MAINTENANCE OR PARTS, GO TO THE JTDI WEBSITE: https://www.jtdi.mil

AFTER YOU LOG IN WITH YOUR CAC, CLICK THE MY SITES TAB.
THEN CLICK THE AGSE TAB ON THE DROPPOWN MENU.

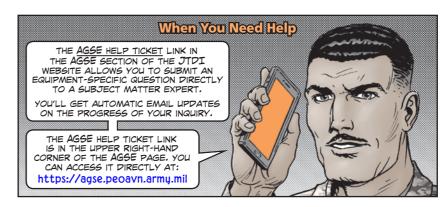



Issues with UH-60 Armament Protection Kits

If you currently have an Enhanced Ballistic Armament Protection System (EBAPS) kit installed on a UH-60 aircraft and you are flying under AWR 1752, contact the Utility Helicopter headshed. These kits need to have a part number change applied *now!* Contact Joe Ingram (256) 313-2483, email: joseph.a.ingram4.civ@mail.mil or Kristi Newby, (256) 313-1148, email: kristi.m.newby2.ctr@mail.mil They will instruct you on the part number change by email.

Trouble with H-60M Igniters?

Mechanics, are you having difficulty separating the T700-GE-701D engine igniter from the electrical lead? If so, the AMCOM headshed wants you to send an email to report the engine serial number and amount of time the igniter has been installed. Send your email to Michael Weist at: michael.e.weist2.ctr@mail.mil

PS 7775 28 JUN 17

UH-60 MEDEVAC...

IT TAKES TWO FOR A SAFE LIFT





MECHANICS, SOME OF YOU CAN DEAD LIFT SOME HEAVY WEIGHTS IN THE GYM. BUT JUST BECAUSE YOU'RE ARMY STRONG DOESN'T MEAN YOU SHOULD SINGLE-HANDEDLY REMOVE THE 100-POUND STAR SAFIRE II FORWARD LOOKING INFRARED (FLIR) SENSOR.

NO MATTER HOW STRONG YOU ARE, YOU NEED TO GRAB A BUDDY WHEN REMOVING THE FLIR FROM YOUR HELICOPTER.

IT TAKES TWO PEOPLE TO REMOVE AND INSTALL IT SAFELY.

AND YOU **MUST** USE THE CARRYING HANDLES FROM THE SHIPPING CONTAINER.

PLACE A CUSHION ON THE FLOOR TO REST THE FLIR
ON AFTER REMOVAL. THEN PLACE IT IN ITS SHIPPING
CONTAINER FOR SECURITY AND PROTECTION.

JUST BE CAREFUL

NOT TO BUMP IT

AGAINST THE
GROUND OR

ANYTHING ELSE

WHILE REMOVING IT.

EVEN A
SMALL BUMP
MEANS
DELICATE INTERNAL
PARTS GET

DAMAGED.

IF THAT HAPPENS,
REPAIR OPTIONS ARE
LIMITED. IN MOST
CASES, A DAMAGED
FLIR MEANS TURNING
IT INTO SUPPLY AND
ORDERING A NEW ONE.
SO AVOID MISHAPS
AND...

...HANDLE THE FLIR WITH CARE! THE HH-60**M** FLIR IS IN WP 1373 OF TM 1-1520-280-23&P IN IETM EM 0284 (APR 16).

THE HH-GOL FLIR IS IN WP 1578 OF TM 1-1520-237-23&P IN IETM EM 0013 (APR 16).

IF YOU HAVE **QUESTIONS** OR **NEED HELP**, CONTACT PEO AVIATION'S DAVID CREECH AT (256) 842-1176 OR EMAIL: david.w.creech4.ctr@mail.mil

UH-60A/L, HH-60M...

The Right Tool For the Job




Mechanics, good preventive maintenance includes using the right tool to remove pro-seal from Black Hawk parts. Using the wrong tool can damage your aircraft and its components.

When removing components on the hydraulic deck of your aircraft, your first step is to scrape off the old pro-seal. That can be a real exercise in muscle power.

The knee jerk reaction is to grab a sturdy screwdriver or some other tool to start chipping away at the hardened pro-seal. Bad idea! Using screwdrivers to scrape off proseal leads to punching holes in sheet metal and damaged parts. So don't do it!

The correct way to remove pro-seal is with a non-metallic scraper. The correct way isn't always the easiest, but it's up to you to do maintenance right.

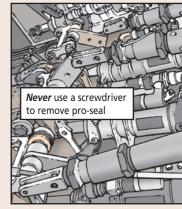

HERE ARE A COUPLE OF IDEAS ON HOW TO MAKE A SCRAPER:

- Cut a piece of ¹/₄-in thick plexiglass to 1-in wide x 3-in long.
 Grind one end of the plexiglass to a 45-degree angle.
- Another way is to use an old tail rotor outboard retention plate teflon shim and cut it the same way.

PS 775 24 JUN 17 PS 775 25 JUN 17




M144 Ammo Can Pin Replaced

MWO 9-1005-262-23-1 ADDED A 400-ROUND AMMO CAN.

BUT UNFORTUNATELY, THE PIN THAT HELD THE AMMO CAN IN PLACE **DIDN'T** STAY IN PLACE, WHICH LET THE CAN COME OFF THE MOUNT ENTIRELY. SO THE PIN WAS **REPLACED** WITH ONE THAT **DOES** THE JOB.

NOT ALL THE OLD PINS HAVE BEEN REPLACED. CHECK ALL YOUR M144S FOR THE NEW PIN, WHICH HAS GROOVES.

IF YOU FIND A PIN WITH NO GROOVES, IT NEEDS TO BE REPLACED. CONTACT YOUR TACOM LAR TO GET THE CORRECT PIN.

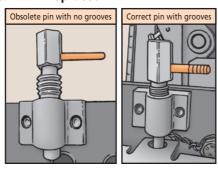

M144 E-clip


THE CRAPLE TO THE PINTLE ON M144 MOUNTS USES AN E-CLIP AND PIN FOR INSTALLATION.


THIS IS BEING CHANGED TO:

- a cotter pin,
- NSN 5315-00-234-1863

 a flat washer,
- a flat washer, NSN 5310-01-396-1761
- a retaining pin (forward lower), NSN 5315-01-562-1875

UNITS CAN CONTINUE TO USE THE E-CLIP UNTIL IT WEARS OUT OR ORDER THE NEW PARTS NOW.

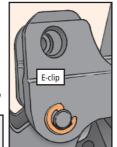


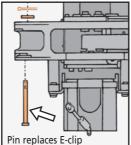

QUESTIONS? CONTACT YOUR LOCAL TACOM LAR OR CALL (586) 282-1369 OR EMAIL: iames.c.mathews16.civ@mail.mil

PS 775 26 JUN 17

AS TIMES CHANGE, SO DOES PS!

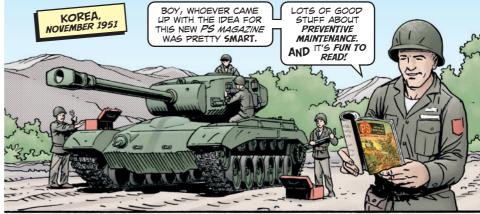










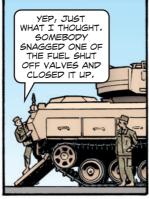










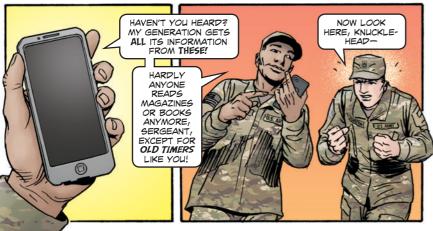


















PS 775 29 JUN 17

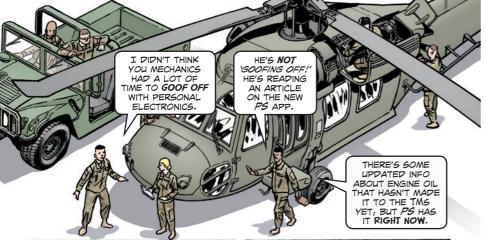










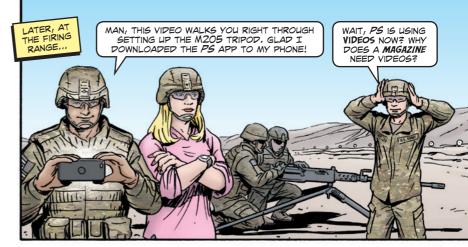



WHILE PS
ARTICLES
CONTAIN A
LOT OF GOOD
INFORMATION,
SOMETIMES
A VIDEO CAN
EXPLAIN THINGS
BETTER.

AS WE TAKE
ADVANTAGE
OF NEW
TECHNOLOGY,
PS IS BECOMING
A LOT MORE
THAN JUST A
MAGAZINE.





PS 775 30 JUN 17

SPECIALIST WILSON
IS ON THE PS
WEBSITE READING
ABOUT HOW TO GET
TURN-IN CREDIT IN
GC95-ARMY.


PS HAS A LOT OF ARTICLES ABOUT SUPPLY AND PLENTY OF OTHER TOPICS. YOU'LL FIND THEM ON THE WEBSITE AND THEY'RE EASY TO FIND WITH THE SEARCH ENGINE.









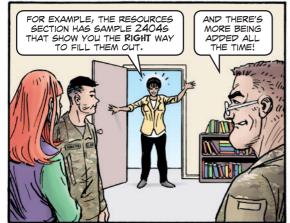















HOW ABOUT YOU,
PRIVATE JOHNSON?
YOU STILL THINK
PS IS JUST A
'COMIC BOOK'?



NO WAY, MASTER SERGEANT. I'VE REALLY BEEN MISSING OUT. AND TO THINK PS MAGAZINE IS AS CLOSE AS MY SMARTPHONE!





EVEN THOUGH THIS IS THE LAST PRINTED ISSUE OF PS, HERE'S HOW YOU CAN BE SURE YOU PON'T MISS OUT ON ALL THE GREAT INFORMATION WE HAVE TO OFFER...



READ PS ONLINE: https://www.logsa.army.mil/psmag/pshome.cfm

GET THE PS APP ON YOUR PHONE OR TABLET, SEE MAINTENANCE VIDEOS AND CATCH THE LATEST HOT TOPIC RELEASES, DOWNLOAD IT FREE FROM THE APP STORES:

ANDROID

https://play.google.com/store/apps/details?id=mil.logsa.army.psmag&hl=en

APPLE

https://itunes.apple.com/us/app/p.s.magazine/id1082232259?mt=8







JUMP ON THESE JAVELIN TIPS



Do PMCS at least monthly. At too many units, CLUs sit for long periods with no attention. Then when it's time to go to the field, the CLUs are in no condition to fire.

It does not take that long to PMCS a CLU and it's worth every minute. Check especially for missing lens caps and damage to the bumpers. And if you find any problems, report them on a DA Form 5988. That's the only way they'll get fixed.

But remember, if the M98A1 CLU hasn't been operated for more than 30 days, you must follow the start-up procedure in WP 0001 and 0017 in TM 9-1425-688-10. Otherwise, you can damage the cathode ray tube (CRT), which is an expensive repair. If you have the M98A2, you don't need to worry about this. Its operations check is in WP 0015 and its PMCS in WP 0017 of TM 9-1425-1687-10.

I WISH YOU HAP
GIVEN ME A LITTLE
EXERCISE THESE
LAST FEW MONTHS,
NOW I PON'T FEEL
SO HOT.


Keep track of the services. We saw in PS 758 that a 360-day comprehensive service is being added to the TM. But until that happens, you can't track the services through SAMS. We solved that problem by writing the date on a DA Form 80 and sticking it on the CLU. That way you can tell at a glance when the next service is due.

THANKS
FOR GETTING
MY ANNUAL
SERVICES PONE!
BUT PO ME A
FAVOR AND PUT
A DA FORM 80
STICKER ON ME
WITH THE DATE
SO WE KNOW
WHEN I'M DUE
AGAIN.




Use the storage case! Units often stick the CLU on shelves and items like the crossbar, handles, battery box and night sight cover end up broken. The storage case is specifically designed to prevent that.

CW3 Michael Denny Ft Bliss, TX

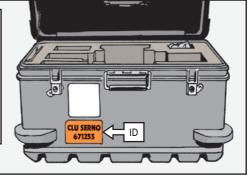

EXCELLENT POINTS, CHIEF! REMEMBER EACH CLU IS PAIRED WITH A SPECIFIC STORAGE CASE AND THEY SHARE THE SAME ID NUMBER.

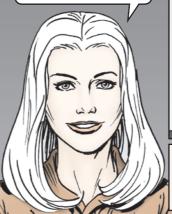

BY KEEPING THE CLU IN ITS STORAGE CASE, YOU NOT ONLY **PROTECT** IT, BUT MAKE IT **EASIER TO TRACK!**




IF ANY OF YOUR JAVELIN CASES ARE DAMAGED OR MISSING OR YOU HAVE ANY CLU PROBLEMS, CONTACT THE JAVELIN INTEGRATED TECHNICAL OPERATIONS CENTER FOR A REPLACEMENT.

CALL (888) 528-4862 OR EMAIL:

jvitoc@jvjavelin.com

PS 775 36 JUN 17

MWO PREVENTS TURRET CRACKING

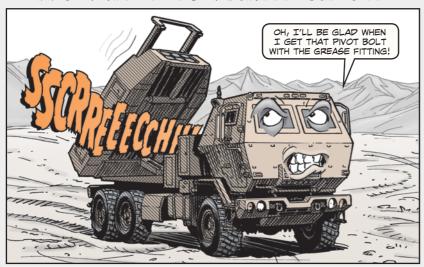


Because the M142 HIMARS pivot joint can't be lubricated, the metal-to-metal contact is causing the turret to crack.

To prevent that, MWO 9-1055-1646-50-9 is replacing the clevis pivot bolt with a modified bolt that has a grease fitting.

The MWO is being done by a depot team, which is travelling to all HIMARS units. All HIMARS should be modified by March 2018.


Once the MWO is done, crews should lube the pivot bolt monthly with GAA (MIL-G-10924C).

Pump grease into the pivot bolt fitting until it begins to seep from the clevis joints. Then wipe off any grease from the clevis joints to prevent dirt buildup.

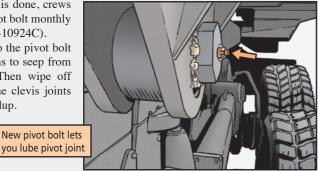

Questions? Contact Bernard Battle at DSN 788-6063, (256) 842-6063, or email: bernard.j.battle2.civ@mail.mil

Patriot Missile Don't Spare Tire PMCS

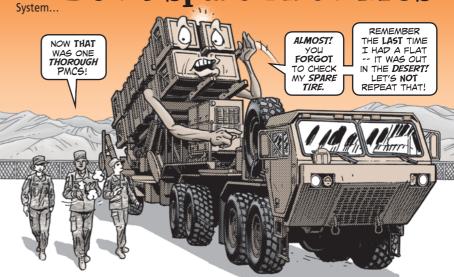


There aren't many things worse than being in the middle of nowhere with a flat tire only to discover that the spare is flat, too.

The trucks and trailers for the Patriot Missile System go over much rougher roads than your POV, which makes the risk of a flat tire much more likely.

But unfortunately, most Patriot units pay no more attention to their spare tires than we do on our own vehicles. They risk literally being stuck in the middle of nowhere with no spare.

The solution, of course, is to check spare tire pressure during PMCS. Every Patriot truck and trailer has a spare and every spare's pressure should be checked at least monthly. It takes only minutes.

Remember, if a tire stays flat too long it can be ruined, so your monthly check could save the cost of a new tire and wheel assembly.

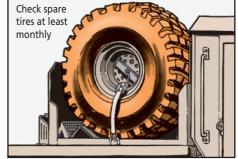

Don't forget the Patriot's M860A1 trailer now uses the 445/65R22.5 Goodyear® or Michelin® radial tire. A new tire and wheel assembly comes with NSN 2530-01-506-7315. It should be inflated to 100-105 psi when cold.

PS 775 38 JUN 17 PS 775 39 JUN 17

Small Arms...

USE ONLY *New* DUMMY ROUNDS!



To prevent mixups in the field, the Army is fielding new small arms dummy rounds that can be easily identified as dummy rounds. These new rounds are the only dummy rounds authorized for training, weapon cycling, or any other situation requiring inert rounds.

There is one temporary exception: the A159 7.62mm linked dummy rounds. They

can continue to be used until new 7.62 linked rounds are available. The new dummy rounds are completely nickel plated. The 9mm

dummy round has two holes drilled in the cartridge case, while the 5.56mm, 7.62mm and .50-cal rounds have fluted cartridge cases to make them easy to ID in the dark.

Here are the new dummy rounds and their NSNs:

Caliber	Model	DODIC	NSN 1305-
9mm	M917A1	AB45	01-568-5691
5.56mm	M199A1	AB46	01-568-5686
7.62mm	M63A1	AB47	01-568-5689
.50-cal	M2A1	AB48	01-568-5696
.50-cal linked	M2A1	AB36	01-557-7022

New dummy rounds are nickel-plated with fluted cartridge cases

The NSN for the M242 machine gun dummy round remains NSN 1305-01-356-0187 and the NSN for the M230 machine gun dummy round remains 1305-01-268-7273.

Using the old dummy rounds requires approval by HQDA G3. Turn in all old dummy rounds except the A159 to your ammo

supply points (ASP) and request the new dummy rounds.

Installations should coordinate turn-in of old dummy rounds and requests for new dummy rounds with the JMC Munitions Sustainment Planning Division. The POC is Lorin Daniels, DSN 793-4387, (309) 782-4387, or email:

lorin.j.daniels.civ@mail.mil

Direct all technical questions to Robert Weissman, DSN 880-3056, (973) 724-3056, or email: robert.j.weissman.civ@army.mil


For more information, see ammunition information notice (AIN) 022-15. Go to:

https://mhp.redstone.army.mil

Log in with your email certificate and request access.

M249, M240-Series Machine Guns...

Barrel Needs BFA

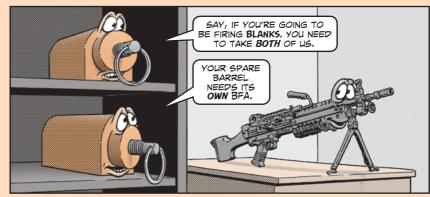

Dear Editor,

PS has made the point over and over again that when units take the M249 and M240 machine guns to the field they need to take the spare barrels and use them. Firing and firing through the same barrel heats it up so much the barrel warps and is ruined.

But units also need to be reminded that if they're going to be firing blanks, they need blank firing attachments (BFA) for both barrels. If you try to remove a BFA that's very hot when you switch barrels, its screw can twist in half. Then it's bye-bye BFA.

Michael Kelley Ft McCoy, W



PS 775 **JUN 17** 41




NO GLP EVERY

IF YOU REMEMBER NOTHING ELSE, YOU'LL PO A GREAT SERVICE TO YOUR MK 19. CLP IS NOT STRONG ENOUGH TO WITH-STAND THE INTENSE HEAT THE MK 19 PRODUCES. IT ACTUALLY **GUMS UP**THE GUN'S MOVING PARTS
AND **DEGRADES** THE
GREASE THAT'S IN THE
MK 19'S BEARINGS.

THE BEST LUBE
CHOICE IS LEAT. IT
CAN BE ORDERED IN
AN 8-OZ TUBE, NEN
9150-00-4949-0323,
OR 1-LB CAN, NEN
9150-01-109-7793.

GMD IS THE OTHER

GMD IS THE OTHER CHOICE, NGN 9150-00-935-4018 GETS A 14-0Z TUBE AND NGN 9150-00-223-4004 A 6 1/2-LB CAN.

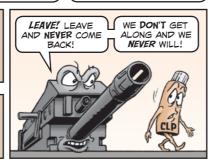

BUT REMEMBER: YOU CAN'T MIX LSAT AND GMD.
THAT WEAKENS THEM, IF YOU NEED TO SWITCH LUBES,
COMPLETELY WIPE OFF THE OLD LUBE FIRST.

AND TAKE THE LUBES
TO THE FIELD, YOU'LL
NEED THEM!


WHEN YOU'RE LUBING, GIVE EXTRA ATTENTION TO:


• the feed pawls

• the cocking lever rails

- the pivot post on the primary drive lever
- the bolt assembly

IF JUST ONE OF THESE DOESN'T GET ENOUGH LUBE, YOU'LL HAVE FIRING PROBLEMS!

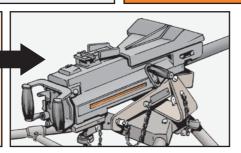

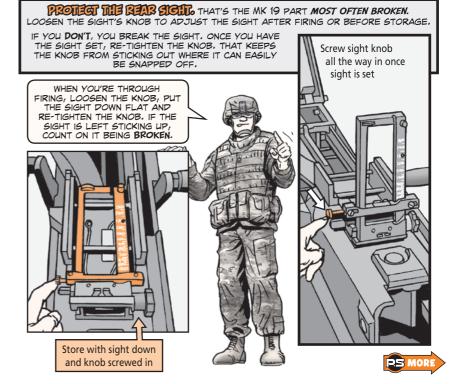

PS 775 43 JUN 17

LEAVE THE BOLT'S TIMING SCREW ALONE

MESSING WITH IT MESSES UP THE MK 19'S FIRING.

KEEP THE BOLT, SEAR AND OGIVE PLUNGER OUT OF DRY CLEANING SOLVENT.

THEY HAVE SEALED COMPONENTS. THE SOLVENT RUINS THEIR BUSHINGS, JUST TWO MINUTES IN SOLVENT MEANS A FOUR-HOUR JOB FOR YOUR REPAIRMAN.

GUIDE THE COVER INTO PLACE

IF YOU SLAM THE COVER DOWN OR EVEN LET IT FALL, THE COVER'S LATCH CAN BE BROKEN.


CHECK FOR BROKEN COCKING CAMS AND LOOSE BOLT PAWLS DURING PMCS.

IF YOU PULL THE COCKING LEVER BACK AND THERE'S NO CLICK, YOU PROBABLY HAVE A BROKEN COCKING CAM. IF YOU CAN MOVE THE PAWL ON THE FACE OF THE BOLT, THE SCREW THAT'S SUPPOSED TO HOLD THE PAWL IN PLACE IS LOOSE. BOTH PROBLEMS SHOULD BE REPORTED TO YOUR REPAIRMAN.

AFTER YOU REMOVE THE BACKPLATE. PUT THE SELECTOR ON SAFE.

THAT PREVENTS THE BACKPLATE FROM COMING APART.

PS 775

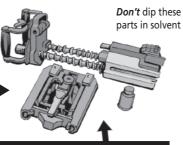


IT'S OK, THOUGH, TO USE A RAG OR BRUSH DIPPED IN SOLVENT TO CLEAN THESE PARTS.

If lever doesn't click when you push it back, cocking cam may be broken





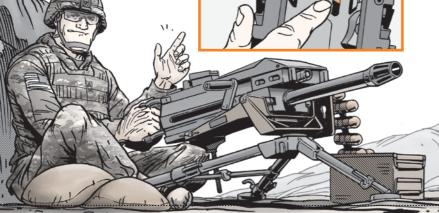


NSN for M240B Trigger Pin Spring?



Dear Half-Mast,
We have searched
TM 9-1005-313-23&P
For the M240B trigger
spring pin NSN with no
luck. Did we miss it?

THE NGN IS THERE
BUT IT'S IN THE WRONG
CALLOUT, SERGEANT
SEE ITEM 13 IN
WP 0031 00-1. THE PIN
COMES WITH NGN 531501-033-3888.

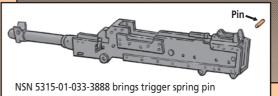



NSNs for SATS Safety Straps?

Dear Half-Mast,

Is there an NSN for the ramp safety straps on the standard automotive tool set (SATS)?

Mr. N.M.

Dear Sir.

There are two different ramp straps available. The strap that goes from the container to the first pole comes with NSN 5340-01-629-9561.

The strap that goes from pole to pole comes with

The strap that goes from pole to pole comes with NSN 5340-01-629-9583.

Half-Mast





M59A Field Range...

COLD SOUP FOR DINNER?



WHEN IT'S TIME
TO HEAT UP A BIG
POT OF SOUP,
YOU MAY RUN INTO
PROBLEMS FITTING
THE 10-GAL
STOCK POT INTO
THE M59A FIELD
RANGE, NGN 736001-479-0312.



THE RANGE'S TOP STOP BRACKETS GET IN THE WAY OF THE POT WHEN IT'S USED WITH THE STOCK POT CRAPLE.

HOT LIQUID CAN SPILL OUT. CAUSING SEVERE SCALDS IF YOU'RE NOT WEARING THE MANDATORY PROTECTIVE GLOVES, NSN 8415-01-511-4637.

YOU COULD LIFT THE POT OVER THE TOP STOP BRACKETS, BUT THAT'S AWKWARD AT BEST. AND IT'S BAD FOR YOUR BACK!

TO FIX THE PROBLEM, TACOM-NATICK HAS OK'D REMOVING THE TOP STOP BRACKETS.

NOTE THAT THIS IS AN **OPTIONAL**MODIFICATION FOR THE **M59A**,
NOT A REQUIRED FIX.

YOU'LL NEED THE FOLLOWING TOOLS TO REMOVE THE BRACKETS:

Tool	PN	CAGE		
Sander/grinder	KTC S0275	00NS2		
Abrasive cut-off blade	KTC S0141	00NS2		
Abrasive wheel, 90 grit	KTC S0726	00NS2		


ALSO, THE LEGACY M59, NSN 7360-00-702-1719, AND A FEW NEWER M59AS DON'T HAVE THIS PROBLEM.




PS 775 47 JUN 17

FOLLOW THESE INSTRUCTIONS TO AVOID LEAVING ANY JAGGED **EDGES THAT MIGHT** CAUSE INJURY:


1. Open the range's cavity door and locate the top portion of the burner stop brackets.

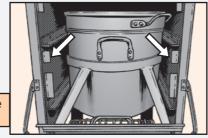

2. Remove the top portion only of each stop bracket by cutting the tab along the dotted line with the grinder. You can also use a plasma cutter to cut off the brackets. **Don't** remove the lower portion of the brackets. They're needed to keep a modern burner unit (MBU) or other burner from being placed inside the range.

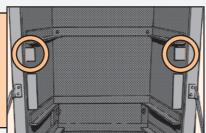

3. Use the abrasive wheel to abrade the cut area of each bracket to remove any sharp burrs.

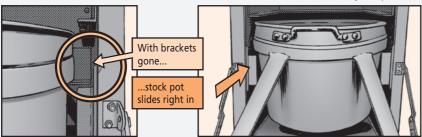

Where to Find M59As

THIS FIELD FEEDING EQUIPMENT MAY HAVE AN M59A AS A COMPONENT OF END ITEM (COEI) ...

ltem	NSN	
Army kitchen module (assault)	7360-01-558-3100	
Enhanced tray ration heating system	4520-01-564-3917	
Kitchen, company level field feeding (KCLFF)	7360-01-200-9828	
Kitchen, company level field feeding-enhanced (KCLFF-E)	7360-01-374-1980	

Item	NSN 7360-	
Mobile kitchen trailer (MKT)	00-138-7782 01-092-0470 01-155-6020 01-214-1176 01-246-4646 01-313-2238 01-417-4635 01-483-8617	Į,

EQUIPMENT CODES DECODED!

EVER WONDER WHAT MILITARY EQUIPMENT CODES LIKE PRC, RT OR VRC MEAN?

YOU'VE PROBABLY SEEN THESE KINDS OF CODES EVERYWHERE-ON DATA PLATES, SHIPPING CONTAINERS, IN TMS AND OFFICIAL CORRESPONDENCE AND COMMUNICATIONS.

WELL, DOD NOMENCLATURE IS A SPECIAL KIND OF LANGUAGE. IT IDENTIFIES EQUIPMENT AT THE SYSTEM, SUBSYSTEM, SET, GROUP OR UNIT LEVEL. IT TELLS YOU WHAT KIND OF EQUIPMENT IT IS, WHERE IT'S USED AND WHAT IT'S USED FOR.

Table of Equipment Indicators

Major purpose

AN / PRG - 119 F

Sequential indicator

Modification

Installation

(1st letter)

- A. Piloted aircraft
- B. Underwater mobile. submarine
- C. Cryptographic
- D. Pilotless carrier
- Fixed around
- G. General ground use
- **Amphibious**
- M. Mobile (ground)
- Portable
- Water
- Transportable (ground)
- General utility (multiple)
- Vehicular (ground)
- W. Water surface and
- underwater combined Z. Piloted-pilotless airborne vehicles combined

IT'S EASIER TO UNDERSTAND THE CODES ONCE YOU HAVE THE DECODER AT HAND THAT'S MIL-STD-196F JOINT ELECTRONICS TYPE DESIGNATION AUTOMATED SYSTEM

Type of Equipment

(2nd letter)

- A. Invisible light, heat radiation
- B. COMSEC
- Carrier-Flectronic wave/signal
- Radiac
- Laser
- Telegraph/teletype
- Interphone and public access
- Electromechanical or inertial wire covered
- Telemetering
- Countermeasures
- M. Meteorological
- N. Sound in air
- Radar
- O. Sonar/underwater sound Radio
- Special or combination
- Telephone (wire)
- Visual/visible light
- W. Armament (peculiar to armament not otherwise covered)
- X. Facsimile to television
- Y. Data processing or computer
- Communications

Purpose (3rd letter)

- A. Auxiliary assembly
- B. Bombina
- C. Communications receiving/transmitting
- Direction finder. reconnaissance and surveillance
- E. Ejection and/or release
- G. Fire control or search light directing
- H. Recording/reproducing
- Computing
- M. Maintenance/test assemblies
- N. Navigational aids
- Special or combination
- Receiving/passive detecting
- S. Detecting/range and bearing, search
- Transmitting
- W. Automatic flight or remote control
- Identification and recognition
- Y. Surveillance (search. detect, and multiple target tracking) and control
- 7. Secure

FOR EXAMPLE, THERE'S A SINCGARS RADIO CALLED AN/PRC-119F. AFTER THE AN (SYSTEM/SET PREFIX), EACH LETTER STANDS FOR A CHARACTERISTIC OF THE EQUIPMENT. THE NUMBER 119 IS SIMPLY THE EQUIPMENT SEQUENTIAL INDICATOR AND THE LETTER F INDICATES A MODIFICATION, SO THE AN/PRC-119F IS A P (PORTABLE) R (RADIO) C (COMMUNICATIONS) DEVICE.



PS 775 48 **JUN 17**

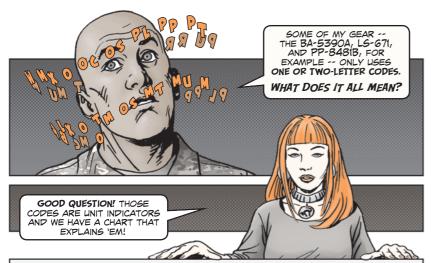


	Table of Unit Indicators					
Un	Unit indicators Family name Examples of use					
AB	Support for antennas	Antenna mounts, mast bases, mast sections, towers, etc.				
AM	Amplifiers	Power, audio, interphone, radio frequency, video, electronic control, etc.				
AS	Antenna, simple and complex	Arrays, parabolic type, masthead whip or telescopic loop, dipole, reflector, etc.				
BA	Battery, primary type	Batteries, battery packs, etc.				
BB	Battery, secondary type	Batteries, battery packs, etc.				
BZ	Alarm units	All types				
С	Controls	Control box, remote tuning control, etc.				
CA	CA Computers auxiliary units Input/output peripheral, etc.					
CC	Cable assemblies, RF	RF cables, waveguides, transmission lines, etc., with terminals				
CD	Controlling devices	Complex controlling devices				
CM	Comparators	Compares two or more input signals				
CN	Compensators	Electrical and/or mechanical compensating, regulating or attenuating apparatus				
СР	Computers	A mechanical and/or electronic mathematical calculating device				
CU	Couplers	Impedance coupling devices, directional couplers, etc.				
CV	Converters (electronic)	Electronic apparatus for changing the phase frequency, or from one medium to another				
CW	Radomes	Radomes				
CX	Cable assemblies, non RF	Non RF cables with terminals, test leads, also composite cables or RF and non RF conductors				
CY	Cases and cabinets	Rigid and semirigid structure for enclosing or carrying equipment				

	Table of Unit Indicators					
Un	Unit indicators Family name Examples of use					
D	Dispensers	Chaff				
DA	Loads, dummy	RF and non RF test loads				
DI	Data transmission	Devices for authentication and transferring recorded or generated data over transmitter/receiver links.				
DT	Detecting heads	Magnetic, capacitive or optical pickup devices, search coil, hydrophones, etc.				
DU	Display unit/monitors	All types that are external devices for computers, test sets, etc.				
F	Filter units	Electronic types, back-pass, low pass, band suppression, noise telephone, filter networks; excludes non-repairable types				
FO	Fiber optics	Electrical, electronic and communication				
FR	Frequency measuring device	Frequency meters, tuned cavity				
G	Generators, power	Electrical power generators without prime movers (see PU)				
GO	Goniometers	Instruments for measuring angles for determination of energy transferred from moving to fixed coil (directional) antennas, etc.				
Н	Head, hand and chest sets	Includes earphone				
HD	Environmental apparatus	Heating, cooling, dehumidifying, pressure, vacuum devices, etc.				
ID	Indicator units, non-cathode ray tube	Calibrated dials and meters, indicating lights, etc. (see also IP)				
IM	Intensity measuring devices	Includes SWR gear, field intensity noise meters, slotted lines, etc.				
IP	Indicator units, cathode ray tube	Azimuth, elevation, panoramic, etc.				
J	Interface units	Interconnecting and junction units, etc. Do not use if a more specific indicator applies.				
KG	Key generator	Units generating a pseudorandom sequence of cryptovariables using algorithms				
KY	Keying devices	Mechanical, electrical and electronic key coders, interrupters, etc.				
LA	Laser	Communication, electrical, etc.				
LS	Loudspeakers	Separately housed loudspeakers and intercommunication stations				
М	Microphones	Radio, telephone, throat, hand, etc.				
MD	Modulators, demodulators, discriminators	Devices for varying amplitude, frequency or phase				
ME	Meters	Multimeter, vacuum tube voltmeters, power meters, volt-ohm-millimeters, etc.				
MK	Miscellaneous kits	Maintenance, modification, etc.				
ML	Meteorological devices	Miscellaneous meteorological equipment, etc.				

PS 775 51 JUN 17

Table of Unit Indicators						
Uni	Unit indicators Family name Examples of use					
МО	Multipurpose	Units that perform two or more functions				
MT	Mountings	Mountings, racks, frames, stands, etc.				
MU	Memory units	Memory units				
MW	Microwave	Communication, etc.				
MX	Miscellaneous	Equipment not otherwise classified. Do not use if a better indicator is available.				
0	Oscillators	Master frequency, blocking, multi-vibrators, etc. (for test oscillators, see SG)				
OC	Oceanographic devices	Bathythermograph, etc.				
OS	Oscilloscope, test	Test oscilloscope for general test purposes (see IP)				
PL	Plug-in units	Plug-in units not otherwise classified				
PP	Power supplies	Non-rotating machine types, such as vibrator pack rectifier, thermoelectric, etc.				
PT	Mapping and plotting units	Electronic types only				
PU	Power equipment	Rotating power equipment, motor-generators, dynamotors, etc.				
R	Receivers	Receivers, all types except telephone				
RB	Robotics	Electric-mechanical, etc.				
RD	Recorder-reproducers	Sound, graphic, tape, wire, film, disc, facsimile, magnetic, mechanical, etc.				
RE	Relay assembly units	Electrical, electronic, etc.				
RL	Reeling machines	Mechanism for dispensing and rewinding antenna or field wire cable, etc.				
RO	Recorders	Sound, graphic, tape, wire, film disc, facsimile, magnetic, mechanical, tape, and card punch, etc.				
RP	Reproducers	Sound, graphic, tape, wire, film, disc, facsimile, magnetic, mechanical, punched tape and card readers, etc.				
RR	Reflectors	Target, confusion, etc., except antenna reflectors (see AS)				
RT	Receiver and transmitter	Radio and radar transceiver, composites of transmitter and receiver, etc.				
S	Shelter	Electrical equipment, etc.				
SA	Switching units	Manual, impact, motor driven, pressure operated, electronic, etc.				
SB	Switchboard	Telephone, fire control, power distribution, etc.				
SG	Generator, signal	Test oscillators, noise generators, etc. (see O)				
SM	Simulators	Flight, aircraft, target, signal, etc.				
SN	Synchronizers	Equipment to coordinate two or more functions				
SS	Special purpose	Devices performing unique functions				
SU	Optical units	Electro-optical units, such as night vision, scope, sights, auto-collimator, viewers, trackers, alignment equipment				

	Table of Unit Indicators				
Uni	it indicators Family na	Examples of use			
SY	Speech, secure	Devices that secure voice transmission/receiving equipment			
Т	Transmitters	Transmitters, all types except telephone			
TA	Telephone apparatus	Miscellaneous telephone equipment			
ТВ	Towed body	Hydrodynamic enclosures used to house transducers, hydrophones, and other electronic equipment			
TD	Timing devices	Mechanical and electronic timing devices, range devices, multiplexers, electronic gates, etc.			
TF	Transformers	When used as separate units			
TG	Positioning devices	Tilt and/or train assemblies			
TH	Telegraph apparatus	Miscellaneous telegraph items			
TN	Tuning units	Receiver, transmitter, antenna, tuning units, etc.			
TR	Transducers				
TS	Test units	Test and measuring equipment not otherwise classified. Do not use if more specific indicators apply.			
TT	Teletypewriter and facsimile apparatus	Teletype, tape, facsimile miscellaneous equipment			
TU	Television	Special types			
TW	Tape units	Preprogrammed with operational test and checkout data			
V	Vehicles	Carts, dollies, vans peculiar to electronic equipment			
ZM	Impedance measuring devices	Used for measuring Q, C, L, R, or PF, etc.			


WANT TO LEARN MORE?
GET THE FULL SCOOP IN MIL-STD-196F AT:
http://quicksearch.dla.mil/
qsDocDetails.aspx?ident_number=35607







PS 775 52 JUN 17

PS LOGISTICS

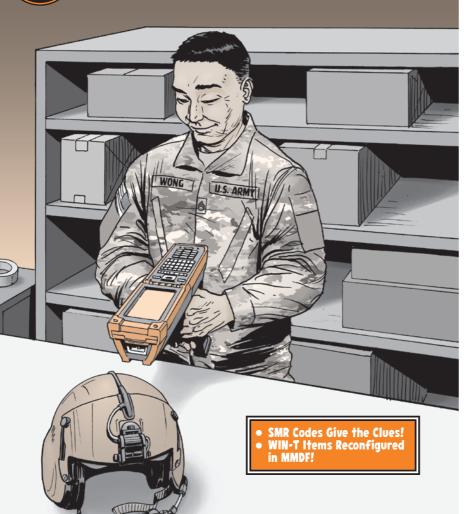

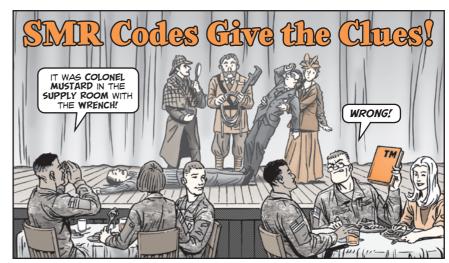



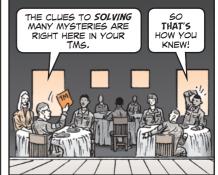



HAVING TROUBLE FINDING
OR GETTING A PART? YOU
MAY BE SURPRISED TO FIND
THE REASON WHY IS RIGHT
AT YOUR FINGERTIPS!

THAT'S BECAUSE MANY TMS GIVE CLUES ABOUT ITEMS IN THE FORM OF SOURCE, MAINTENANCE AND RECOVERABILITY (SMR) CODES. SMR CODES
ARE EXPLAINED
IN AR 700-82,
JOINT
REGULATION
GOVERNING
THE USE AND
APPLICATION OF
UNIFORM SOURCE
MAINTEMANCE AND
RECOVERABILITY
CODES (AUG 14).

NOW'S THE PERFECT TIME TO TAKE AN SMR CODE REFRESHER COURSE, PS STYLE. NEW SOLDIERS AND OLD HANDS WHO FEEL A LITTLE RUSTY ON THE TOPIC CAN BENEFIT FROM THIS HELPFUL INFO.



PS 77/5 54 JUN 17 PS 775 55 JUN 17

BREAKING DOWN SMR CODES

YOU CAN FIND SMR CODES AT THE BEGINNING OF EVERY REPAIR PARTS AND SPECIAL TOOLS LIST (RPSTL) SECTION IN TMS ENDING WITH A "P" OR "&P." THE CODE FORMAT HAS FOUR PARTS:

- a two-position source code
- a two-position maintenance code
- a recoverability code
 - an optional service-specific code

SOURCE

THE FIRST AND SECOND POSITIONS OF THE CODE REFER TO AN ITEM'S SOURCE.

THE FIRST POSITION GIVES A GENERAL CATEGORY
AND IS ALWAYS ONE OF FIVE LETTERS... P. K. M. A OR X:

- P PROCURED. ITEMS WITH A P ARE CENTRALLY PROCURED.
- ullet K Kit. Sometimes items in Kits don't have NSNs. In cases where an item is part of a kit and is also an item outside the Kit, the f P series source code is used.
- M MANUFACTURED. THE ITEM IS MANUFACTURED OR FABRICATED AT SPECIFIED MAINTENANCE ACTIVITIES.
- A ASSEMBLED. THE ITEM IS ASSEMBLED AT A MAINTENANCE ACTIVITY.
- X NOT STOCKED. (SEE "KEY TO X CODES" FOR DESCRIPTIONS).

KEY TO X CODES

- X SERIES SOURCE COPES ARE ITEMS FOR WHICH LITTLE OR NO PEMAND IS EXPECTED.
- XA ITEM IS NOT PROCURED OR STOCKED BECAUSE THIS ITEM REQUIRES YOU TO REPLACE THE NEXT HIGHER ASSEMBLY.
- XB A SUPPORT ITEM NOT EXPECTED TO FAIL AND NOT STOCKED. IN SOME CASES, IT MAY BE AVAILABLE THROUGH SALVAGE. IF NOT AVAILABLE OR AUTHORIZED THROUGH SALVAGE, ORDER THE ITEM THROUGH NORMAL SUPPLY CHANNELS USING ITS CAGE CODE AND PART NUMBER.
- XC AN INSTALLATION DRAWING, DIAGRAM, INSTRUCTION SHEET OR FIELD SERVICE DRAWING IDENTIFIED BY A MANUFACTURER'S PART NUMBER.
- XD A SUPPORT ITEM THAT IS NOT EXPECTED TO FAIL BUT CANNOT BE REPLACED BY SALVAGE/ CANNIBALIZATION, LOCAL PURCHASE OR REQUISITION THIS ITEM THROUGH NORMAL SUPPLY CHANNELS USING ITS CAGE CODE AND PART NUMBER.

2ND POSITION - PACLZA

THE **SECOND** POSITION APPS SPECIFIC INFO TO THE GENERAL SOURCE COPE OF THE FIRST POSITION.

FOR EXAMPLE:

- PA IS A PROCURED AND STOCKED ITEM.
- $\operatorname{\mathbf{PH}}$ is a stocked and procured item but contains hazmat, so it has special reporting requirements.
- PZ MEANS AN ITEM WAS ONCE PROCURED BUT IS NOW TERMINAL OR OBSOLETE WITH NO REPLACEMENT, SO YOU CAN'T ORDER IT.

MAINTENANCE

THE THIRD AND FOURTH POSITIONS DEFINE WHAT LEVEL OF MAINTENANCE IS ASSIGNED TO AN ITEM.

3RD POSITION - PACLZA

THE
LOWEST LEVEL
AUTHORIZED TO
REMOVE, REPLACE
OR USE THE ITEM
IS DEFINED BY
THE FOLLOWING
CODE:

- C OPERATOR/CREW
- O ORGANIZATION/UNIT
- F INSTALLATION/FIELD/INTERMEDIATE LEVEL OR AVIATION SUPPORT BATTALION (ASB)
- H INSTALLATION/FIELD/SUSTAINMENT
- K CONTRACTOR FACILITY
- L SPECIALIZED REPAIR ACTIVITY OR THEATER AVIATION SUSTAINMENT MAINTENANCE GROUP (TASMG)
- D DEPOT

4TH POSITION - PACLZA

THE FOURTH POSITION USES THE SAME CODES AS POSITION THREE, BUT TELLS YOU THE LOWEST MAINTENANCE LEVEL THAT HAS THE CAPABILITY AND THE RESOURCES TO PERFORM A COMPLETE REPAIR.

A "COMPLETE REPAIR" MEANS THE ITEM WILL RETURN TO SERVICE WHEN REPAIRED.

A "COMPLETE REPAIR ACTION" MEANS THAT ALL MAINTENANCE (REMOVE, REPLACE, REPAIR, ASSEMBLE AND TEST) FOR THE ITEM MUST BE PERFORMED AT THAT LEVEL.

IN ARMY PROGRAMS, CODE L MEANS A SPECIALIZED REPAIR ACTIVITY OR TASMG.
CODE O IS FIELD LEVEL MAINTENANCE PERFORMED AT
AVIATION MAINTENANCE COMPANIES.

CODE **Z**, MEANING **NON-REPAIRABLE**, MAY BE USED IN THE **FOURTH OR FIFTH POSITIONS**. **Z-CODED PARTS NEED TO BE REPLACED** WHEN THEY GO **BAD**.

5TH POSITION - PACLZA

RECOVERABILITY IS DEFINED BY THE FIFTH POSITION.

THE CODE TELLS YOU WHAT MAINTENANCE LEVEL CAN DETERMINE WHEN AN ITEM IS UNSERVICEABLE OR TOO EXPENSIVE TO REPAIR, AND WHO CAN CONDEMN OR DISPOSE OF THE ITEM. THE FIFTH POSITION GENERALLY USES THE SAME CODES AS THE THIRD AND FOURTH POSITIONS.

6TH POSITION - PACLZA

A SIXTH POSITION IS OPTIONAL AND SERVICE-SPECIFIC.

FOR EXAMPLE: CODE A IN THE ARMY'S SIXTH POSITION MEANS THE ITEM IS NON-REPAIRABLE BUT REQUIRES SPECIAL HANDLING.

CODE Z IS A NON-REPAIRABLE ITEM WHERE NO REPAIR IS AUTHORIZED.

COPE **G** APPLIES TO AMMUNITION, EXPLOSIVES OR PANGEROUS ARTICLES THAT MUST BE PEMILITARIZED BEFORE THEY GO TO DLA DISPOSITION SERVICES.

FOR MORE INFORMATION AND A COMPLETE LIST OF CODES AND DEFINITIONS,

GET AR 700-82. TYPE "AR 700-82" IN THE SEARCH BLOCK AT:

http://armupubs.armu.mil/ProductMaps/PubForm/ActiveSearchFull.asp;



PS 775 57 JUN 17

Keep This SMR Chart Handy!

SOURCE			MAINTENANCE		RECOVERABILIT		Υ			
1ST	2ND POSITION				3RD POSITION	-	4TH POSITION		5TH POSITION	
 		Means of Acquiring Support			USE:		REPAIR:		DISPOSITION:	
	Α	ITEM: Stocked		_N	Naintenance level and/	l _{Mi}	aintenance level and/	Ι,	When unserviceable or	
	В	ITEM: Stocked, Insurance		1	r maintenance activity	1	maintenance activity		ineconomically	
	С	ITEM: Stocked, Deteriorative			uthorized to remove/	with capability to perform		repairable, condemn		
	D	ITEM: Support, Initial Issue or Outfitting and Stocked Only for			replace the item.		complete repair actions.		or dispose.	
D		Additional Initial Issue			<u>'</u>					
	Ε	EQUIPMENT: Support, Initial Issue or Outfitting and	F	C	Operator/Crew	С	Operator/Crew	С	Operator/Crew	s
(Due 2000 al)	-	Stocked Only for Additional Initial Issue EQUIPMENT: Support, Non-Stocked, Centrally Procured on Demand	l 1		2		2			E
(Procured)	г	ITEM: Stocked for Sustained Support, Uneconomical to	E	0	Organization / Unit	0	Organization / Unit	0	Organization / Unit	Ŕ
	G	Produce at Later Time	_							Ÿ
		ITEM: Stocked, Contains hazardous materials, Hazardous Materials	L	F	Field level	F	Field level	F	Field level	i
	Н	Information System/Material Safety Data Sheet reporting required	D							C
	R	Terminal or Obsolete, Replaced								E
	Z	Terminal or Obsolete, Not Replaced		G	Ashore and afloat	G	Ashore and afloat	G	Ashore and afloat	_
	D	ITEM: Depot on hand and Maintenance Kits		G	Asnore and affoat	G	Asnore and affoat	G	Ashore and alloat	0
(Kit)	F	ITEM: Maintenance Kit, Place at O,F,H,L								P
	В	ITEM: in Both Depot Repair & Maintenance Kits	S		Below		Below		Below	Ţ
	0	Manufacture (MFG) or fabricate (FAB) at Unit Level		H depot sustainment	Н	depot sustainment	Н	depot sustainment	1	
	F	MFG OR FAB at intermediate/field level			level		level		level	O N
IVI	H	MFG OR FAB at intermediate/sustainment level								IN
(Manufactured)	G	MFG OR FAB at Specialized Repair Activity (SRA) MFG OR FAB Both Afloat and Ashore (Navy Only)	T A	T A	Contractor Facility	K	Contractor Facility	K	Contractor Facility	c
(ivialiulactuleu)	ח	MFG OR FAB Both Alloat and Ashore (Navy Only) MFG OR FAB at Depot Maintenance Level								ŏ
	0	ITEM: Assembled at Unit	1							Ď
	F	ITEM: Assembled at intermediate/field level	N		Specialized		Specialized		Not Authorized	E
$oldsymbol{\Lambda}$	H	ITEM: Assembled at intermediate/sustainment level	M	L	Repair Activity	L	Repair Activity	L	Below Depot Level	S
	L	ITEM: Assembled at Specialized Repair Activity (SRA)			Repuli Activity		Repuli Activity		Join Dopot Lote:	
(Assembled)	G	ITEM: Assembled Afloat and Ashore (Navy Only)	E						Field level as a facility	
(,	D	ITEM: Assembled at Depot Maintenance Level	N	D	Depot	D	Depot	D	Field level repairable: Condemn or	
	Α	ITEM: Requisition Next Higher Assembly	Т		Берог		Берог		Dispose at Depot	
	В	ITEM: Not Procured or Stocked. Available thru salvage.							- 10p 202 207 - 2p 27	
		Requisition by CAGE/Part Number.			D (0)	_		_		
(1) (2) (1)	С	Manufacturer/installation Drawing, Diagram, Instruction		Z	Reference Only	Z	Non-repairable	Z	Non-repairable	
(Not Stocked)		Sheet. Identify by Cage/Part Number.								
	D	Not Stocked. Obtain via Local Purchase.							Nonrepairable, needs	
					В	Recondition	Α	special handling	END	
									openaa.ia.ii.g	

PS 775 58 JUN 17

Maintenance Management...

Reconfigured in MMDF!



NOT LONG AGO, WARFIGHTER INFORMATION NETWORK-TACTICAL (WIN-T) ITEMS WERE LISTED AS SINGLE STAND-ALONE SYSTEMS IN THE MAINTENANCE MASTER DATA FILE (MMDF). AS MANY UNITS NOTED, THAT MEANT...







PROBLEM SOLVED!

PM WIN-T AND THE LOGISTICS SUPPORT ACTIVITY (LOGSA) HAVE RECONFIGURED MMDF TO PROVIDE A MORE ACCURATE EQUIPMENT PROFILE. ALL WIN-T SYSTEMS AND SUBSYSTEMS ARE NOW CORRECTLY CONFIGURED IN MMDF'S IN-DEPTH SUBSYSTEM TABLE (TABLE B-2).

THAT ALLOWS UNITS TO BUILD IN-DEPTH MAINTENANCE DATA FILES THAT REFLECT A TRUE SYSTEM-OF-SYSTEMS.

IN ADDITION, UNITS CAN:

- accurately account for equipment-on-hand (EOH)
- better report operational readiness
- manage supply transactions
 analyze maintenance trends
- have historical documentation for the complete system-ofsystems.

Connie's POST SCRIPTS

ARMY EQUIPMENT DRAWDOWN GUIDANCE

Preparation for the Army's 980K reorganization starts with property accountability at the unit level. The Army's fragmentary order (FRAGO) 1 to EXORD 008-116 gives detailed steps and deadlines for the transfer and disposition of excess equipment, maintenance condition standards and more. You'll need your CAC to download it. Go to:

https://www.milsuite.mil/book/docs/DOC-327639

M26 Decon MWO Rescinded

The M26 decon's MWO 3-4230-238-23, Decontamination Apparatus IUID Upgrade, Without Replacement, was rescinded on 20 Jan 17. The rescinded MWO didn't affect the form, fit or function of the M26. Decon units will no longer receive notifications on the MWO through the Modification Management Information System (MMIS).

MI Tank Ice Cleats Revisited

The artwork on Page 9 of PS 771 (Feb 17) shows an M1-series tank with ice cleats installed on every track shoe. However, when done properly, the cleats should only be installed on every fifth shoe for a total of 32 cleats on each track assembly. See WP 0290 in TM 9-2350-264-10-2 (Sep 11, w/Ch 3, Jan 15) and WP 0353 in TM 9-2350-388-10-3 (Apr 16) for installation instructions.

Clean AOAP Data for GCSS-Army

Units, a data cleansing of Army Oil Analysis Program (AOAP)-enrolled equipment, including end item serial numbers, component serial numbers and unit identification codes, *must* be done before GCSS-Army integration. This will help minimize data mismatches. For instructions, get ALARACT 040/2016 at:

https://www.us.army.mil/ suite/page/550282

Questions? Call the AOAP hotline at DSN 897-0862, (256) 955-0862, or email: usarmy.redstone.logsa.mbx.aoap@ mail.mil

SHIPPING HAZMAT?

If you're getting ready for a deployment or training mission and you have questions about shipping hazardous materials (HAZMAT), contact the Logistics Support Activity's Packaging, Storage and Containerization Center (LOGSA PSCC).


PSCC is the Army's HAZMAT focal point and can walk you through the preparation of equipment or materials, explain how to separate HAZMAT and help you properly complete your shipping papers. Don't let technical errors keep you from taking HAZMAT on your next mission. Call LOGSA PSCC at DSN 795-7257, (570) 615-7257 or email them at:

usarmy.tyad.usamc.mbx.pt@mail.mil

DISTRIBUTION: To be distributed in accordance with the initial distribution number (IDN) 340312, requirements for the TB 43-PS-Series.

Would You Stake Your Life on the Condition of Your Equipment?

PS 775 60 JUN 17

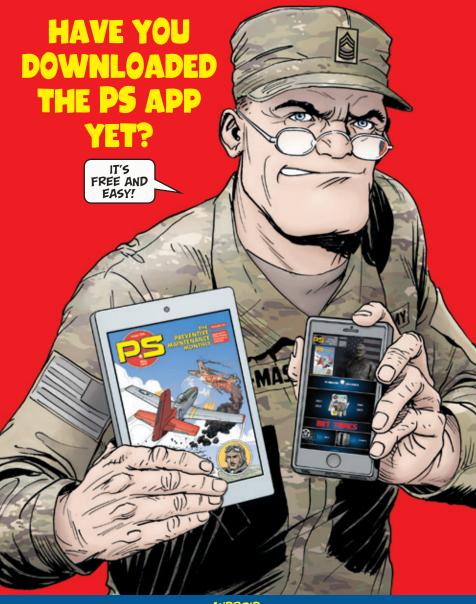

ANDROID

https://play.google.com/store/apps/details?id=mil.logsa.army.psmag&hl=en

APPLE

https://itunes.apple.com/us/app/p.s.magazine/id1082232259?mt=8