

SO DON'T PUT OFF PM UNTIL LATER. LATER COULD BE TOO LATE!



TB 43-P5-671, The Preventive Maintenance Monthly, is an official publication of the Department of the Army, providing information for all soldiers assigned to combat and combat support units and all soldiers with unit maintenance and supply duties. All information published has been reviewed and approved by the agency responsible for the equipment, publication or policy discussed. Application of the information is optional with the user. Masculine pronouns may refer to both genders.

#### ISSUE 671 OCTOBER 2008

COMBAT VEHICLES	2	AVIATION	35
	2.2		25.27
M1-Series Tank V-Pack Cleaning M2A2/M3A2 Bradley Night Viewer Cable	2-3 4-5	FOD Prevention M261 Rocket Launcher Current Check	35-37 38
M2A3/M3A3 Bradley DVE Caution	4-5 4-5	CH-47D/F Special Tools TB	38
M113-Series FOV Exhaust Manifold Rust	6-7	All Aircraft Tie-Down Chains	39
M113A3 Steer Lock Conversion	7	All Alledate the Down Chairs	33
DA Form 2408-4 Gun Card Tips	8	COMMUNICATIONS	40
M992A2 Ammo Carrier Doors	9	COMMONICATIONS	40
S WILLEY ED VELLEY ES	40	3-KW TQG TM Corrections	40-41
WHEELED VEHICLES	10	100-, 200-KW TQG Reprogramming	42-43
		5-, 10-KW TQG Cap Lanyard Caution	44
MRAP TMs, Service Intervals, Parts	10-13	AN/TRC-190 LOS RESET Turn-Ins	45
MRAP Training Materials, Tech Manuals	14		
M939-Series 5-Ton Truck Spare Tire Bracket	15	CBRN	46
HMMWV Windshield Washer Hose	16		
HMMWV Windshield Wipers	17	JACKS Website	46
_		M56 Smoke Generator Half Door Latching	47
SMALL ARMS	18	M12A1 Decon PM	48-49
M16 Rifle, M4 Carbine, M249 MG ACOG	18-19	COMBAT ENGINEERING	50
M2 Machine Gun Side Rail Adapter	20	COMBAT ENGINEERING	50
M240B Machine Gun Rail Kit Torque	21	Compact Skid Loader TMs, NSNs	50-51
M2 Machine Gun LBS Mandrel	21	130G Grader Centershift Pin Lube	52
M249 Machine Gun Barrels, Buttstocks	22	1300 Grader Certersmit in Educ	
M249, M240B Machine Gun Weapon Cradle	22		
Small Arms Cleaning Supplies	23	TOOLS	53
Grenade Safety Tips	24 25		
Mortar Interface Computer PM Small Arms Rumors	25 27-34	Mobile Parts Manufacturing	53
Siliali Altilis Rulliots	27-34	Hammer, Hacksaw Use	54-57
MISSILES	26	COLDIED CUIDDODE	го.
<b>*</b>		SOLDIER SUPPORT	58
Javelin Missile System CLU Case	26	Website for Fastener Benchstock	58-59
MLRS Ratchet Straps Use	26	Website for Fasterier benchstock	20-29

You are invited to send PS your ideas for improving maintenance procedures, questions on maintenance and supply problems and questions or comments on material published in PS.

Just write to:

MSG Half-Mast

PS, the Preventive Maintenance Monthly USAMC LOGSA (AMXLS-AM)

5307 Sparkman Circle Redstone Arsenal, AL 35898

Or email to:

logsa.psmag@conus.army.mil or half.mast@us.army.mil

Internet address:

https://www.logsa.army.mil/psmag/pshome.html

By order of the Secretary of the Army:

GEORGE W. CASEY, JR.

General, United States Army Chief of Staff


Official:

Joyce E. Morins

Administrative Assistant to the Secretary of the Army


0821103

PS, The Preventive Maintenance Monthly (ISSN 0475-2953) is published monthly by the Department of the Army, Redstone Arsenal, AL 35898-5000. Periodical postage is paid at the Huntsville, AL post office and at additional mailing offices. Postmaster: Send address changes to PS, The Preventive Maintenance Monthly, USAMC LOGSA (AMXLS-AM), 5307 Sparkman Circle, Redstone Arsenal, AL 35898-5000.

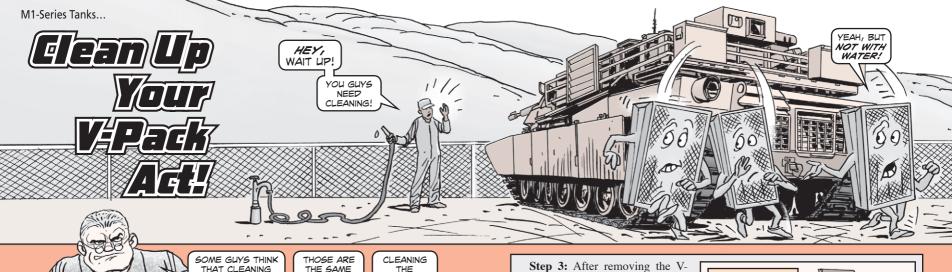

**Step 1:** Check to see if your tank is equipped with the pulse jet system (PJS). Tanks with PJS will have a control unit next to the hydraulic reservoir inside the center hull compartment.

V-packs on PJS-equipped tanks are self-cleaning, but you can clean them under emergency conditions. Follow the procedures in your -10-2 TMs.

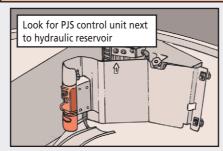

GUYS THAT

END UP WITH

DAMAGED

V-PACKS.

**Step 2:** Before removing non-PJS V-packs, use a black marker or grease pencil to label the filters L, C, and R (left center, and right). That's so you can put the V-packs back into the same slots after you clean them.

THE V-PACK AIR

ILTERS ON THEIR

TANKS MEANS



If the V-packs are put back in a different sequence, they won't line up with the original compression points on the air plenum box seal. That leaves gaps in the seal and allows dirt to get to the engine.

V-PACKS

RIGHT IS A

FIVE-STEP

PROCESS...


**Step 3:** After removing the V-packs, get your mechanic to clean the filters with the V-pack cleaning wand.

If a mechanic or the wand isn't available, clean the V-packs yourself by shaking them **gently.** Hand-brush dirt and dust from the elements. Never hit the V-packs against anything harder than the heel of your palm. Dented V-packs won't seal out dirt.

Notify your maintenance folks as soon as possible that you had to clean the packs and why. They'll give 'em a proper cleaning and determine if they're serviceable.

**Step 4:** Wipe any loose dirt or sand out of the bottom of the air plenum box. If you let enough stuff collect there, the V-packs won't seat properly.

**Step 5:** Reinstall the V-packs. Remember to put them back in the same order that you removed them.

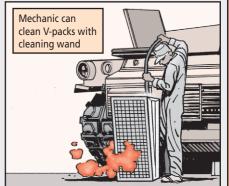



PS 671 3 OCT 08




The 1W300 cable, NSN 6150-01-426-2197, for the driver's night viewer, may have a few droops and dangles. That puts it in harm's way when you close the driver's hatch. A crushed cable can cause a fire if it shorts out.

The cable has been redesigned to add an in-line fuse to help with the fire threat, but it's up to you mechanics to keep the cable safe from the hatch. That means rerouting the cable on the hatch to stop the dangling. Here's how:

/. MAKE SURE THE CABLE IS ROUTED OUT OF THE BRADLEY BETWEEN THE TWO SECTIONS OF THE HATCH OPENING CUSHIONING PAPS LOCATED OVER THE DRIVER'S LEFT SHOULDER.

Cable goes between cushioning pads...

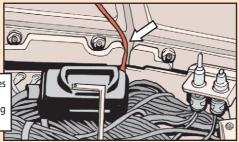

M2A3/M3A3 Bradleys...



When climbing on top of your Bradley, you're looking for a step up wherever you can find it.

At first glance, the driver's vision enhancer (DVE) looks like just what you need. It's handy for getting on top of the turret and it's armored. No problem, right?

Wrong!

The DVE is **not** a step. Sure, it's armored, but enough jolts and blows from those size 12 boots can still mess up the camera. So find another way up top and keep your feet off the DVE.


2. ROUTE THE CABLE ALONG
THE PRIVER'S HATCH, KEEPING
THE FIRST TWO LOOP CLAMPS
PARALLEL WITH THE BOTTOM OF
THE HATCH.

...along bottom of hatch.




3. CONTINUE ROUTING THE CABLE ALONG THE PERISCOPES USING LOOP CLAMPS AND THE PERISCOPES' MOUNTING SCREWS.


> ...and up along periscopes

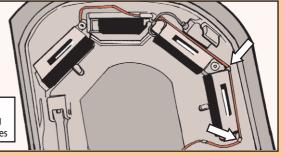

4. AT THE COILEP END, PISCONNECT THE CABLE CLAMP FROM THE HATCH, RE-POSITION THE CLAMP ABOUT 1 INCH UP FROM THE COILEP SECTION OF THE CABLE AND REATTACH IT USING THE OLD HARDWARE IN THIS SEQUENCE:

- Loop clamp, NSN 5340-00-954-6014, holding the 1W300 cable
- Sleeve spacer, NSN 5365-01-172-7899
- Flat washer, NSN 5310-00-080-6004
- Eye bracket, NSN 3040-01-106-7812
- Flat washer, NSN 5310-00-080-6004
  Self-locking bolt, NSN 5306-01-110-7884

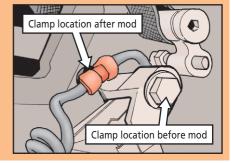

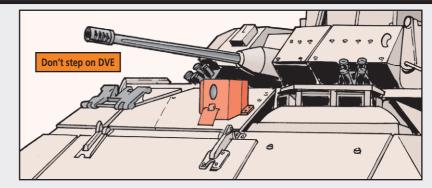

PS 671 4 OCT 08




#### Dear Half-Mast,

We've come across a problem with the exhaust manifolds on several of our M113A3 personnel carriers.

The heat shield covers seem to be retaining water from rain and vehicle washing. Over time, that water causes rust, resulting in holes and even splits in the exhaust manifold.

The heat shield covers don't fare too well either. They're rotting from the inside out.

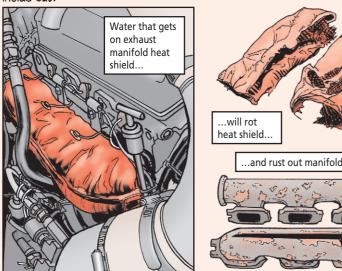

Is there something we can do to prevent this damage?

SSG R.M.G.

Dear Sergeant R.M.G.,

You bet!

As you mentioned, there are two main culprits that lead to heat shield cover and manifold damage—rain and wash water.

Rain is pretty easy to beat. First, you'll need to make sure you keep the engine grille buttoned up with grille cover, NSN 5120-01-105-0779 (green) or NSN 2510-01-496-9646 (tan). Just don't forget to remove the grille cover before operating the vehicle.

Second, cover the vehicle with a tarp whenever it's stored outdoors. NSN 8340-00-841-6456 brings a 12x17-ft green tarp. NSN 2540-01-330-8062 gets a 12x17-ft tan tarp. Both are listed in the -10 TM's Additional Authorized List (AAL).

When it comes to washing the vehicle, your best bet is to avoid spraying wash water directly onto the engine as much as possible. However, if the heat shield cover does get wet, run the engine at fast idle afterward. The heat generated will dry out the cover and lessen moisture buildup problems.

Half-Mast

### M113A3 Steer Lock Conversion

Non Rather

Mechanics, hold off on replacing a bad electrical steer lock solenoid, NSN 5945-00-933-8450, on the M113A3 FOV. Instead, get your support to install the new electrical-to-mechanical conversion kit, NSN 2520-01-434-8596. At around \$573, the kit costs more than a new electrical solenoid, but it also lasts a lot longer.

PS 671 6 OCT 08



Most of the problems gun card users face happen when the end item changes ownership.

Remember, Team Armor **must** be notified so the Unit Identifier Code (UIC) can be updated whenever your equipment is:

- transferred
- turned in
- placed in storage
- rebuilt or overhauled

The UIC user list also needs to be updated whenever there's a change in personnel responsible for the equipment and its gun card. If the UIC isn't updated, there will be problems with user access to the electronic gun card system.

In addition to having the UIC updated and user status changed, losing units must also print a hard copy of the gun card and place it in the equipment record folder that goes with the vehicle.

If you need to establish or update gun cards, go to the Army Electronic Product Support (AEPS) web site:

### https://aeps2.ria.army.mil/commodity/guncard/index.cfm



You'll need your AKO login and password to access the site. You can also login with your common access card.

At the site, you'll also find links to both TM 9-1000-202-14, Evaluation of Cannon Tubes, and DA PAM 750-8, The Army Maintenance Management System. Both provide lots of info on gun card requirements.

PROBLEMS? CONTACT
TEAM ARMOR BY EMAIL:
rock-tacom-guncard-armor@
conus.armu.mil

PS 671 OCT 08




Grewmen, your ammo carrier is a pretty rugged vehicle. But that doesn't mean it can't be damaged when you're a little too rough with it.


Take the canister doors for instance. Too many of you are sitting or leaning on the doors when they're open. All that extra pressure over-stresses the hinges, leading to cracks and breaks.

Another problem comes when it's time to close the canister doors. Sure, you can rear back and slam the doors shut like you're trying to hit a home run. And the doors will probably hold up under that abuse—for a while.


But eventually, slamming the doors will bend their latching pins. Then you'll have trouble getting the doors to stay closed.


So, when using the canister doors, don't treat 'em like a lounge chair. And make sure you close 'em firmly, but gently.

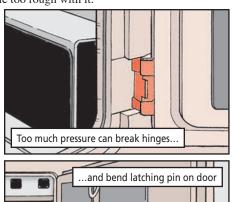

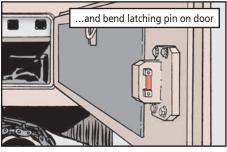




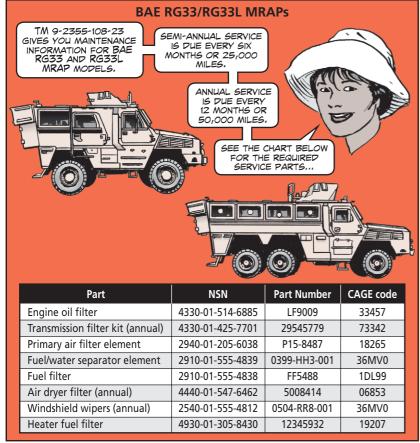

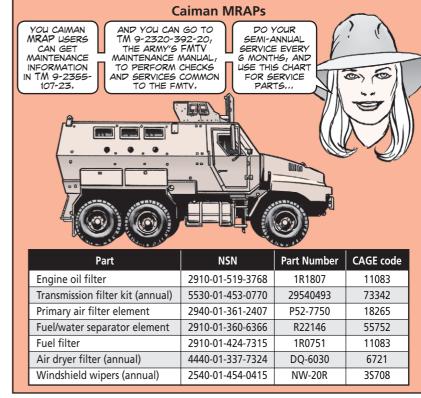



PS 671 11 OCT 08

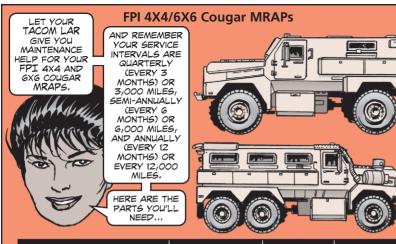

Part	NSN	Part Number	CAGE code
Engine oil filter	2910-01-424-7315	2000108	11083
Transmission filter kit (annual)	2910-01-431-1324	29538232	73342
Primary air filter element	2940-01-544-1903	P532503	18265
Secondary air filter element	2530-01-553-1414	1000763	1EFH8
Fuel/water separator element	4330-01-557-0414	2002514	1EFH8
Fuel filter	2910-01-553-1515	2000190	1EFH8
Air dryer filter (annual)	2590-01-550-2157	1000533	1EFH8
A/C heater filter (front)	4460-01-557-0357	1001552	1EFH8
A/C heater filter (rear)	4130-01-557-0367	1001554	1EFH8

GDLS-C RG31A2 MRAPs			
GPLS-C RG31A2 MRAP USERS, GET MAINTENANCE INFO FROM TM 9-2355-315-23.  AND FINALLY, THE REQUIRED SERVICE PARTS FOR YOUR MRAP ARE IN THE CHART ON THE NEXT PAGE			

Part	NSN	Part Number	CAGE code
Engine oil filter	4330-01-492-6796	LF3970	33457
Transmission filter kit (annual)	4330-01-520-4832	29537965	7X677
Transmission filter (spin on)	2910-01-508-1913	29539579	73342
Primary air filter element	2940-01-557-6684	P605536	18265
Secondary air filter element	2940-01-558-3396*	P601560	18265
Fuel/water separator element	2910-01-557-6229	R0067979	SZ177
Fuel filter (primary)	2940-01-558-7221*	FS20022	33457
Fuel filter (secondary)	2910-01-559-5916	FF5421	33457
Air dryer filter (annual)	4730-01-557-5438	013465	SZ177
Heater fuel filter	2940-01-557-5853	R0020881	SZ177

<sup>\*</sup>Order on DD Form 1348-6 and put "NSN not on AMDF" in the REMARKS block.

### **IMG Category I/II MRAPs**

TM 9-2355-106-23-1 GIVES YOU THE MAINTENANCE INFO YOU NEED FOR YOUR IMG CATEGORY I AND II MRAP VEHICLES. AND DO YOUR SEMI-ANNUAL SERVICE EVERY 6 MONTHS OR 6,000 MILES, ANNUAL SERVICE EVERY 12 MONTHS OR 12,000 MILES, AND BI-ANNUAL SERVICE EVERY 24 MONTHS OR 23,000 MILES.



THESE ARE
YOUR REQUIRED
SERVICE
PARTS...



Part	NSN	Part Number	CAGE code
Engine oil filter	2910-01-555-5093	1842816C2	338X5
Transmission filter kit	4330-01-425-7701	29545779	73342
Primary air filter element	2940-01-513-1502	3532800C1	89346
Secondary air filter element	2940-01-555-4940	3532801C1	338X5
Fuel/water separator element	2910-01-556-4577	1677004C91	338X5
Fuel/water separator element	2910-01-444-8795	1822588C1	338X5
Air dryer filter	2940-01-555-4996	BX065624	338X5



THE MRAP CONTRACTOR FIELD SERVICE REPRESENTATIVE SHOULD BE ABLE TO SQUARE YOU AWAY IF YOU NEED INFO THAT'S NOT LISTED HERE FOR THE MODEL YOU HAVE.

AND DON'T FORGET THE TM AND TRAINING INFO ON THE NEXT PAGE.



PS 671 12 OCT 08




#### Dear Half-Mast,

Those of us in the sandbox are glad to have MRAPs in our unit. But we really need more help with training and maintenance for this vehicle. Is there a solution for us outside of MRAP University and the MRAP contractor field service reps?

1LT D.H.

YES, LIEUTENANT D.H., THERE IS. ALL AVAILABLE TRAINING MATERIALS AND TECHNICAL MANUALS FOR THE MRAP FAMILY OF VEHICLES ARE LOCATED ONLINE. YOU CAN GET TO THEM IN THE POWNLOAPS AREA ON EORPNANCEU USING THIS LINK: https://ordnanceu.army.mil/ portal/index.php



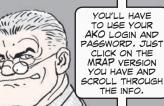

BY THE WAY, YOU WON'T FIND THESE COMMERCIAL MRAP TMS ON LOGSA'S ETM WEBSITE.

674 OCT 08






Replacing a flat tire on your M939-series truck gets a whole lot harder if the spare tire is missing. But that's what can happen if you don't take steps to keep the spare in place.

Vibration during operation can loosen the wing lug, NSN 5340-01-089-3126, that holds the hinged wheel brace against the spare tire. Although the retaining pin, NSN 5315-00-810-3701, is supposed to keep the wing lug from coming completely off, it's often missing.

Even with all parts in place, the brace can be pretty loose by the time the lug hits the retaining pin. If you hit a big enough bump, the spare tire may go flying.

Your best bet is to further secure the tire with the chain and padlock from your truck's BII. Run the chain through the center of the spare tire and around the mounting bracket pipe. Snap the padlock in place and that spare will be there the next time you need it.

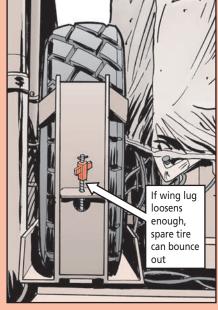

# aii *wished* up



BUT IF IT'S NOT DONE RIGHT, OU'LL HAVE TO TURN AROUND AND DO IT ALL OVER AGAIN.


Some mechanics pay no attention to how the loop clamps that hold the hose in place are positioned. If they're turned so the loop faces up, the hose is held at a higher profile. That makes it more likely that the hose will be crushed when the hood is closed.


WASHER HOSE

SEEMS LIKE SUCH

AN EASY JOB.

Instead, make sure the clamps are positioned so the loop faces down. That holds the hose at a lower position, decreases the chance of crushing and ensures you'll only have to do the job once.

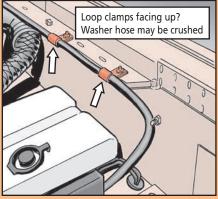

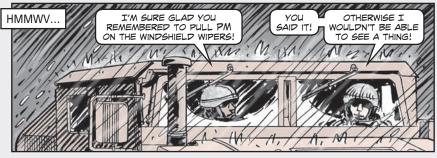

# PM Wipes Away Wordes


thorough PMCS on your HMMWV includes everything from top to bottom, inside and out. Just don't forget that the windshield wipers are included in there somewhere, too.

Yes, that's right, the windshield wipers!

The wipers are easy to overlook because you don't use 'em every day. But when you really need them—in the rain or snow—they'd better be ready to do the job.


Check the wipers like this:

**1.** Eyeball both of the wiper blades. Look for torn, cracked or peeling rubber.

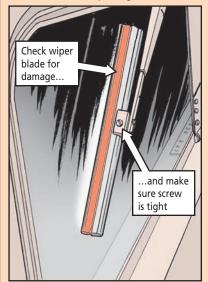


**2.** Check the screw holding the wiper arm in place. It should be tight.

**3.** Check the fluid level in the windshield washer reservoir.

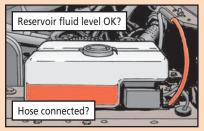


**4.** Make sure the reservoir hose is firmly connected.

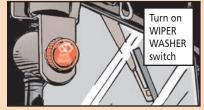


**5.** Flip on the WIPER WASHER switch and squirt some washer fluid to make sure the wipers work.

# Help for ACOG Is Here!



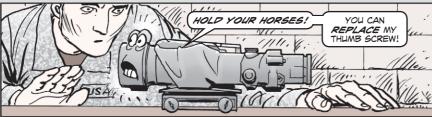



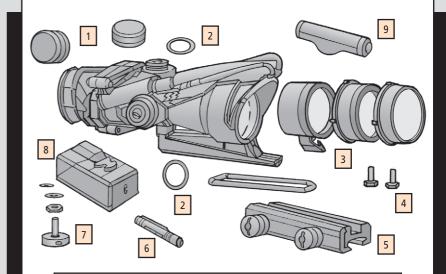

- 1. Adjustor caps, NSN 5340-01-527-7104
- **2.** Adjuster caps O-ring, NSN 5331-01-528-2147
- LFU/ARD assembly (includes LFU, ARD, adapter and retaining band), NSN 1240-01-540-2890
- **4.** TA51 mount screws, NSN 5305-01-531-6659
- 5. MIL-STD-1913 mount, NSN 1240-01-527-7101

- **6.** Lens cleaning tool, NSN 1240-01-535-0972
- 7. M16A2 thumbscrew kit (includes thumbscrew, washer, special washer, and O-ring), NSN 5305-01-559-3863
- 8. Soft case (MOLLE, brown), NSN 1240-01-535-4485
- Neoprene scope coat, NSN 1240-01-534-9198

### **Radiation Warning**

The ACOG contains a small amount of tritium gas. If the tritium source breaks or no longer illuminates, notify the local radiation safety officer immediately.

Anyone who has handled an ACOG with a broken tritium source should wash thoroughly with non-abrasive soap and lukewarm water. Anyone handling the damaged ACOG should wear rubber or latex gloves. The ACOG and gloves should then be double-wrapped in plastic and put in a sealed container labeled "BROKEN TRITIUM DEVICE-DO NOT OPEN".

The safety officer should contact Trijicon for shipping instrucitons for the damaged ACOG. Call (800) 388-0563.



PS 671 18 OCT 08




The M2 machine gun now has a side rail adapter that allows you to mount an additional sight so that you can easily switch from near to far shooting.

A lever on the left side of the adapter lets you easily switch back and forth between sights.

Check to see if your M2 bracket assembly was manufactured to handle the adapter. If it has the three pilot holes in the NEAR/FAR adapter, you can order the rail adapter, NSN 5340-01-536-6189, and install it. See Page 23 in PS 654 for instructions on how to do that:

https://www.logsa.army.mil/psmag/archives/PS2007/654/654-22-23.pdf

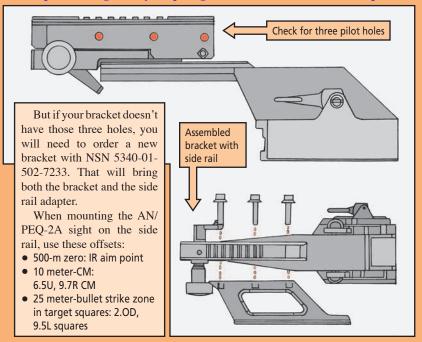



M2 Machine Gun...

# **New Mandrel for LBS**


**S** mall arms repairmen have had trouble with the .50-cal mandrel used with the laser borelight system sliding completely into the barrel.

As a result, the mandrel's manufacturer has increased the diameter of the mandrel's tapered end from .509 inch to .513. Now the mandrel will stay positioned on the barrel like it's supposed to.

Order the new mandrel with NSN 3460-01-556-9023.

New mandrel won't slip completely in M2 barrel



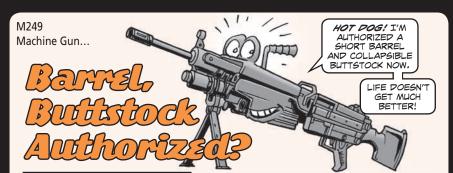

Dear Half-Mast,

We are in a light infantry battalion and we would like to put short barrels and collapsible buttstocks on our M249 machine guns. Is this authorized?

LTC N.L.

Dear Colonel N.L.,

Yes it is. Sir. The short barrel authorization is on Page C-7 of the AAL in TM 9-1005-201-10. The collapsible buttstock will be added to the AAL when the TM is next revised.

M249. M240B Machine Guns...


# **New Cradle for** M249. M240B

A new weapon cradle is now available for the M249 and M240B machine guns that will provide the gunner with increased stability and support when the weapon is mounted on a vehicle.

The NSN for the new LMG/MMG (light machine gun/medium machine gun) weapon cradle is NSN 1005-01-553-0683.

The weapon attaches to the cradle by two quick release pins that require no tools. The cradle includes:

- a spent brass deflector
- M240B 200-round 7.62mm ammo container bracket
- plastic M249 200-round 5.56mm ammo bracket
- travel lock arm
- standard small tapered pintle to use with the standard vehicle pintle adaptors

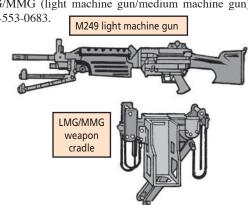

# WHAT DO WE NEED FOR PM?



Dear Half-Mast

Our unit is getting ready to deploy to Afghanistan and we are wondering what cleaning supplies we should order for our weapons. Can you help?

#### Dear Sergeant G.H.,

Certainly. The only complete cleaning kit you can order is for the M16-series rifle and the M4/M4A1 carbine. It comes with NSN 1005-01-541-7228.

Otherwise, you must order individual cleaning items by NSN. Everything you need is listed in the back of the -10 TMs for your weapons, but here's a quick rundown of what's generally required:

#### • CLP

<sup>1</sup>/<sub>2</sub> ounce, NSN 9150-01-102-1473 4 ounces, NSN 9150-01-079-6124 1 pint, NSN 9150-01-054-6453 1 gallon, NSN 9150-01-053-6688

### Rifle bore cleaning compound (RBC)

2 ounces, NSN 6850-00-224-6656 8 ounces, NSN 6850-00-224-6657 1 gallon, NSN 6850-00-224-6663

#### • Arctic lubricating oil (LAW) 1 quart, NSN 9150-00-292-9689

# Weapons lubricating oil (LSA) 2 ounces, NSN 9150-00-935-6597 4 ounces, NSN 9150-00-889-3522 1 quart, NSN 9150-00-687-4241 1 gallon, NSN 9150-00-753-4686

### • Pipe cleaners

pack of 32, NSN 9920-00-292-9946

# • Wiping rags

50-lb bundle, NSN 7920-00-205-1711

#### Cleaning swabs package of 1,000,

NSN 1005-00-912-4248

### Toothbrush

NSN 1005-00-444-6602

### • Dry cleaning solvent

1 gallon, NSN 6850-00-281-1985 5 gallons, NSN 6850-01-474-2317 55 gallons, NSN 6850-01-474-2316

#### • Solid film lubricant

16-oz spray can, NSN 9150-01-260-2534

Half-Mast-



THREE SOLDIERS WERE INJURED IN IRAQ-ONE LOSING HIS ARM-WHEN ONE OF THEM REMOVED TAPE FROM THE SAFETY DEVICE OF AN MK 141 FLASH BANG.

> THAT ACTIVATED THE MK 141 AND IT EXPLODED.

# GRENADE LECTURE TODAY

FIRST OF ALL, THE MK 141 IS NO LONGER USED BY ANY OF THE SERVICES. IF YOU STILL HAVE MK 1419, TURN THEM IN.

SECOND, NEVER TAPE
THE SAFETY LEVER OR
SAFETY PIN OF ANY HAND
GRENADE AND NEVER
BEND, TAMPER, MODIFY
OR ALTER IN ANY WAY
THE SAFETY PIN OR
SAFETY LEVER.

THE SAFETY LEVER
AND SAFETY PIN ARE
DESIGNED TO KEEP YOU
SAFE, IF YOU MESS WITH
THEM, YOU TAKE AWAY
YOUR PROTECTION.

IF YOU EVER ENCOUNTER A TAPED GRENADE, PON'T REMOVE THE TAPE, NOTIFY YOUR LOCAL AMMO SPECIALISTS. BE VERY SAFE WITH GRENADES.

Turn in MK 141 flash bangs



Note white band

IT PAYS TO


The military no longer uses them



Never remove tape from a grenade

# Computing Longer Computer Life



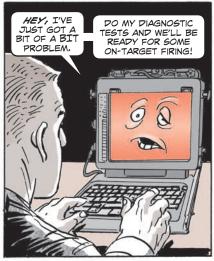

**T**oo many M95/M96 mortar fire control system commander's interface computers are going down or being replaced needlessly because mortar units just don't give them much attention.

But there are a few easy things you can do to keep your interface computer on its feet.

When your computer has problems, do the troubleshooting and diagnostic tests in TM 9-1220-248-10, TM 9-1220-248-23&P, TM 9-1220-249-10, TM 9-1230-203-204-13, or TM 9-1230-203-13&P (the -13 and -13P have the most current info). This includes running the computer's BIT test, using the diagnostic test set for isolating faults in the cables and line replaceable unit (LRU), and, if necessary, having the computer reprogrammed at DS.

If that doesn't solve the problem, contact TACOM's Joe Schmidt for help. He is the mortar expert. Call DSN 793-3369, (309) 782-3369, or email:

#### joe.schmidt@us.army.mil

If the computer does need to be replaced, turn it in as unserviceable for credit and requisition a new LRU through supply. For questions, contact item manager Karen Tkatch at DSN 793-2201, (309) 782-2201, or email:

karen.tkatch@us.army.mil

Javelin Missile System...

# THE CASE OF THE MISSING NSN



AHH...THIS IS MORE LIKE IT.

LAST TIME I WAS SENT IN A CARDBOARD BOX AND IT RESULTED IN A BIG REPAIR BILL!

Dear Editor,

I work in the Javelin direct support shop at Ft Lewis where we often see damaged command launch units (CLU) because they are not kept in their protective cases.

The components usually broken are the hand grips, the crossbar, and the a-focal cover. Repairs can add up to big dollars.

When we tell units they need to keep CLUs in their cases where they're protected with padding, they tell us they've lost the case and don't know how to get a replacement.

PS would be doing a big favor for Javelin folks if you gave them the NSNs for the cases.

SGT Gerald Morton 296th MSB Ft Lewis, WA Editor's note: We're glad to do that favor. For the M98A1, order a case with NSN 8145-01-442-8471 (PN 13305402-509). For the M98A2, order a case with NSN 8145-01-551-5310 (PN 13305402-819).

# MLRS... HOW MANY RATCHET STRAPS?

Dear Half-Mast, We are required to use ratchet straps when we carry MLRS missile pods on the back of trucks. We think we're supposed to use ratchet straps rated for 10,000 pounds, but the only NSN we can find is for straps rated for 5,000 pounds. Can you help?

SSG M.S.


Dear Sergeant M.S.,

Sure can. You can use either 5,000- or 10,000-lb straps. If you use 5,000-lb ones, you need to use eight straps. If you use 10,000-lb straps, use four. NSN 3990-01-204-3009 brings straps rated for 10,000 pounds.

either four 10,000-lb straps or eight 5,000-lb

straps




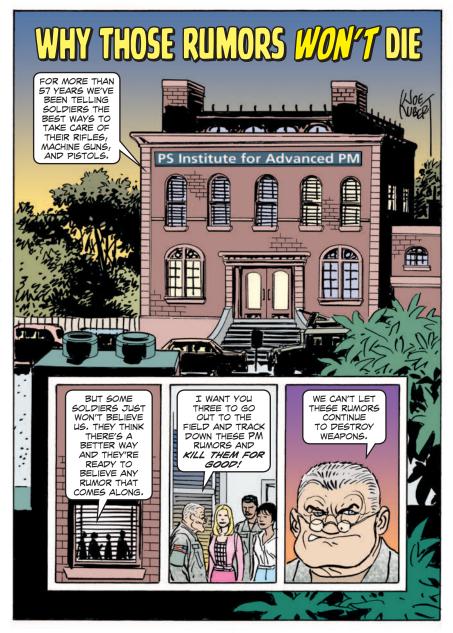







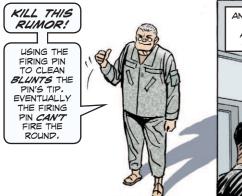







PARN RIGHT THAT STUFF CLEANS, IT CLEANS 50 WELL IT TAKES THE FINISH RIGHT OFF YOUR WEAPON AND RUINS THE BARREL GROOVES, SOON YOUR WEAPON IS JUNK!





...IS TERRIFIC FOR CLEANING OUT CARBON IN THE CHAMBER AND BARREL. I'VE MADE LOTS OF THESE FOR SOLDIERS OVER THE YEARS.





IT'S HELPED RUIN MANY WEAPONS, IT SCORES THE INSIDE OF THE CHAMBER AND BARREL,

HOW WA

TUSARM

PS 671 28 OCT 08 PS 671 29

















### KILL THIS RUMOR!

SOAKING THE GAS PLUG IN JP-8 AND THEN USING THE PLUG WITHOUT GETTING ALL THE JP-8 OFF MAKES CARBON BUILDUP WORSE.

YOUR MACHINE GUN PLUGS UP QUICKER AND YOU CAN DAMAGE IT. THE WAY YOU PREVENT CARBON PLUGGING UP THE GAS SYSTEM IS BY CHANGING THE BARRELS WHEN YOU'RE SUPPOSED TO AND CLEANING THE GAS PLUG WITH THE SCRAPER, NSN 1005-01-131-1914.








PS 671 31 OCT 08







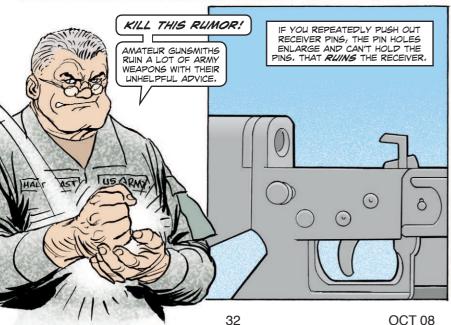












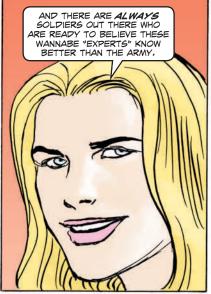



YOU GOT LISTEN UP, THAT SOLDIERS! THE RIGHT, BEST FAVOR YOU CAN BLADE. DO YOUR WEAPON, WE YOURSELF, AND YOUR WON'T UNIT IS TO TAKE CARE OF STOP YOUR WEAPON JUST THE TRYING. WAY YOUR OPERATOR'S TM TELLS YOU TO. NO MORE, NO LESS. IT'S THAT SIMPLE.




# THE FOOD WASTER

LIKE A MARTIAL ARTS MASTER WHO KNOWS PRECISELY WHERE TO DISABLE A FOE, YOU NEED TO KNOW PRECISELY WHERE YOUR TOOLS ARE WHEN YOU FINISH A MAINTENANCE TASK.



AND YOU MUST BE A MASTER AT FINDING FOREIGN OBJECTS THAT CAN DAMAGE YOUR AIRCRAFT TOO.



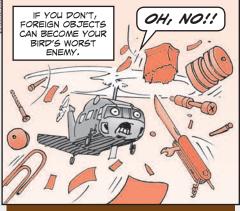





- Looks for metal shavings around electrical connectors and straggler hand tools like pocket knives.
- Uses a flashlight to inspect dark places on the bird where items could hide.

 Properly stows and secures helmet bags.



 Installs all protective covers, such as engine and pitot tube covers, after the mission is finished.  Makes sure the cockpit is free of loose objects like food wrappers water containers, or pens and pencils that can slip between components or controls.



 Keeps a sealable bag handy for small objects.




The FOD Master Reads: CHAPTER 15 OF AR 385-10, THE ARMY SAFETY PROGRAM, AND DA PAM 385-90, ARMY AVIATION ACCIDENT PREVENTION PROGRAM. The FOD Master (He(Ks Out:

THE U.S. ARMY COMBAT READINESS CENTER'S WEB SITE FOR FOD INFORMATION AND MORE: https://crc.army.mii





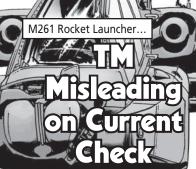




WE BETTER
TELL PS
SO IT CAN
LET THE
REST OF
THE ARMY
KNOW!

### Dear Editor,

Illustration 7G1X\_OOX101A for the M261 rocket launcher stray current check in TM 1-1520-Longbow Apache on EM 0126 shows the igniter arm in the raised position for the stray current check.

Actually, the igniter arm should be in the down (fire) position for the check. Please let other aviation crews know so they can correct their TMs.

SSG John Wingfield 8/229 Avn Regt Ft Knox, KY Igniter arm should be in the down (fire) position for stray current check

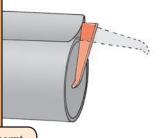

Editor's note: You're absolutely right, Sergeant. This was corrected in the last change to the TM.

#### CH-47D/F...



HAVE YOU EVER WONDERED WHAT SPECIAL TOOLS YOU NEED FOR YOUR CHINOOK?

STOP WONDERING!

EVERY SPECIAL TOOL YOU'LL EVER USE ON THE CHINOOK WITH A T55-GA-714A ENGINE IS NOW LISTED IN TB 1-1520-240-20-168.

THE TB CONTAINS THE RECOMMENDED QUANTITIES OF EACH TOOL NEEDED ON THE AIRFRAME AND THE ENGINE FOR THE GENERAL SUPPORT AVIATION BATTALION (GSAB) AND THE AVIATION SUPPORT BATTALION (ASB).




Grews, your aircraft tie-down chains, NSN 1670-00-516-8405, need as much PM as your bird if you're going to keep your birds anchored.


If you treat chains like a pile of junk, that's what they'll become. And if a heavy windstorm blows up like it did at Ft Hood in 1989, your bird could be tossed like a chef salad if there

are weak links in the chain.

When you're not using the chains, don't pile them up. Instead, stretch them out to prevent dirt buildup and to let them dry quicker. Chains left in piles rust faster, especially in rainy weather as water and dirt easily collect in the chain pile. Then you'll have all the right ingredients for corrosion. Check and clean corrosion from chains like the tie-down TM says.


Frequently rotating the tie-down chains you're using extends their life and use. Make sure the chain adjuster lock mechanisms operate properly. Chains that don't fit properly or are not adjusted right will not provide the right resistance to strong winds. When you're not using the adjusters, store them in a safe place to prevent damage from vehicles.

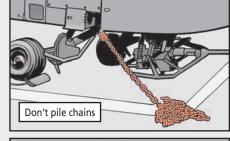

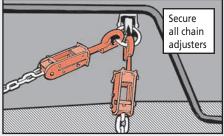

For all tie-down and mooring information, eyeball your bird's -23 TM and TM 1-1500-250-23, Aviation Unit and Aviation Intermediate Maintenance for General Tie-Down and Mooring On All Series Army Model AH-64, UH-60, CH-47, UH-1, AH-1 and OH-58 Helicopters. If there are conflicts between your aircraft's pub and the tie-down manual, the tie-down TM takes precedence. Always use polyester rope. NSN 4020-01-318-5428 gets a <sup>3</sup>/<sub>8</sub>-in rope, while NSN 4020-01-028-3843 gets a <sup>1</sup>/<sub>2</sub>-in rope.

For more info on tie-down procedures or moorings for your bird, contact Lee Bumbicka at (256) 313-6314, DSN 897-6314, or email: lee.bumbicka@us.army.mil

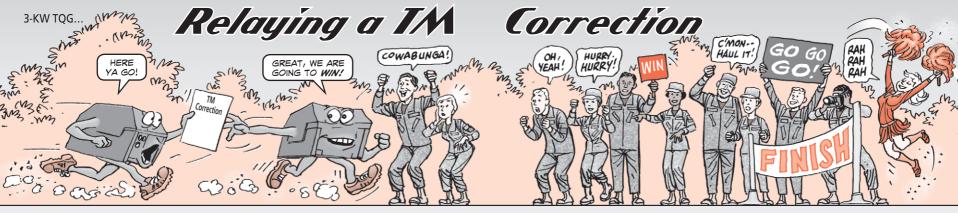

#### Dear Half-Mast,

I have a problem with Figure 15 on Pages C-42 and C-43 in the 3-KW TQG technical manual, TM 9-6115-639-13&P (15 Aug 2005). The drawing and the parts list shows all three electromagnetic relays as identical.

But they're not!

The first two relays are 24 VDC and the last relay is 110-120 VAC. If a soldier plugs a 24 VDC relay into the socket meant for a 110-120 VAC relay, when the generator is started, the relay coil will burn up!

Am I crazy? Or is the TM wrong?


SGT A.M.I.

Dear Sergeant A.M.I.,

You're not crazy!

The TM is wrong for the 60 Hz model of the generator. (It's right for the 400 Hz model.) 60 Hz, 3-KW TQG maintainers, get out your stubby pencil and make these changes in TM 9-6115-639-13&P. (If you're using an electronic TM, print the pages and make the changes, then keep those pages with the electronic manual disk.)

Make your first change to Figure 15 on page C-42. The figure has three 2's, each one pointing to a relay. Make the 2 on the far right relay, a 2A.

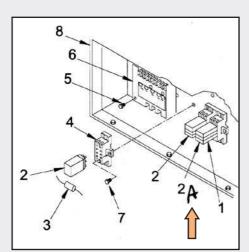


Now, go to the next page and the parts list. On Item 2, change the quantity from 3 to 2. Now, add an Item 2A. Here's how the addition should look:


Item	SMR	NSN	CAGE	PART NUMBER	DESCRIPTION, (UOC)	QTY
2A	PAOZZ	5945-01-558-5373	60886	RH2B-ULAC-110-120V	Relay, Electromagnetic	1
					60 Hz, UOC: LQQ	

Now look at Item 3 in that list—the semiconductor device. Add to the item description 60 Hz and a UOC of LQQ. Change the quantity from 1 to 2. Also, note that although this part is still in stock, it is obsolete and you may have a semiconductor device with a part number of 1.5KE51CA instead of the one listed.

While you're there, go ahead and add an additional item for 400 Hz needs. Here's how that addition should look:

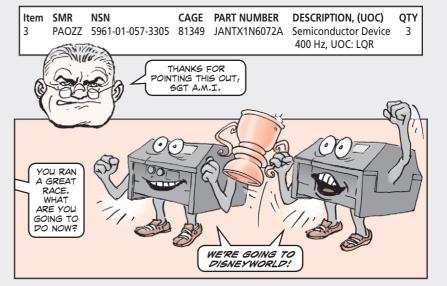

PS 671 40 OCT 08

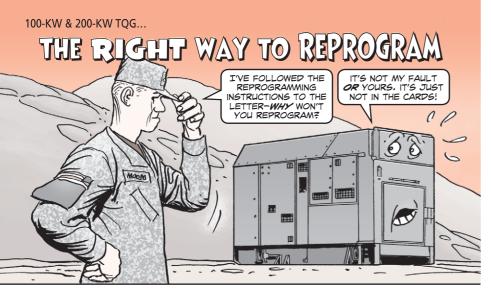


Just because it's laminated doesn't mean it's written in concrete.

The laminated reprogramming instruction card for the MEP-807A 100-KW TQG and the MEP-809A 200-KW TQG has two big errors. The reprogramming instructions tell you how to change the voltage and frequency output of the generator. The way the instructions are now written, you can't do it!


So, generator maintainers, go to each of your generators and remove the laminated instruction card on reprogramming and make these changes.



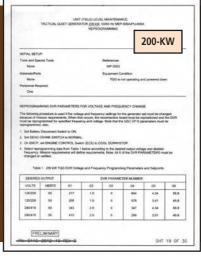

First, go to instruction 13. It now reads, "Press Function Key on DVR once to display data for parameter." Change it to read, "Press Function Key on DVR once to switch back to the parameter number."

Now, go to instruction 17. It now reads, "Press and hold up arrow key or down arrow key to set the data for parameter :90 to 0009 to lock the DVR." Change it to read, "Press and hold up arrow key or down arrow key to set the data for parameter number :90 to any number but 0009 to lock the DVR. DVR will not stay locked when Engine Control Switch is switched from either COOL DOWN/STOP to OFF/RESET and back to COOL DOWN/STOP or from COOL DOWN/STOP to MANUAL START."

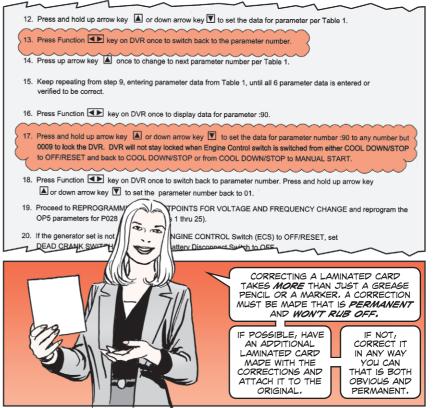


The reprogramming information in both TM 9-6115-729-24 for the 100-KW TQG and TM 9-6115-730-24 for the 200-KW TQG is correct. Only the laminated instruction card that stays with the generator is wrong.


If you need more information about this correction, contact Edgar Wright at DSN 992-7169 or (732) 532-7169. Or email: edgar.wright@us.army.mil

PS 671 43 OCT 08

5-, 10-KW TQG...

# Keep Cap on Short Leash

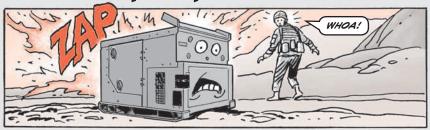

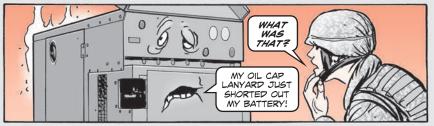

Long

#### Dear Editor,

The crankcase oil cap on 5- and 10-KW TQG generators is held in place with a lanyard made of metal chain. The lanyard is there to keep the oil cap from getting lost.

However, on some generators, the lanyard is too long. In those cases, the chain hangs down far enough to contact the battery terminal and cause a short.

The fix is simple. Just take

a few links out of the chain to shorten it. Make sure you leave the lanyard long enough to still be able to remove the oil cap.

SGT Philip Nagales 226 Maint Co Ft Sill, OK



Editor's note: Looks like you brought that problem up short. Just be careful that you don't shorten the lanyard too much. It can take three or four revolutions to remove the oil cap. That twists up the chain and shortens it even more.

An even better solution is to make sure the battery posts have terminal covers, NSN 5940-00-738-6272, in place. Then install a plastic cover, NSN 6160-01-420-8960, over the entire battery. With all three covers in place, even a long lanyard will be less likely to cause a short.

# KEEP IT TOGETHER, THEN RESET IT!




The AN/TRC-190 line of sight (LOS) radio system is an automatic RESET item. Units are required to turn in the AN/TRC-190 to the SWA RESET team as a **system.** The system consists of the shelter, the prime mover (M1037), the antenna masts and the generator with trailer (PU-797A or PU-751/M).

Too many units are turning in partial systems. Others are shipping their systems directly back home.

### Turn in the complete system to RESET!

There is a 90-day repair cycle time at Tobyhanna Army Depot. The line item numbers for the AN/TRC-190 are L69306, L69442, R90451, and R90587. Units should make sure their plan is loaded in the Army RESET Management Tool (ARMT). You can access the ARMT on LOGSA's LIW website:

https://liw.logsa.army.mil/index.cfm?fuseaction=home.main

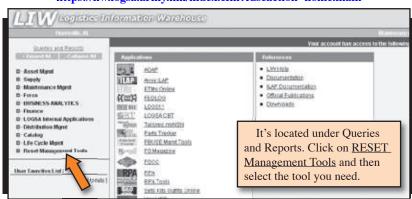



JACKS (Joint Acquisition Chemical Biological Radiological Nuclear Knowledge System) is a website that will provide you with a wide range of information on almost

all CBRN equipment.

EXAMPLES OF THE INFORMATION YOU WILL FIND AT JACKS ARE...


- more than 100,000 NSNs, which are updated weekly from the FED LOG
- Code F demilitarization instructions
- shelf life expiration, extension and condemnation info organized by both NSNs and lot numbers
- maintenance, logistical, supply and safety-of-use CBRN advisory messages

To access parts of JACKS considered sensitive, you will need a Public Key Infrastructure (PKI) digital identity certificate (CAC card) or an Army Knowledge Online (AKO) or Defense Knowledge Online (DKO) account.

JACKS is looking for suggestions on how it can better help you. Suggestions can be submitted through the JACKS site: https://jacks.jpeocbd.osd.mil

If you have questions about JACKS, call DSN 761-9600, (703) 681-9600, or email **webmaster@jpeocbd.osd.mil** 

You can also contact the CBRN Information Resource Center at (800) 831-4408 or email cbrn@conus.army.mil

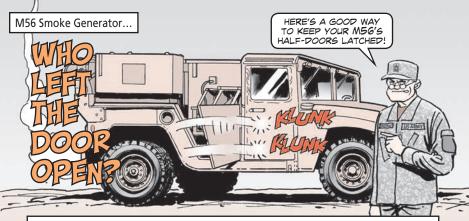

#### Dear Editor,

To operate the M50 smoke generator, you must remove its storage and transit cover. But then you have no good way to keep the two half-doors latched. They swing back and forth, get in the way, and can catch on something and be damaged.


We've found bungee cords are an excellent latching solution. We use a 1-ft cord, NSN 5340-00-340-0980, on the fuel tank side and a 2-ft cord, NSN 5340-01-231-6015, on the grinder side.

For each door, we attach one end of the cord to the door's inside support and bend the cord's hook completely closed. That way the cord stays with the door and isn't lost. The other end of the cord can be hooked to something solid on the M56 frame or through one of the frame slots.

Now the doors are latched to stay.

SSG Robert Walton Kenneth Hermann US Army Chemical School Ft Leonard Wood, MO



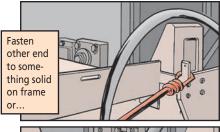




Editor's note: This is a good idea for smokers to latch onto. Para 3-15 in TM 3-1040-282-10 shows how to do this.

M12A1 Decon...

# **Deconning Made** *Easy*

OH, PECONNING IS JUST PELIGHTFUL THANKS TO THESE TIPS!

PECONNING WITH YOUR M12A1
PECON WILL BE SO MUCH
EASIER IF YOU REMEMBER
THESE POINTERS...

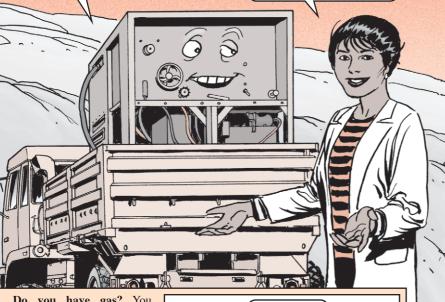

**Do you have gas?** You should have traded in your old gas-powered M12A1 by now for a new diesel one. If you still have the gas version, the Army wants to know about it. Please contact TACOM-SBC's Barry Lakes at DSN 793-5536, (309) 782-5536, or email

### barry.lakes@conus.army.mil

He will provide disposition and shipping instructions for your M12.




Diesel differences. The diesel model has differences from the gas model that you need to remember. With the diesel version, you don't need to remove all the engine compartment panels. Just the back one will do. But don't forget to open it for operation. Otherwise the exhaust has no place to go.

Changing the oil is much easier with the diesel model, so now you don't have a good excuse for not doing it. Change the engine oil after the first 20 hours of operation or at the end of the first month after you receive the M12. After that, change the oil every 200 hours of operation or annually, whichever comes first. The oil from the diesel drains slowly and it may take two hours to completely drain it. Use the dipstick to check the oil levels when draining and filling.

Valves and such. The setscrews for the four valves often work loose (or are left off at maintenance). That makes the valve difficult—or impossibleto turn with the handle and the handle can actually come off. If the valves handles feel loose, tell your repairman. He can tighten or install setscrews.

When you do quarterly lubing, make sure to hit Valve #1 with GAA. If it doesn't get lubed, it often breaks. In fact, if any valve feels stiff, give it a shot of GAA.



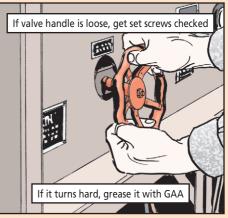

**Watch the heat!** Make sure the heater exhaust is uncovered and that you keeps hoses and electrical cables away from it. The exhaust reaches 200°F, which can melt lots of things, including you. So be careful.

PS 671 48 OCT 08

# KEDTIERIR ATRUMNING







Dear Half-Mast

Have the technical manuals for the compact skid-steer loader, known as the Bobcat, been updated? I need to replace some parts, but they don't cross over to NSNs on FED LOG. Can you help?

SFC D.D.D

SERGEANT D.D.D.,
HELP IS ON
THE WAY! HERE
ARE TECHNICAL
MANUALS YOU
NEED TO SUPPORT
THE SKID-STEER
LOADER...

TM 5-3805-284-13&P Model 763 -

Operation and Maintenance Manual TM 5-3805-285-14&P Model 763 -

**Parts Manual** 

TM 5-3805-286-14&P Model 763 -

Service Manual

TM 5-3805-287-13 Model S150 -

Operation and Maintenance Manual TM 5-3805-288-14P Model S150 -


Parts Manual

TM 5-3805-289-14 Model S150 -Service Manual

VISIT THE MANUFACTURER'S WEBSITE: http://www.bobcat.com

IF YOU'RE IN SOUTH-WEST ASIA, KEEP THESE NSNS AND POINTS OF CONTACT HANDY WHEN ORDERING PARTS.

PS 671

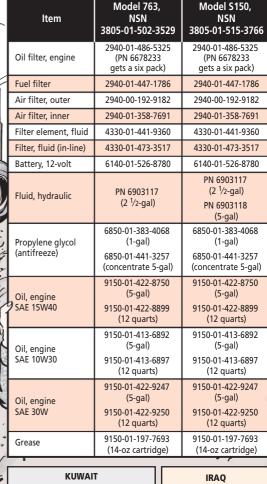

Bahrah Trading Company P.O. Box 5869 Safat Kuwait 13059

e-mail: bahrah@kuwait-toplist.com

POC: Mr. Nigel John Birt Lewis

(Service Manager) Phone: 00-965-0746731 e-mail: nigellewis@alsayer.org

POC: Mr. Neil Bullard (Service Manager) Phone 00-965-9855602 Tristar Company 00964 66 253 2415 00964 66 253 0391 (FAX) 60 Ring Road, Koya Street, 3rd Building Erbil – Kurdistan

e-mail: mike.pigou@ tristar-iraq.com

OCT 08

51

## 130G Grader... UBB HELPS STICKS PP PM

POSITIONING THE GRAPER BLAPE IS "STICKY" BUSINESS WHEN THE VEHICLE SITS TOO LONG WITHOUT EXERCISE.

NO EXERCISE MEANS THE GRADER'S CENTERSHIFT PIN RUSTS IN PLACE.



THEN YOU CAN'T MOVE THE PIN IN AND OUT OF THE CENTERSHIFT HOLE TO POSITION THE BLADE.

YOUR GRADER'S SLOPING OPERATIONS JUST CAME TO A SCREECHING HALT!

HERE ARE TWO THINGS YOU CAN DO TO HELP THE CENTERSHIFT PIN OUT...


 First, exercise the grader by pulling the centershift pin out of the hole at least once a month. That way rust won't "freeze" the pin in place.



 Second, spray the hole and pin with corrosion preventive compound. NSN 8030-00-938-1947 gets a 16-oz can.



BY THE WAY, WP 0039 AND WP 0041 OF TM 5-3805-261-10 HAVE THE LOWDOWN ON THE CENTERSHIFT PIN.

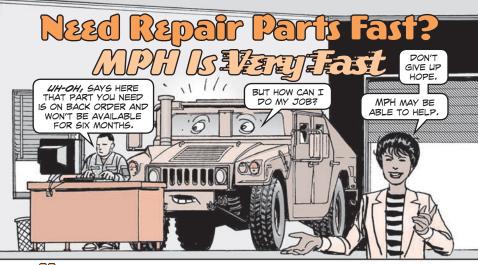

nits fighting or getting ready to fight in SWA can't afford to wait weeks or months for a vital repair part. But if that part is on back order or maybe doesn't even exist, the unit doesn't have much choice but to wait...until now.

MPH (Mobile Parts Hospital) is a mobile manufacturing system than can fabricate standard parts and even create parts previously unavailable. MPH's mission is to provide the manufacturing solution at the point of need to ensure Soldier readiness.

Three MPHs are deployed in Kuwait, Iraq, and Afghanistan. They are standing by to help you with your repair part needs. Here's what the MPH needs from you:

- either the actual part to be reproduced or a blueprint of it with dimensions
- NSN of the part if it's in the military supply system (if in the military system, the part must be on order)
- · document number if on order
- unit identification code (UIC)

There are limits to what an MPH can produce. It can produce only parts made of aluminum, brass, stainless steel, mild steel, or pre-heat treated steel.


MPH can't help with parts:


- considered safety critical (part failure could cause injury or equipment damage)
- of a hardness greater than 33 Rockwell (equivalent to a Grade 5 bolt)
- longer than 25 inches for external work or nine inches for internal work
- more than six inches in diameter
- heavier than 20 pounds


But even if the part isn't something MPH can help with on-site, it may be able to have the part manufactured in CONUS. CONUS-manufactured parts require a sixweek lead time.

These are the MPH POCs:

- Kuwait, Lance Jennings, DSN 318-430-7010
- Iraq, Kevin Lewis, DSN 312-987-5130 (operator 1, extension 6277)
- Afghanistan, Robert Shirley, DSN 312-987-5130 (operator 1, extension 6059)

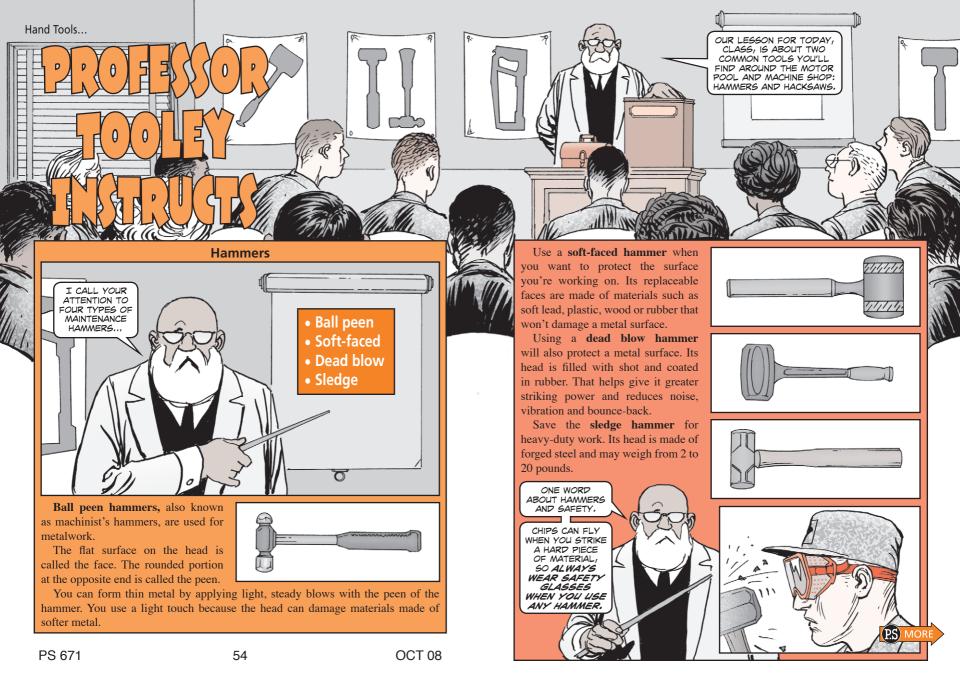


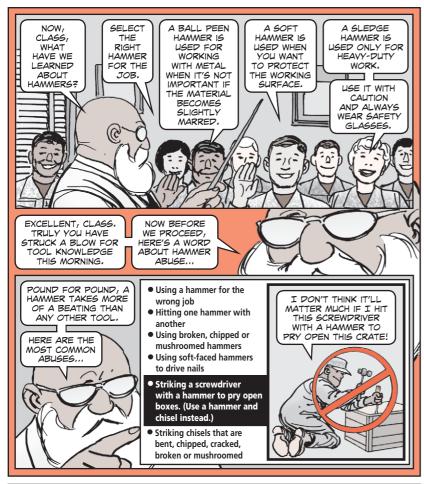

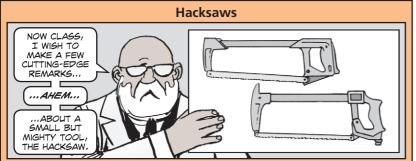



A hacksaw is used to cut tubing, bolts and small metal parts. It has a handle attached to a metal frame. A saw blade fastens to both ends of the frame. You must keep the blade tight or it will break. The saw teeth should face away from the handle.

When you begin sawing, guide the blade with your thumb, but be careful not to touch the blade teeth. Pull the saw back slowly and lightly. Once you've made a cut, grip the front of the frame with one hand to guide the blade and apply pressure.

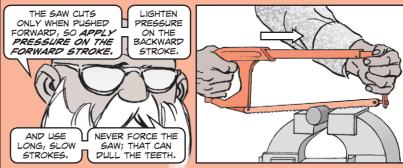

Saw blades come in a variety of teeth sizes, known as pitch. Pitch is measured in teeth per inch (TPI). Hacksaw blades usually have 18 or 24 TPI. What's the rule of thumb for which pitch to use? Choose a blade that always has two teeth in contact with the metal. That means you use a blade with a lower pitch to cut thick metal, and one with a higher pitch to cut thin metal or tubing.

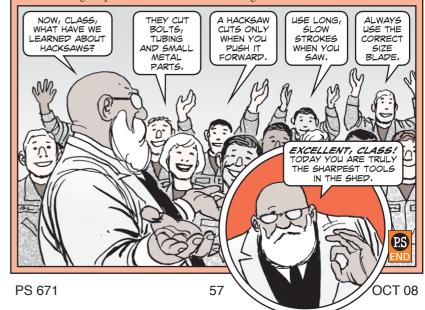

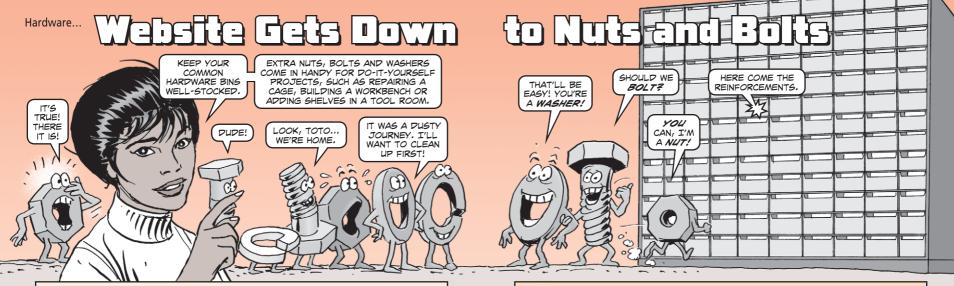

One recommended website for viewing benchstock in the Army inventory is the Defense Supply Center Philadelphia's (DSCP) Aviation Supply Chain Partner Site:

### http://www.dscp.dla.mil/aviation/customermenu.htm

Don't let the name fool you. This website's not just for aviation. It lists common hardware for **all** usage. Here you'll find points of contact for a variety of fasteners. Two links on the page are particularly helpful:



### **Fastener Catalogs and Assortments**

This link takes you to an online fastener catalog of bolts, cap screws and machine screws, along with their composition, diameters, lengths, NIINs, NSNs or part numbers. It also leads to catalogs of self-locking nuts, flat washers and lock washers. There's even a link to assortments of screws, bolts, nuts, washers and threaded rods—each with its own NSN. For example, NSN 5305-01-195-5479 brings you an assortment of hexagon head cap screws, grade 5, in <sup>1</sup>/<sub>4</sub>-in through <sup>1</sup>/<sub>2</sub>-in diameters—a total of 1,470 pieces in all. Another NSN brings you a different assortment of hardware.

### **DSCP Inventory Locator Network (DILNet)**

Updated each day, the DILNet lists the hardware inventory available to DSCP from participating vendors. The customer can search the inventory by NSN or part number, contact the item manager and submit a MILSTRIP requisition. Hardware is shipped directly from the vendor, with shipping time averaging just eight days.



USE ONLY THE EXACT FASTENERS CALLED FOR IN THE TM.

REMEMBER, BOLTS
AND SCREWS
ARE PRECISION
MATERIALS.



THE WRONG ONES COULD SNAP UNDER STRESS.

AND THAT COULD BE DANGEROUS, EVEN FATAL.

PS 671 59 OCT 08

# Connie's POST SCRIPTS

### **SKOT PAM Updated**

DA PAM 700-60, which covers the Army's sets, kits, outfits and tools (SKOT), has been updated with warranty and replacement procedures for tools. The update also includes tool requisition requirements. You can download the pub at:

http://www.army.mil/ usapa/epubs/G-4\_(DCSLOG)\_1.html

### Basic FMTV Pressure Switch

You can't get a new pressure switch for the oil pressure light on your basic FMTV trucks that use Caterpillar 3116 engines by using NSN 5930-01-384-5419 anymore. That NSN is a terminal item, so get the switch using NSN 5930-01-528-7523 instead. This switch is used on trucks with serial numbers 11,438 and below. Jot down the new NSN in your parts manual.

### Bootlace NSN

Need replacement laces for your tan temperate and hot weather Army combat boots? NSN 8335-01-332-8894 brings a pair of 66-in tan bootlaces. Unit supply can order them from the Defense Supply Center Philadelphia website: http://warfighter.dla.mil/newmenu/Index.jsp

# Glag Sticker Decals

Looking for American flag decal stickers that you can use to ID vehicles? You'll have trouble finding them in the Army inventory. But you can find them on the General Services Administration (GSA) Advantage website: https://www.gsaadvantage.gov

Once there, do a search on *flag decal stickers*. You'll turn up a list of companies that manufacture or market them.

# HEMTT Spotting Mirror

Wish you could view the front and right side of your HEMTT? You can if you get the front spotting mirror that's been added to the HEMTT. NSN 2540-01-493-9101 brings the spotter mirror kit. It mounts on the right hand side mirror frame. Or get the mirror kit components you need using NSN 2540-01-494-4311 for the mirror head and NSN 2540-01-542-0902 for the mirror arm assembly. You should see these changes in the next revision to the TMs.

## M1117 ASV Alternator

Use NSN 2920-01-562-4002 to get a 200-AMP retrofit kit for the armored security vehicle (ASV). Make a note until the NSN is added to Fig 6-2 of TM 9-2320-307-24P.

# Up-armored HMMWV Transmission Modulator

The NSN listed in the parts manual for your uparmored HMMWV's transmission modulator is wrong. Fix that by changing the NSN listed for Item 1 in Fig 56 of TM 9-2320-387-24P to NSN 2520-01-498-9279.

# Update to TACOM SOUM O8-O17 for HMMWV Geared Hub Assemblies

HMMWV users, TACOM SOUM 08-017 gave you the scoop on a recent problem with geared hub assemblies. But some key info was missing that you need to know. There are service kits that contain lock washer, NSN 5310-01-213-4185. These kits are subject to the same disposal replacement instructions called out in the SOUM. That includes **freezing assets** until the kits comply with the safety message.

Check your bench stock/ASL right away for these kits: annual service kit, NSN 4330-01-495-6900; semi-annual service kit, NSN 4910-01-496-0055; hub kit, NSN 2590-01-523-1657; maintenance kits, NSN 2590-01-530-3471 and NSN 2590-01-530-3470; and diesel engine parts kits, NSN 2815-01-492-5709 and NSN 2815-01-492-3214. And see your TACOM logistics assistance rep (LAR) if you need help complying with the safety message.

## 7 1/2-TON CRANE SWITCH

Use NSN 1740-01-538-2590 to get the turn signal switch for the 7  $^{1}/_{2}$ -ton crane. This NSN replaces the one shown as Item 36 in Fig 14-1 of TM 5-3810-305-24P.

## M240 MACHINE GUN TM CORRECTION

On WP 0048 00-3/(4 blank) in the M240 machine gun's TM 9-1005-313-23&P, items 4 and 5 are reversed. Item 4 should be the retaining head bushing, NSN 5315-01-408-6676, and item 5 the helical compression spring, NSN 5360-01-408-6000. Make a note until the TM is revised.

## **DEUCE Fuel Cap**

Use NSN 5340-01-523-5488 to get a fuel cap for the deployable universal combat earthmover. This NSN replaces the one shown as Item 14 in Fig 127 of TM 5-2430-200-24P.

# FIXED FIRE EXTINGUISHER REFILL STATIONS

If your brigade support battalion (BSB) does not have a recovery/recharging station for fixed fire extinguishers, chances are you have a lot of extinguishers that get thrown away when they're empty. That's a **huge** waste of money. All BSBs are authorized to order recharge/refill machines for Halon, FM-200, and dry powder service unit (DPSU) fixed fire extinguishers. Order them with these NSNs:

Extinguisher Type	Recovery/Recharger NSN	
Halon	4210-01-470-4618	
FM-200	4210-01-474-6206	
DPSU	4210-01-488-9655	

The Halon and FM-200 recovery/recharger stations also require an inverter, NSN 4210-01-470-4617, which securely holds the bottle in place while refilling. No inverter is needed with the DPSU recovery/recharger station.

DISTRIBUTION: To be distributed in accordance with the initial distribution number (IDN) 340312, requirements for TB 43-PS-Series.

Would You Stake Your Life on the Condition of Your Equipment?

PS 671 60 OCT 08

# RINGS CAN SNAG!



# KEEP THEM OFF YOUR FINGERS!