



So, the shop NCOIC said to the Spec-5 from DS, "Dawgone it, Ralph! What're you guys up there trying to do to us?"

> And Ralph answered, "It's not that way, Harry. It's more like what're you guys in the company shop not doing'?"

"Let me tell you about it. And, how's the coffee?"

And away they went along the road to solving some mutual problems.

The sweet music of a little face-to-face communication prevents roughing the nerves on both sides of the fence.

One way: discussing or sharing the problems that come up in a DS technical inspection (on those DA Forms 2404), when a unit turns in equipment.





The problem might be holding up parts when a piece of equipment is turned in, and your support can tell you just how important it is to turn in all parts ... even bad ones.

Maybe, too, you can chew over just who's responsible for the work that has to be done. The topics can be as long as the list of problems.

It's a sure-fire way to make a workload easier—for everybody.




In short, unit maintenance supervisors, MAIT types and DS shops have common problems in maintenance and supply.

Wander over to the other guy's shop when you figure the coffee's ready. Maybe you'll get an invite for a cup . . . and some talk.

Some of the things up for grabs might be supply problems . . . PLL, ASL and such. Or, accurate work requests (DA Form 2407).

SEE YOU ON

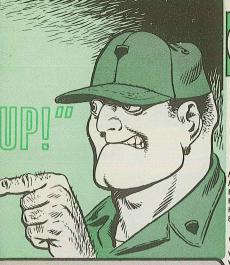



Published by the Department of the Army for the information of organizational maintenance and supply personnel. Distribution is made through normal publication channels. Within limits of availability, older issues may be obtained direct from Editor, PS MAGA-ZINE, c/o US Army Maintenance Management Center, Lexington, KY 40507.

ISSUE No. 268 MARCH 1975	IS	SUE	No.	268	MARCH	1975
--------------------------	----	-----	-----	-----	-------	------

FIREPOWER			2-23
M107/M110 SP's	2-7	M203 Grenade	
M551 Test Set	8-12	Launcher	19
FRH Tank Fluid	13	MG Security Rack	19
HS Lock & Hasp	14-15	Shillelagh	20
HS Padlock PM	16-17	Chaparral Battery	21
81-MM Mortar	18	M113 PC	22
M114	PC	23	

GROUND MOBILITY 24-36


4	400-Gal Water	
4	Trailers	27
5	Spark Plug Poop	27
26	Troubleshooting	
6	Equipment	29-36
	4 5 6	4 Trailers 5 Spark Plug Poop 6 Troubleshooting

COMMUNICATIONS

SB-22 Switchboard 37	RATT Rias	44-45
AN/PRC-2577 38-43	Shelter Fan	45

AIR MOBILITY 46-55

Ground Handling		Huey	51, 53
Wheels	46-49	Kiowa/Cayuse	52, 55
Engine Weights	50	Huey Cobra	54, 55
U-21A	50	The Right Hardw	are 54
Safety Records	51		

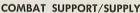


New Publications	28	M6A2 CB Mask Hood	63
Mine Detector		Water Purification	63
Earphones	56	Property Book	
NORS/ANORS		Change	64
Request	57-62		

PS wants your ideas and contribu-tions, and is glad to answer your questions. Name and address are kept in confidence, Just write to: Or call: AUTOVON 745-3503.

M S G Half-Masi

37-45

Use of funds for printing of this publication has been approved by Headquarters, Department of the Army, 17 July 1973 in accordance DISTRIBUTION: In accordance with requirements submitted on DA

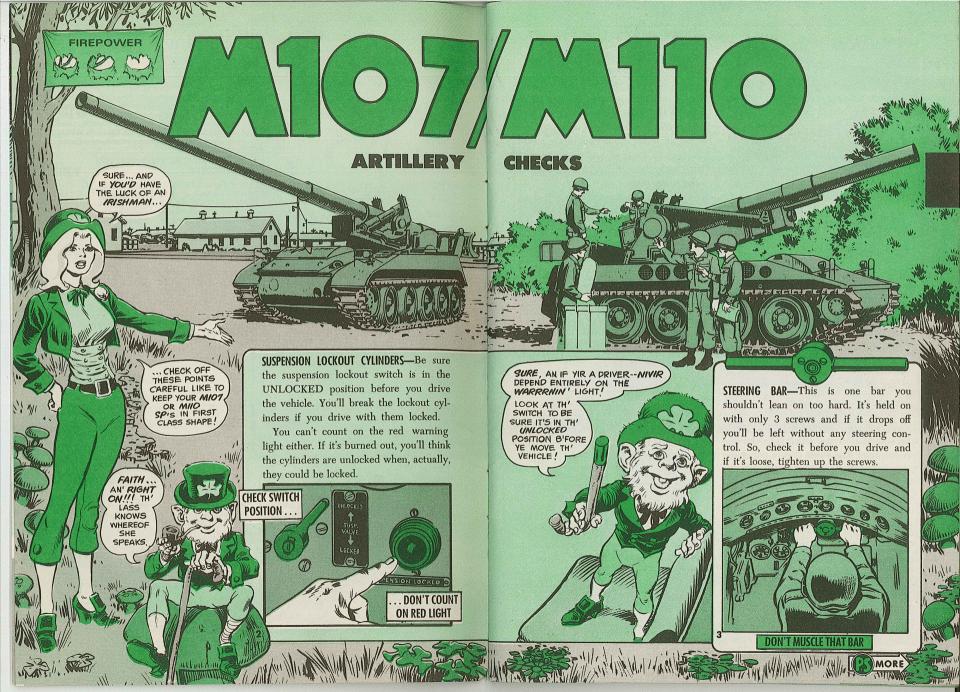

DRIVER'S HATCH—(M107 only)—If the driver is sitting in his hatch with the hatch cover open, and somebody lowers only if it's in the closed shut position. the cannon assembly as far as it'll go, what can happen? The mount assembly can hit the driver in the head.

If the driver has ducked down but the hatch cover is not secured, things are better, but still not good. The hatch cover will take the crunch instead of the driver's head. The cover can get bent out of line

if it's not secured, or even if it is secured in the open position. It's safe from harm

Some drivers are more alert about securing the hatch cover in the open position with the holdopen hook before driving. An unsecured hatch can wave around and hit the driver in the back of the head if he stops suddenly or goes over a bump. These hooks are not completely reliable so check 'em often.





MAKES SENSE

COUNTERRECOIL RELIEF VALVE-At the front of the M158 mount, in the counterrecoil front head, you have an air check valve. In the center of this housing there are 4 small holes that have to be kept open because they're the relief valve for the counterrcoil. Make sure they're not closed by paint or dirt by putting your hand over them while moving the tube in and out of battery. If you can feel or hear the air entering and exiting, they're OK. If not, tell your direct support maintenance.


DON'T

LEPRECHAUNS!

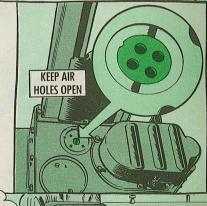

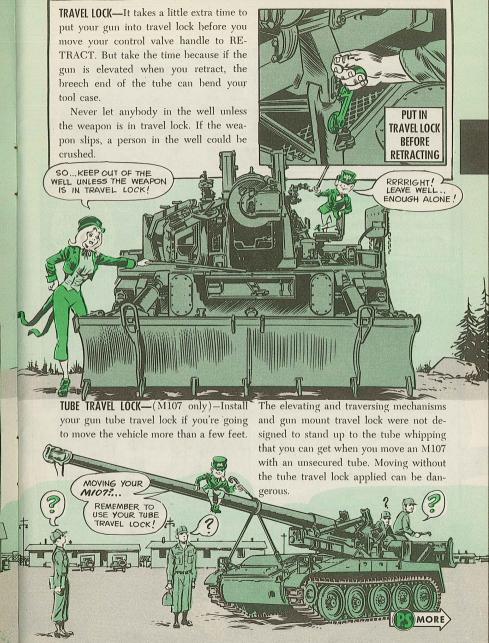

AIR CLEANER BLOWER MOTORS—There are 2 independent blower motors. One can be out of order while the other is still working. So, when you make your daily hand test to see if the motors are doing their job, check both exit holes.

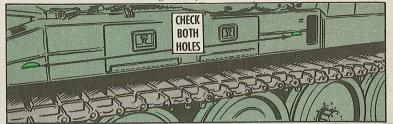

AIR FILTER COMPARTMENTS—Check often for water accumulation. If you find water standing in your filter compartments, get it out with paper towels or rags.

WATER ACCUMULATION IS CAUSED BY POOR SEALS, WARPED POORS AND WEAK LATCHES.

AUXILIARY OUTLET RECEPTACLE—These receptacles on quite a few M107/M110's have been burned by sloppy slaving. Check yours and if it needs repair, get your mechanic to put in a new terminal sleeve or whatever else is required to get it back in shape.



USE
WATER
REPELLENT
TAPE IF
NECESSARY
TO STOP THE
LEAKS,

BURNT TERMINAL SLEEVE

SLOPPY SLAVING DID IT!

REAR STEP—The 2 rear steps can be slippery, particularly out in the field where you might have a lot of mud on your boots. Be slow and careful when you use them. Another hazard is that they can work loose, so be sure the step is secure before you use it.



LEAKING SPADE CYLINDERS—Using the polished spade cylinder rod as a step gets the rod dirty and scratched. This damages the O-ring seal and causes leaks at the spade cylinder. For now, keep your feet off the cylinder and protect the polished cylinder rod with an oily rag when possible.



HYDRAULIC RESERVOIR—Note 7 to your LO 9-2300-216-12 (Apr 74) tells how to check your hydraulic reservoir daily and before operation. Most crews do this. What gets neglected is the hydraulic reservoir filter screen. Clean it quarterly the way Note 9 in the LO says.

M107, M110, M578

FAN BELT KIT FITS

Still having fits about which matched set of cooling fan V-belts you need for your SP artillery or wrecker?

It's in PS 258 on page 15.
So OK! But suppose you

get a new(or rebuilt) auxiliary drive assembly with the old type pulley and the new type belts. What do you do then?

No problem. You'll need the new fan assembly pulley NSN 3020-00-179-6782 and the auxiliary drive sheave NSN 2520-00-454-8241. They're both in the supply system.

You are an Organizational Turret Mechanic MOS 45P.

They've just handed you an electrical fault isolation test set NSN 4933-00-432-7269. So, what are you going to do with

First off, you'll read the good poop in TM 9-4933-216-12 and Change 1 until you know it as well as you know your girl friend's name.

RIGHT ON !.. ANGIE 1 ... ER .. Change 1, = TM 9-4933-216-12!

CHECK IT OVER

to see if it's all there and in good working

order. Under the lid of the top cover you

I GOTTA WIOI ...

Next, you'll look the set over carefully

chl

any of these harnesses is missing or unserviceable, holler "Foul!" and have your direct support replace it. On 'tuther hand,

...THEY HAVEN'T CHECKED OUT THEIR ELECTRICAL FAULT ISOLATION TEST SET

FER AGES



if a W101 harness is included, give it back to support. You don't need it.

You won't be able to use the W103 should find wiring harnesses W102, W103, harness either since you need a shop-type W104, W105, W106, W107, W108, and 28-volt power source. Hang on to it any-

M551 SHERIDAN-



W109, each with an identifying band. If way.

WHISSSTTT ... LADS!... TH' SHERIDANS ARE A FOINE FAMILY! THEY DESARRIVE THE FOINE PM CARE ONLY A TIP-TOP-SHAPE TEST SET CAN GIVE! *GULP ... YUP! MEBBE OL' PHIL HISSELF IS YOU HEAR YOICES, TOO... CHARLIE? TALKIN' TO US

Look at all the pin or socket harness the control panel. If the pins are broken thru J13 where you test your printed ciror the sockets are plugged up, you send no need to try fixing it yourself.

Check all switches, selectors and controls. They must move freely through all positions.


Another thing to look at with a fishy eye connectors I1 through I7 as marked on is the plastic strip receptacle plugs at I8 cuit boards. There has to be one receptathe whole set back to your DSU. There's cle plug at each of the connectors [8, [9 and J12, while connectors J10, J11 and J13 need 2 receptacle plugs each. Without these plastic strips you could not be sure of putting the correct printed circuit board

in the proper position. **CHECK PLUGS J8 THRU J13 FOR** PLASTIC STRIP RECEPTACLE PLUGS **ALL SWITCHES, CONTROLS** AND SELECTORS MOVE FREELY? MOR

PROBLEM-SEE YOUR SUPPORT!

While you're checking the plugs, plug these 2 things in your memory:

1. Take out only one circuit board at a time for testing. That way, you won't make a mistake and put it back in the wrong place.

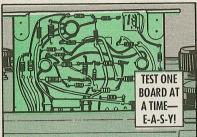

2. When you stick a circuit board into a 18 thru I13 receptacle for testing, there's no need for muscle. If you have to push hard, the receptacle plugs are goofed up, you're trying to put the wrong board in, or the board needs to be turned 180 degrees. Find out where the problem is beforenot after-you break something.

READY TO TEST

If the set checks out OK, you can start using it to make whatever tests you need, but don't throw away your "white set" NSN 4933-00-909-9356 (11586473). One set is not a replacement for the other.





YOU NEED 28 VOLTS

If your in-vehicle tests are sour, it is almost certain that you're not getting the 28 volts you need to do the job. You're trying to get blood out of a turnip—28 volts out of the 24-volt batteries in your M551

No WAY, MAN! NO WAY!


So engrave this on your memory:

The test set will work only when you put electricity into it—28 volts worth of electricity. All in-vehicle tests must be made with the engine running at a high idle-1,000-13500 RPM.


Be sure the engine is running. If the test set doesn't work right, then there may be something wrong with the generator or generator regulator. Get your hull mechanic to find out what's wrong and fix it.

FUNCTION DIALS

Your 2 function dials, SW1 for in-vehicle tests and SW2 for component tests, can mess you up unless you have them set correctly for the test you're trying to make.

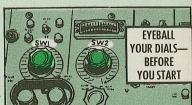

F'rinstance, you must have the white marker of the SW1 dial at the TRANSIT position whenever it's not in use. It also has to be on the right number for the invehicle test you want to make.

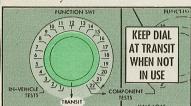

If you're using your SW2 function dial, you've got to have it on the proper number for the component you want to test, but that alone is not enough. The SW2 dial will work only when you have your SW1 dial with its white knob line pointing to number 22.


KEEP IT SLOW

The magic word in using your test set is SLOW. Take your time in hooking up your W-series wiring harnesses. Once you get a connector pin bent, it's hard to unbend it. In fact, the whole set may have to go back to direct support.

So, use a flashlight and take your time. Line up the keys with the keyways using as much light as you need to see them and then g-r-a-d-u-a-l-l-y push the harness into the right receptacle in the vehicle. Finding the keyway by pressing until something gives is a sure pin bender, and like any kind of a bender, it'll give you a headache afterward.

Another thing that can mess you up is the circuit breaker at the top left of your control panel.

If it's in the blown (UP) position, you can't make any electric drive control system tests.

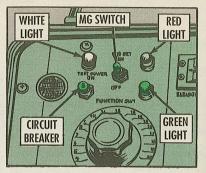

Push it down and (if you're connected up) the white light and the green light, showing the MG switch is OFF, should stay on. When you flip the MG switch to ON, the green light should go out and the red light should go on.

Think of this red light as a DANGER light-because it is.

Your MG switch is useful because it lets you make electric drive control system tests, but it can also get you into a lot of trouble.

When the MG switch is OFF, the turret and gun launcher will not respond to signals from either control handle.

Fine! You can make your tests safely. But when the MG switch is ON, both turret and gun launcher will respond to control handle signals.

All it takes is somebody inside the vehicle to brush against one of the control handles and CRUNCH. Maybe a bad accident.



Now that we're talking about things never to do, here're a few more . .

NEVER put the test set under the weapon breech. It could get smashed when you raise the muzzle.

NEVER leave your harnesses spread out carelessly. If one gets mashed, it's turn-in time for the harness.

NEVER let anybody stand on the front slope of the vehicle or on the rear deck when you're making tests. They could get hurt if something goes wrong.

NEVER try to connect a wiring harness, either to the test set or to the vehicle, before you make sure you have not only the right harness, but the right end of the right harness and all power OFF.



NEVER make any tests with more wiring harnesses hooked up to the set than the TM calls for. The extra harness/harnesses could queer your result.



MORE TIPS


Read the Maintenance Allocation Chart on pages C-3 and C-4 of your TM 9-4933-216-12 on the turret. Try to do repairs that direct support is supposed to do and you'll get crushed like a grape if you goof it—as you probably will. Make this your motto:

Let direct support do it, unless the MAC says it's an organizational job.

Your maintenance job on the test set is easy to remember. All you have to do is inspect, except for knobs, screen vents, fuses and lamps which you can replace.

The only other maintenance is just common sense. Your test set is not waterproof when the case is open, so protect it from rain and snow.

Nothing on the underside of the test set is your baby, so leave the 14 screws alone that hold down the control panel.

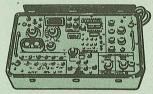

THE
HOLDDOWN
SCREWS
ALONE

When you read the NO-GO instructions in the step-by-step tests in your -12 TM, stay in the Organizational column. The DS/GS people will do the stuff in the extreme right hand column.

Learning the test set takes a little while but it can sure help you find what is hurting on an M551's turret electrical system.



Guess what they've invented for your M48A3 or M60 series tanks—a fire resistant hydraulic fluid!

The new fluid, called FRH, is MIL-H-46170 (MR). It replaces the MIL-H-6083C hydraulic fluid you've been using.

FRH won't blend with the old fluid, so when your Direct Support puts it in, they'll take out all the old MIL-H-6083 oil.

The word on doing this is in TB 43-0001-39-3 (July 74).

Once you start using FRH in your tank, you have to keep on with it. In fact, after the first filing with FRH, your DSU will stencil this note in red on the replenisher and on the hydraulic power pack reservoir.

New production tanks are being issued with FRH already installed. If your tank has FRH, you'll know because of the CAUTION line in red letters on the replenisher and hydraulic power pack reservoir.





ORDER FRM FOR REPLENISHING AS:

NSN 9150-00-111-6256 1 qt.


NSN 9150-00-111-6254 1 gal.

5 gal.



Your unit arms storage room high security—HS—padlock is always mated with a special HS hasp. That way they'll meet AR 190-11 requirements.

Mate padlock NSN 5340-00-799-8016, an open shackle type with clevis and chain, or padlock NSN 5340-00-799-8248, a shrouded shackle type with clevis and chain with any of these 6 HS hasps models:

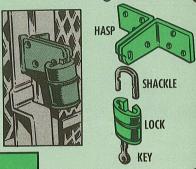

HASP NSN 5340-00	FOR	⅓ KEY ⊙
178-7872 Model B&E	Single door on flat wall (right-hand installation).	WALL DOOR
178-7881 Model D&B	Single door on flat wall (left-hand installation).	DOOR WALL &
178-7880 Model D&A	Single door on off-set walls (left-hand installation).	DOOR WALL
178-7873 Model F&E	Single door on off-set walls (right-hand installation).	WALL DOOR
178-7875 Model D&C	Double sliding, or open out doors.	DOOR DOOR }
158-0019 Model G&H	Universal	DOOR



If none of the authorized hasps will work on your arms room door, your DSU or local post engineers will make 'em for you. Any home-made hasp must meet the specifications in MIL-P-43607 (GL) Amendment 1 (13 Mar 69). Info on the type of metal used and hasp design becomes part of your unit's records on the arms room lock.

You're also authorized secondary locks for the arms racks. NSN 5340-00-158-3807 comes with a chain; NSN 5340-00-158-3805 does not.


AR 190-11 (1 May 73) and your local supply and security SOP are your authority to get the locks and hasps. Records on supply, use, location, etc., on the locks and keys are kept by your unit's security officer.

Report a lock that's unserviceable for any reason to Defense Industrial Supply Center, ATTN: SFA, 700 Robbins Ave., Philadelphia, PA 19111. Use DD Form 1686. They'll tell you what to do with it. Arms rack locks cannot be repaired.





Take it easy when you unlock your high security padlock-HSP-NSN 5340-00-799-8016 or NSN 5340-00-799-8248.

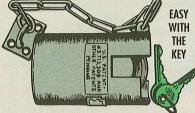

A damaged lock or broken, jammed or lost key means expensive parts replacement cost. And a heap of paper work which you can do without, right?

Here're the easy steps to stop key/lock damage:


1. Make sure the key's fully inserted before you start turning it. If the key's all the way in, it's next to impossible to break



2. Twist the key 45 degrees clockwise. E-a-s-y does it. Never use the key ring or pliers for added leverage.



3. Pull the padlock body away from the shackle. The padlock has a dead bolt shackle and won't spring open when you turn the kev.

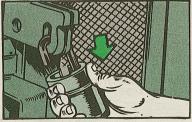

PULL PADLOCK BODY AWAY FROM SHACKLE

4. Keep lock, key and keyway clean, dry, and lubed. A dab of powder graphite -NSN 9620-00-233-6712 in the keyway will ease your key-turning chore.




Moisture in the keyway won't do the lock any good, so keep the key and keyway free of moisture. A light coat of rust pre-




ventive on the outside of the lock will cut down maintenance, too.

Each HSP comes with 2 keys. One is for use at the unit arms room, and the other is a control key. You can tell which is which by looking at the blade. The regular key has shoulder projections at the

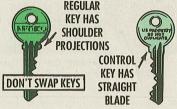

base of the blade; the control key has a straight blade. Never swap keys. Here's why:

If you have HSP NSN 5340-00-799-8248 and turn the control key 45 degrees coun-

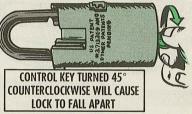

terclockwise, the lock'll fall apart, and you'll have to reassemble it.

Report a lock that's unserviceable for any reason to Defense Industrial Supply Center, ATTN: SFA, 700 Robbins Ave., Philadelphia, PA 19111. They'll tell you what to do with it.

TB 750-3 (Feb 72) has the word on





RIGHT?

You'll get only half use from your ole M1 smoothie if the instrument light and the M14 aiming post light are on the blink-because you field fixed a cap, cover or plug.


So-o-o-o, get 100 percent operation by using the right part in the right place. Start with these hard to sight NSN's:




M53E1 INSTRUMENT LIGHT

Protective cap plug

5365-00-893-5885

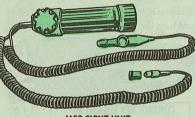

M53 SIGHT UNIT

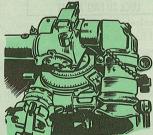

Chain Machine screw (holds chain to plug) Machine screw

5305-00-054-6653 (holds chain to telescope)

Lock washer (holds chain and lamp bracket to telescope)

5310-00-616-3555

4010-00-229-2933

5305-00-054-5646






2 03 GRENADE LAUNCHER "

"WILD WILLIE"
MUSTA ZONKED
A TOOTH OFF HIS
QUADRANT AGAIN!

So, take special care when you put on

WOTTA JERK! METERS DOWN RANGE FROM TH' TARGET

or take off the sight assembly from the For a close-in bite with the M203 M16A1 rifle. A careless step, a misguided grenade launcher you need all the teeth tool, or loose grip on the rifle, and teeth get chipped ... or zonked. on the range quadrant for zeroing.

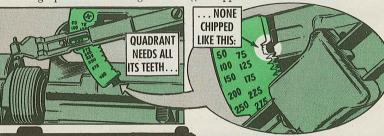

M2, M85, M60 MACHINE GUN ...

STORAGE RACKS

Dear Half-Mast,

Is there a standard security rack for machine guns? If so, where can I get a set of drawings for my unit arms storage room?

CPT O. B. B.

Dear Captain O. B. B.,

There's no standard rack. But don't let this stop you. Design your own machine gun security/storage racks. A wall-mounted rack is recommended. Store the machine guns horizontally. This saves floor space, protects butt plates 'n' receivers, and is easily adapted for all machine guns.

Just be sure your racks meet the security provisions of your local SOP and AR 190-11.

FOR GUIDANCE
OR SUGGESTIONS ON
ANY PLANS YOU SUBMIT,
JUST WRITE TO:

U.S. Army Armament Command ATTN: AMSAR-MAA

Rock Island, IL 61201



Those Shillelagh missile system tracker connector filters are a must if your unit's about to go to the field for ASP (annual service practice).

The filters help prevent false error signals . . . and thereby keep your missile from going left when you want it to go right. Technically, they ward off stray electromagnetic interference to the guidance and control system.



Actually, the filters should be on the tracker connectors at all times, ASP or no.

You'll find them listed as connector adapters on pages 4-175 and 4-176 of TM 9-1400-465-24P (Mar 73), NSN 5935-00-833-5719 is for the left side and NSN 5935-00-833-5720 is for the right.



And, when you change a tracker, take off the filters and put them on the one you

CHAPARRAL BATTERY UP

words that can save big problems with your Chaparral Missile System.

BATTERY OFF: Disconnecting the positive leads (W21E2 and W23E2) from the batteries before you attempt to remove the generator set control box (GSCB) can save the GSCB from burning out.

The burn-out happens when you keep the battery leads attached . . . and then accidentally ground the GSCB hot leads



on metal as you attempt to remove them.

In case you haven't read it lately, a caution on disconnecting battery leads is printed on the GSCB. Steps will be added



Battery OFF and Battery UP are small to TM 9-1440-585-20 to disconnect battery cables W21 and W23 from terminals E2 on batteries 1 and 3 before removing GSCB and to reconnect after GSCB is replaced. They're for real.

> TM 9-1440-585-12 is being superseded by TM 9-1440-585-10 and 9-1440-585-20.

> BATTERY UP: On the other hand, batteries up in charge are a must for a smooth operating launch station.

> To get maximum performance, check the specific gravity of each battery cell during the monthly service. Mechanics making the check should also be sure the charging system is doing its job in supplying proper voltage.

> The specific gravity reading on your hydrometer or battery/anti-freeze tester should be 1.250 to 1.300 at 80° F.




CHARGED BATTERIES **MUST COME UP TO 1.250** OR MORE OR REPLACE

Cell specific gravity should vary no more than .040.


And, open circuit or terminal voltage should be 12.0 or greater.

If the readings are less than these, charge the batteries. If they can't come up to 1.250 or more, replace 'em.

YE OLD MOTTO

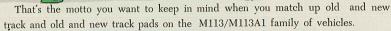

The old track, NSN 2530-00-930-2011, has a slightly bigger track pad well than the new track, NSN 2530-00-078-2908. For this reason, the old track pads, NSN 2530-00-690-2681, are a little bit bigger than the new track pads, NSN 2530-00-088-9531.

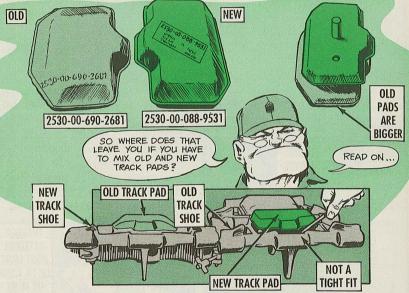

The new pads will work on either old or new track shoes but it is best to use them only on the new shoes. The new pads don't make a tight fit in the old shoe so they wiggle around.

So, wherever you can, mate up the new track with the new shoes and the old track with the old shoes.





The power cupola hydraulic filter element in the M114A1-series carriers won't last forever. That's a fact.

It needs changing every 75 hours, 750 miles or at every regular quarterly (O) service, the way it says in Note 13 to LO 9-2320-224-12 (Nov 69).


If you leave it in too long it clogs up, which builds excess pressure in the hydraulic system and causes leaks.



Ask for Filter Element NSN 4330-00-542-2060 AN6235-2A (88044) as listed on page 54 of TM 9-1005-307-24P (Mar 73).

M114-SERIES SCOUT . . .

Yep! You've got a real problem lubricating the fitting nearest the fan on your NSN 4930-00-357-6301, and the flexible Scout.

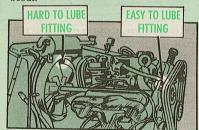

The belt-end fitting on the fan shaft is easy to get but the fan-end fitting is downright difficult.



To reach it, hook up the rigid adapter, adapter, NSN 4930-00-288-1511, to the grease gun from your No. 1 or No. 2 Common Tool Kit.

'Course, if some metal-eating termite has cut out a little V-shape in the fan housing above the grease fitting, your work is going to be a lot easier.



Careful not to over-lubricate. Too much grease will spatter on radiator and make the engine overheat. Wipe off excess grease.

23

TO PULL OR NOT TO PULL

Dear Half-Mast,

Opinions differ in our motor pool during A or S services on trucks as to when wheel cylinders become unserviceable. Some say replace if there is any leakage when the wheel is pulled, others say replace only if there is substantial leakage. What is the LT J.P. rule?


CRAZY ...ONLY WHEN LEAKAGE BAD DON'T HALF

Dear LT J.P.,

Wheel cylinders should be replaced when they show signs of any leakage.

Like a toothache, it's a sign of something going wrong-something that can only get worse.

AND BRAKE FLUID LEAKING ONTO THE BRAKE SHOE LINING IS BAD NEWS!

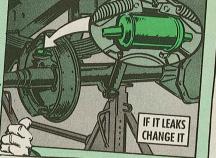

NO KIDDING ON WHEEL BEARINGS! READ THE LO!

BUT IT SAYS TO

REPACK 'EM WITH GAA--AN' WHOEVER HEARD O' THAT?

Some guys coming into the Army are already good mechanics-on civilian-type vehicles. Like those cars they've been working over since they dropped their bottle and picked up a wrench.

But they may have a lot to learn about trucks-especially military-design trucks.

They never believe their truck's lubrica-

tion order where it says to clean their rear wheel bearings and repack 'em with GAA.

They think the rear wheel bearings are lubricated by gear oil from the differential -like in a civilian-type automobile.



So, that's why you see a lot of rear wheel bearings going to pot in the Army.

Believe it! Rear wheel bearings on military-design trucks get grease-just like the front wheel bearings.

NO MORE MIRROR ASSEMBLIES

KEEP YER COTTON PICKERS OFF MY MIRROR ASSEMBLIES! TRY TH

BONEYARD. Dear Half-Mast, A while back, PS carried stock numbers

for the outside rearview mirror assemblies

for 5-ton trucks. The only info in TM 9-2320-

211-20P (May 73) and in TM 9-2320-260-

20P (Nov 72) is the breakdown on individ-

What is the current poop on complete

CW3 R. C. L.

mirror assemblies for both the TM-211-

series and TM-260-series 5-tonners?

Dear Mr. R. C. L.,

Those mirror assemblies, for 5-ton trucks are no longer available. You order the parts

There's a possible bonus in the boneyard (cannibalization point) when you realize that most mirror parts are interchangeable between the TM 211-series and TM-260series 5-ton trucks.

.. WHICH IS A GOOD WAY TO HELP SAVE UNCLE'S SCARCE DOLLARS!

TM 209-SERIES 21/2-TON TRUCKS

The right V-belt to order for the air

compressor drive in these trucks is NSN






CONNIE SEZ:

the 5-ton truck, and shouldn't be in the list at all.

Do yourself a favor (and the 5-ton 3030-00-849-1033, listed on page 321 of mechs, too) and turn in the wrong-sized TM 9-2320-209-20P. The belt shown on ones you may have ordered when you go page 322, NSN 3030-00-113-8077, is for for the right ones.

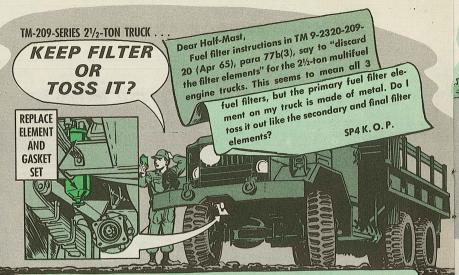

Dear Specialist K. O. P.,

That's an old-type primary fuel filter element you've got. You keep the metal element in service as long as it's doing its job. If you can't get it clean, replace it with the element, NSN 2910-00-790-2300, and gasket set, NSN 5330-00-678-3298, listed on page 83, TM 9-2320-209-20P (Oct 72).


The new element is the disposable type and is tossed out, like the secondary and final filter elements, when you get into this stage of filter servicing.




Dear Editor.

Sometimes mechs can't reach the valve stem cap on the inside wheel of a dualwheel rig to check the air pressure.

Here's a tool to simplify the job made from a foot-long piece of %-in metal tubing, with the end swelled with a punch to fit the valve cap. A piece of rubber hose makes a convenient handle on the other end. Joe Keen

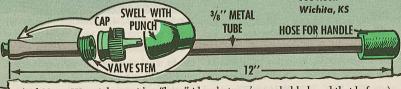

(Ed Note: We might say it's a "keen" idea, but you've probably heard that before.)

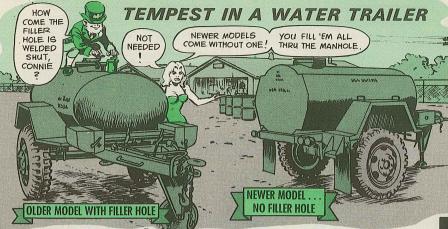

There's a lot of time being wasted in frettin' and stewin' over those older 400gal water tank trailers that have a filler hole and strainer. This goes for both the adjusting bolt-and forget it. M107-series and M149-series trailers.

That fill system was dropped in production years ago. It's not needed. You can fill the tank through the manhole.

So, take a load off your mind-weld the filler neck cover shut. You just screw the cap down tight, tack weld the nut to the

This poop was in the U.S. Army Tank-Automotive Command's EIR Digest before and is again-Article 12 in TB 43-0001-39-1 (Jan 74).



oline engine? Poor power? Fouled spark power. Fuel goes down past the pistons plugs? Engine oil diluted by fuel?

You've checked out everything and can't find the cause? **USE ONLY SPARK PLUG**



the wrong spark plugs in that engine? in the TM.

Have you got problems with your gas- They don't fire. They get fouled. Poor into the crankcase. You're wearing out your rings and cylinders.

> You'd be surprised-or would you?-at how many guys put any ol' spark plug in an engine. If it'll fit, they'll screw it in. They may have several different wrong plugs in one engine.

It's so simple-use only the spark plug What do you want to bet that you've got specified for your engine. You'll find them

This is a calected list of recent pubs of interest to organizational maintenance personnel. This list is compiled from recent AG Distribution Centers Bulletins, For complete details see DA Pam 310-4 (Aug 73), and Ch 3 (Apr 74), TM's, TB's, etc.; DA Pam 310-6 (Jul 74), SC's and SM's; and DA

Pam (C) 310-9 (Mar 73), COMSEC Pubs. TECHNICAL MANUALS

TM 9-1005-233-10 Jul M73, M73A1, M219 Machine Guns TM 9-1005-286-20-1 Sep Gun, M167 20-

MM Towed ADA M167

TM 9-1430-485-20P Sep I ANCE TM 9-1440-585-10 Sep Chaparral TM 9-1450-486-20P Sep LANCE

Ch 2, TM 9-2300-216-ESC Oct M107/M110 SP Artillery Ch 13, TM 9-2350-215-10 Oct M60/M60A1

Ch 2. TM 9-2350-217-ESC Sep M108/M109

Ch 1. TM 10-7360-204-13 Dec Field Range M59: Burner M2 Ch 4, TM 11-5805-239-12 Nov PP-

1209()/FG Power Supply
TM 11-5805-240-20P Nov AN/TCC-11

Telephone Repeater
TM 11-5805-244-20P Nov SB-65()/FGC Switchhoards

TM 11-5805-330-20P Nov AN/FGA-5() Repeater-Monitor Groups TM 11-5805-384-12 Nov TA-341()/TT

TM 11-5810-209-12P Dec TSEC/KL-7 Com

TM 11-5815-238-20P Nov AN/GGC-3()

Teletype and TT-76()/GGC Repeater-TM 11-5815-291-14P Nov J-2110/G Jack

TM 11-5820-222-20P Oct AN/VRC-24A and AN/TRC-68 Radio Sets



TM 11-5821-259-24P Nov AN/ARC-114() TM 11-5825-231-25P-10 Sep T-279()/UR

TM 11-5830-232-24P Nov AN/VIA-1 Aux

TM 11-5935-206-14P Nov J-2098/G Jack

TM 11-5935-207-14P Dec J-2099/G Jack TM 11-5935-208-14P Nov J-2101/G Jack

TM 11-5935-209-14P Nov J-2097/G Jack

TM 11-5935-211-14P Nov J-2102/G Jack

Assy TM 11-6780-200-20P Nov KS-7(1),(2)Still * TM 32-5815-205-15 Aug Facsimile Rec

Central, AN/TXR-3 TM 32-5895-001-24P Nov Panel. Patching, Antenna, DA-1835/G

TM 32-5975-001-24P Dec Mount, Elec Equip Rack, MT-4422/G TM 32-7125-001-24P Oct Cabinet,

Storage CY-6154/G These Pubs are available only from the US Army Security Agency Materiel Support Command, Vint Hill Farms, Warrenton. VA 22186

MISCELLANEOUS

DA Poster 750-41 Sep Electronics ... Good As The Technicians Behind It

DA Poster 750-42 Sep PM DA Poster 750-65Sep Good PM Reduces DA Poster 750-66 Sep Air Pollution

MWO 55-1500-219-30-5 Nov UH-13, C, H, M Ignition Security Device MWO 55-1520-228-30-26 Nov OH-58A Ignition Security Device

NEW MOVIES

TF 10-4780 How To Use Cold Weather TF 44-4812 Mobile Hipar Acquisition Radar TF 55-4774 Cummins Engine Diagnostic

TF 55-4814 Block & Tackle-Part I TF 55-4815 Block & Tackle-Part II

Boom Relief Valve Test

Hold it! When you're checking your M816 5-ton wrecker truck's boom relief valve, you need different info than you find in TM 9-2320-260-20 (Jul 72), para for you by the foot. 2-223 1.

New poop will be coming out in a TM change. But for now, make sure you lower the hoist cable to the ground and extend the boom to the full extended test.

pressure reading.

RG-213/U for RG-8A/U

Looking for RG-8A/U cable? Use its replacement, RG-213/U RF coaxial cable. NSN 6145-00-660-8711 draws it

A Snap With Photo SB

When you have the task of taking care position before making the pressure of photo chemicals, films and papers, let SB 11-632 (Apr 73) give you a hand. Then, hold the crowd lever in the It has all kinds of helpful info on extended position while checking the storage and handling of photosensitive material.





SORRY T

DISAPPOINT

YE, SPECIALIST_

BUT YE'LL NOT

BE GETTIN' ME








WE HAVE THE WORLD'S BEST EQUIPMENT ... Take care of it

IF YOU WANT TO DISPLAY THIS CENTERPIECE ON YOUR BULLETIN BOARD, OPEN STAPLES, LIFT IT OUT AND PIN IT UP.



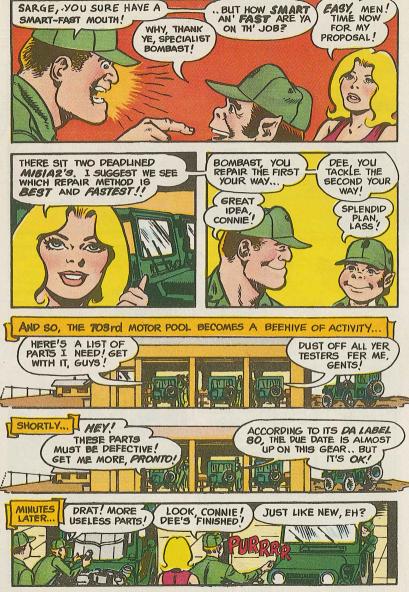













NO WONDER TH'
LITTLE RASCAL
BEAT ME! HE USED
MAGIC!
NOT SO!


I THOUGHT
SFC TIM DEE
(TMDE -- HOW
'BOUT THAT)
WAS UNUSUALSO I WATCHED
HIS REPAIRS
CLOSELY!



THEY WERE STRICTLY





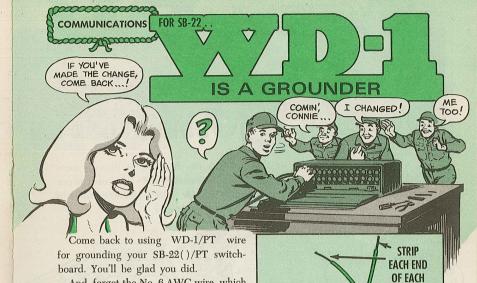

And, forget the No. 6 AWG wire, which is too big, or the braided wire, which is too limber.

'Cause, old faithful WD-1 will do the grounding work for you like it has before, and Change 6 to TM 11-5805-262-12 (Dec 60) tells you to make the switch.

Here's all you need to do:

Strip % inch of insulation off each end of both wires.

Twist the wires together at each end. Connect one end to the ground rod.

Connect the other end to the GRD binding post in your SB-22.


Be sure the WD-1 is put through the rubber gasket of the switchboard. Running your ground wire through the back of the case can spring the rear cover...






WD-1

WIRE

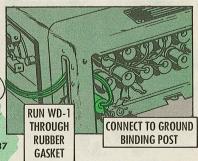

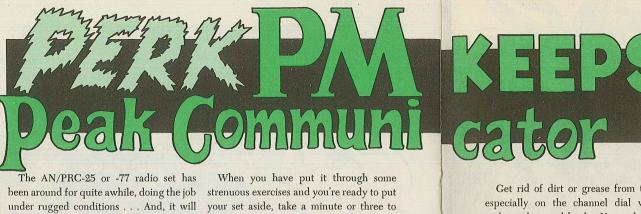

keep right on communicating for you as give it a going over. long as you keep giving it PM care.

RIGHT ON-

ALL THESE PANEL CONTROL KNOBS WITH

TLC!

NO, NO-

USE ONLY A CLEAN, DRY

CLOTH--

NO WATER!


Get rid of dirt or grease from the set, especially on the channel dial window and panel control knobs. Use a clean, dry cloth.



While you have that RT-505 or -841 receiver-transmitter before you, put your fingers on the panel controls.

If the knobs are loose, firm them up . . . If they are binding, get at the cause and cancel it.

Careless handling of controls can put a crimp in your radio . . . Like, when a heavy hand turns off the ON-OFF-SQUELCH

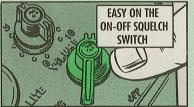


switch too hard. It will break the stud underneath.

At times you catch your set keying itself. Right? Right!

To avoid this, there are a couple of things you can do.


Make sure the RT's audio connector you're not using has the electrical connector cover (NSN 5935-00-973-1732) on

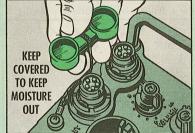

it. If the cover is missing, use a piece of waterproof tape until you can get a cover. This'll keep out moisture that can be the keying culprit.





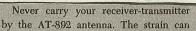



pull the base of the antenna apart and put a big dent in your communications.

Pick the RT up by the case. Even better, pick it up in its harness.

And, of course, you wouldn't think of operating your radio set without an antenna! So, you also want to be sure you're operating your set with its antenna and a good working connection.

When you screw your whip antenna into the antenna mount, continue screwing it



until the antenna is flush with the top of the mount. To knock vibration wobbles



that can knock a good antenna contact, snug the antenna into the mount every now and then.




You might even put a sliver of rubberband or pencil eraser on the threads before screwing it into its receptacle.







After you're through communicating and you're putting away the ribbon-type antenna, watch the way you bend or fold

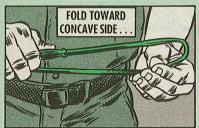


it. That AT-892 has to be folded toward

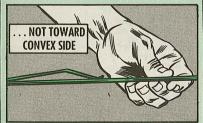

the concave side before pushing it into the carrying bag.

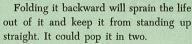

While you're taking care of antennas, check out the ferrule on that AT-271A. If the antenna has a little age on it the

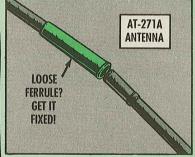

ferrule may get loose or slide around. When this happens get your antenna to your support for repair or replacement.

And, here is another tip for your AT-271A. It is a tip cap (NSN 5820-00-259-5009) that gives the antenna added protection.









There are several steps to follow when you install the magnesium battery (NSN 6135-00-926-8322) so the battery plug will not get bent or the battery connector does not get cracked or broken, making the power pack useless.

After taking off the CY-2562 battery box and getting rid of the bad battery, stand the RT on its handles.

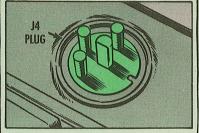


Set the new battery connector on the J4 plug, keeping it level until it's seated.

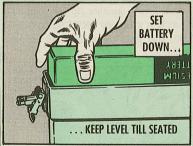

Trying to put the plug and connector together at an angle will damage one or the other nearly every time.



Replace the CY-2562, lock the clamps and your power pack is ready and waiting.

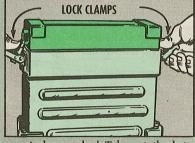

... And remember! Take out the battery when your radio set is not in use.





While you're in the battery box give the connector an eyeballing for the rubber gasket (NSN 5330-00-109-6450). The gasket is there, along with the pressure



relief valve in the CY-2562, to keep hydrogen gas from getting into the radio chassis and exploding.

The valve was applied under MWO 11-5800-211-30-1 (Sep 72), and the gasket info was in TB 750-911-4 (Sep 73). Also, make sure the pressure test screw has been epoxied.

VEHICLE LOUNTED RT

When you're replacing the POWER dummy connector plug on the RT that



is being taken out of its vehicle, seat the plug or cap firmly.

Otherwise, you'll have an open circuit and you'll not be able to transmit when you're using the radio as a back-pack set.

And talking about vehicle-mounted radio sets—AN/VRC-53, -64, AN/GRC-125, -160—be sure you unscrew the ANTENNA CONTROL connector in the rear of the

AM-2060 amplifier-power supply all the way out before you try to pull it loose. You might pull the blue insulator of the tack out with the connector




I HOM (WITH

Clean filters make contented shelters.
That's how you can tell that a unit's pulling preventive maintenance on its RATT rigs . . . like the AN/GRC-142 radio teletypewriter set.

There's only one way the shelter's filters can do their jobs. Clean them (you might

REEP FILTERS CLEAN 26-PAIR CABLES Forgetful Fred and Careless Charlie types take a heavy toll in 26-pair cables and shelter panels on RATT rigs... all

CABLE CONNECTOR

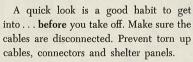

because they don't make a brief walk-

around check before tooling down the

road.

When you disconnect the cables, put covers on the connectors. That protects the contacts. Put the covers on both the receptacles and the connectors.



TT-76 CRYPTO HOOK-UP

The TT-76 teletypewriter with crypto hookup on your GRC-142 RATT rig might tempt you to call support for help if you can't get it working right. However, a quick look might save you a call.

YE RUN A

CONNECTOR


COVER

The main leads should be attached to the 8-contact terminal board under the base of the TT-76, like so:

On the receiver side, the white lead goes to No. 4 terminal. The black goes to No. 5.


ALL'S FINE ...

RIGHT DOWN

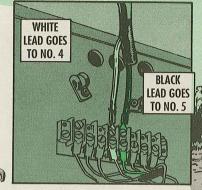

If you're transmitting crypto, the white lead goes to No. 1 and the black to No. 7. Short out No. 2 and No. 6.

RIGHT BRUSHES FOR RIGHT FAN

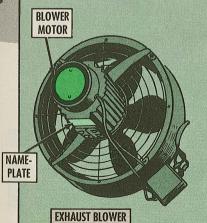

There're 2 different shelter fan models in the AN/GRC-122() or -142() radio teletypewriter set and each model takes different brushes.

If the fan manufacturer is IMC Magnetics, get the brush that goes by NSN 5977-00-686-4476.

If it's made by Rotating Components Division of Instrument Systems, get the brush by Part No. 323-01 (FSCM 02598).

Do the replacing, if needed, during your quarterly PM checks and services, like it says in Ch 2 to TM 11-5815-334-12 (May 70).

45



the repair shop, will save a lot of scrounging when you want to tote your Huey or Cobra, bird men.

Those wheels get a lot of use . . . even some abuse! You've gotta use 'em with tender lovin' care and keep 'em in shape with top-notch PM.

NICE 'N' EASY

When you jack up your birds, take some of the load off the wheels by pulling down on the tail boom. Otherwise, you could blow seals in the hydraulic ram assembly. A Cobra loaded with a weapons subsystem for example, really puts a strain on those babies.

When removing the wheels, release the air pressure slowly.




A SUDDEN JOLT CAN ALSO DAMAGE THE HYDRAULIC PUMP.



for real. Here's why:


There are 3 pins in the front of the wheel assembly that have to be in good shape or you won't get full engagement in the chopper skid eyebolts . . . you could drop the whole shebang!!

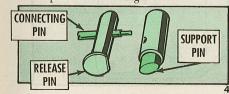

extend all the way and you won't get full engagement in the skid eyebolts.





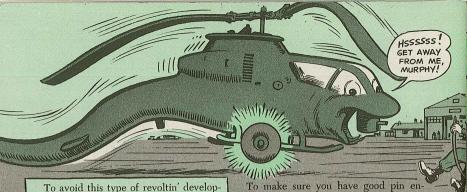


To avoid this type of revoltin' development you can bottom out the release pin against the flange of the axle support. Just add 2 or 3 washers under the head




of the release pin . . . no more bent connecting pins.



To make sure you have good pin engagement always replace worn skid eyebolts

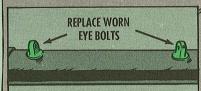

'Course, a good way to move your wheels around the flight line is to make the work-aid tow bar shown in Fig 4-26 of TM 55-1520-210-20 (Sep 71). Just connect the wheels and pull or push 'em, easy as you please.

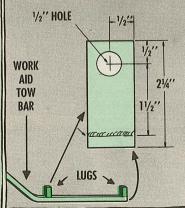


WHATSA MATTER WITH YOU?... I ONLY BLEW UP THE TIRE!

I DON'T BLAME THE OLD GAL! YOU'RE SUPPOSED TO INFLATE TO 45 PSI -- ONLY!



You can even adapt the work aid to your standard tow bar by using only the lifting lugs. Weld the lugs to each extension of the tow bar, near the end. You can then pull the wheels in pairs.

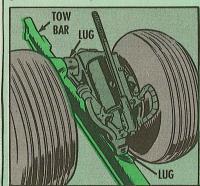

GIVE PM—GREAT GIFT!

Ground support equipment needs preventive maintenance. That goes double for the wheels that are used regularly.

Every 6 months shoot the works with grease, MIL-G-25537. NSN 9150-00-721-8581 will get you a 1-lb can. Follow the lube chart in your Huey -20 TM.

Y 5

While you're at it, give the wheels a good going over.



You should have 45 PSI air pressure in the tires. If the tires are cut or worn to the recapping point, change 'em.

Check operation of the hydraulic pump by moving the handle. You can replace a




shot pump. Just follow the poop in the Huey pub.

Look for loose hose connections and make with the wrenches, if necessary.



Yessir-e-e-e, it takes a heap of TLC to keep those wheels operating. Do your part...OK?



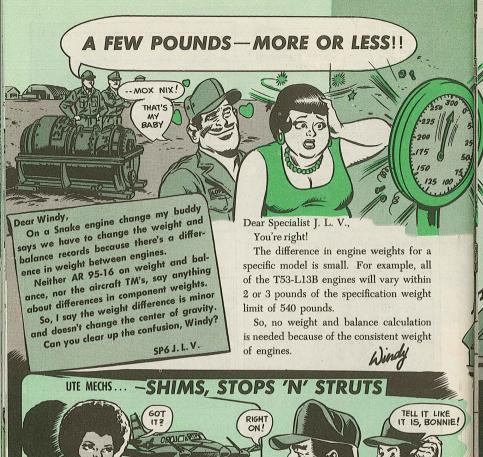

Being in the dark about how to install the nose-gear turn-stop on your U-21A could go out. could give the ship a bum steer.

ed, can get hurt. The nose-gear steering bolt end play.

Leave a clearance between the stop You wanta be sure to have shims, NSN shims and the stop-mount casting lug of 5365-00-087-6884, between the stop and at least .001 inch and no more than .006 the stop-mount casting. Without the inch. Tighten the nose-gear-stop retainshims, the strut, where the stop is mounting bolts so that you leave .01-in to .03-in




Some aircraft units are not reporting compliance with safety-of-flight messages and urgent technical bulletins.

In the name of safety, maintenance types, send your technical bulletin compliance info without delay. Use action code "T", per TM 38-750 (Nov 72), and send the NMP copy of your DA Form 2407

USA Maintenance Management Center ATTN: AMXMD-MD Lexington, KY 40507

Forward follow-up safety-of-flight message info, per para 8 of AR 95-18 (May 73) and para 11b of the TB's. Use a suitable action code from Table A-5 of TM 38-750 and forward the DA Form 2407 to:

> Commander **USA Aviation Systems Command** ATTN: AMSAV-EC P.O. Box 209, Main Station St. Louis, MO 63166

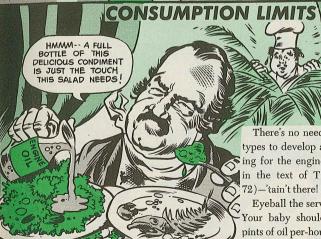



There's no need for you Huey B Model types to develop a case of eye strain looking for the engine oil consumption limits in the text of TM 55-1520-219-20 (Jun

GOOD GRIEF!
GOURMETS
INTERNATIONAL
WILL EITHER KICK

HIM OUT -- OR GIVE HIM A MEDAL

Eyeball the servicing diagram, Fig 1-12. Your baby shouldn't use more than 2.4 pints of oil per-hour.

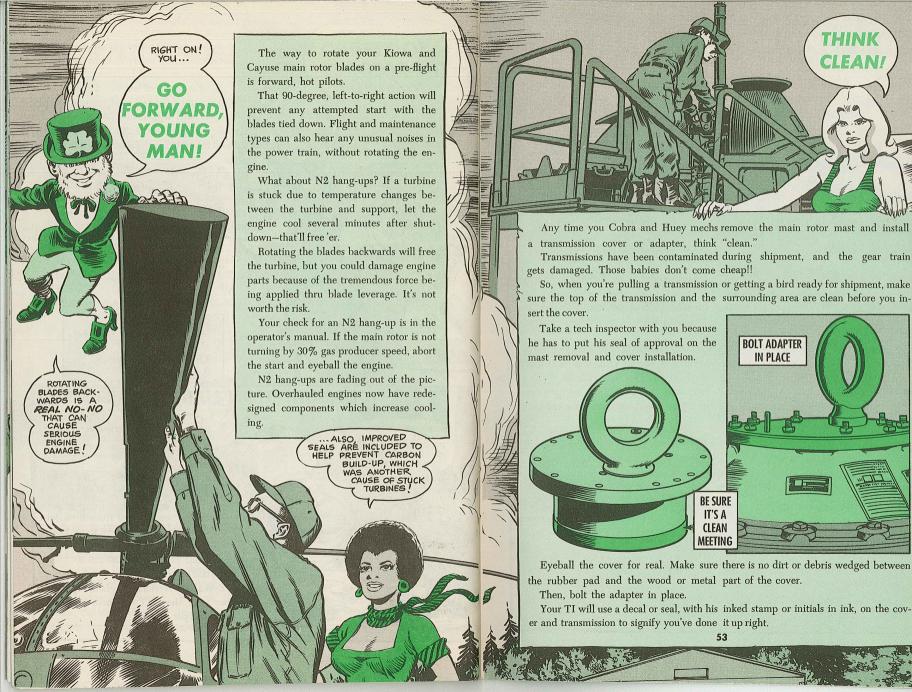

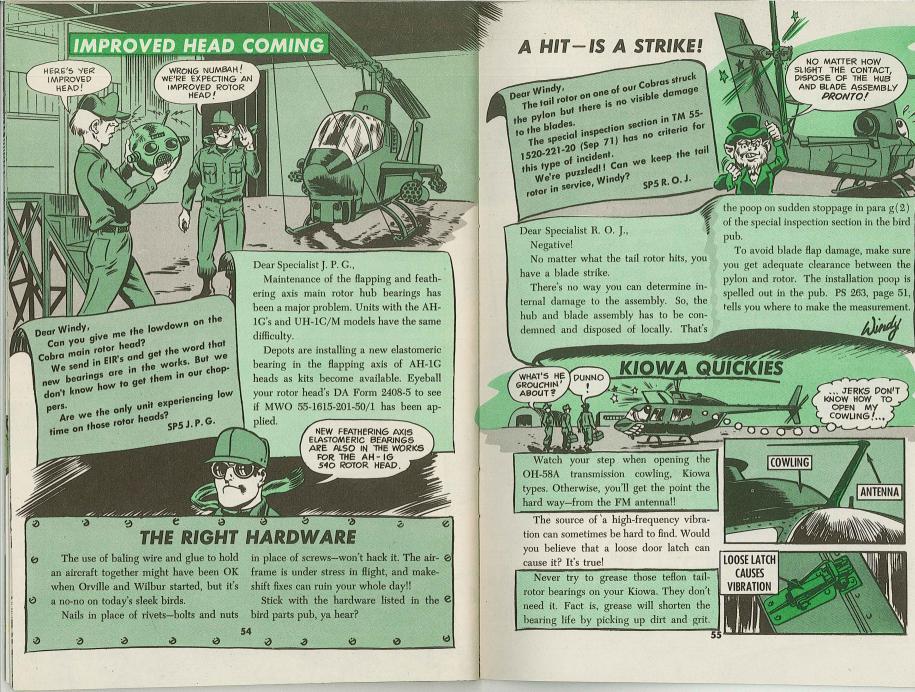



FOR MINE DETECTOR EARPHONES.


A SHOT IN THE EAR

NOW I'LL NEED A 25 OR 26 GAUGE HYPODERMIC NEEDLE

Headsets on AN/PRS-7, NSN 6665-00-38-7998 with model number 4D6000, and AN/PSS-11, NSN 6665-00-181-0369 with model number 4D5000 mine detectors manufactured by the Fourdee Company have a bad habit of losing their hearing slightly at high altitudes.

Here's how to improve your hearing: Get a number 25 or 26 gauge disposable hypodermic needle from a medical unit.

Hold the needle at an angle of about 45degrees toward the center of the earphone with the slope of the tapered point DOWN. Push the needle through ONE and ONLY ONE of the 6 holes in each earphone until it goes through the rubber diaphragm in-

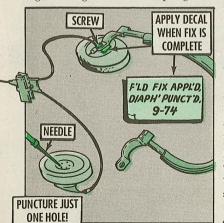

side. Do not force the point against the without a field fix. But these will be idenmetal disk under the rubber diaphragm. tifled so you don't fix the good ones.

Each earphone you fix must have a decal on it which reads, "Fld Fix Appl'd, Diaph Punct'd, 9-74". The decals are free issue. CONUS and overseas units can order the decals by submitting a written request or message to:

UH-OH!

US Army Troop Support Command ATTN: AMSTS-MFT 4300 Goodfellow Boulevard St. Louis, MO 63120

CONUS units can also order the decals by phone, AUTOVON 693-2511.

Both earphones must be fixed and both must have decals. So, remember to order 2 decals for each headset.

After you've fixed the earphones, remove the screw on the back and clean a small area with warm water and detergent. Rinse and dry thoroughly but NEVER immerse the earphone in water.

Take the decal from its card. Watch the sticky back though or you'll spend the next few months wearing the decal. Then press the decal firmly in place on the back of the earphone so that it's visible even when you put the screw back. Replace the screw.

Earphones are being made now with special filters that equalize the air pressure




THE WOLF OID


TEAM!

COME ... NO SHOW FROM THE HOME



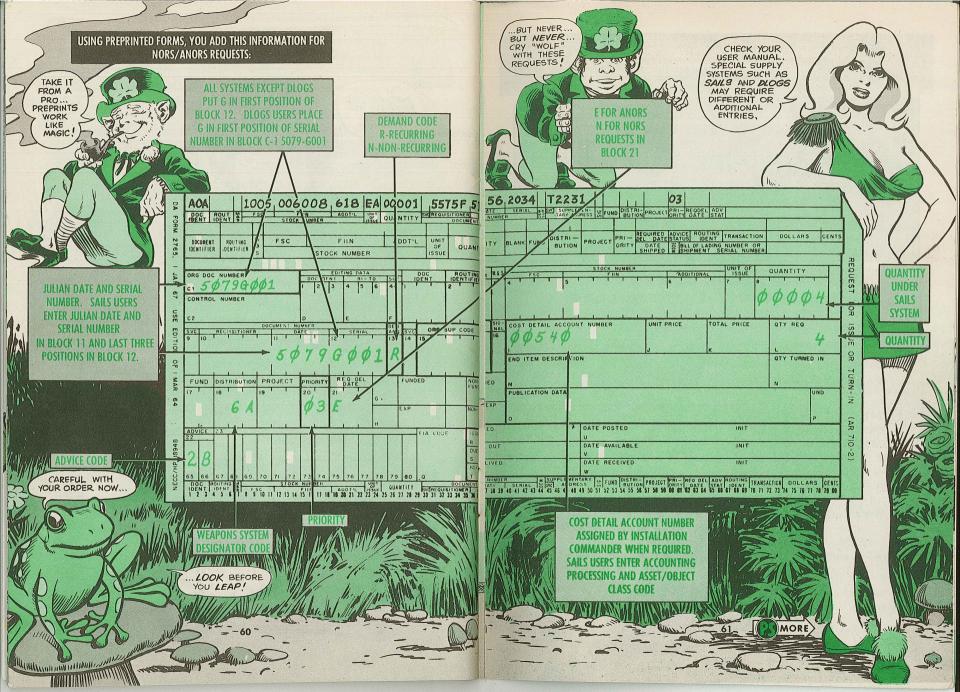

WHEN YOU DO NOT HAVE PREPRINTED FORMS, YOU ADD ALL THE INFORMATION REQUIRED FOR PREPRINTS PLUS:

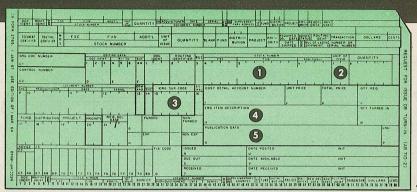

- NATIONAL STOCK NUMBER OR PART NUMBER OF THE ITEM IN BLOCKS 4 THROUGH 6
- 2 THE TWO LETTER ABBREVIATION IN-DICATING UNIT OF ISSUE IN BLOCK 7
- THE LAST 5 DIGITS OF THE UNIT IDENTIFICATION CODE (UIC) IN BLOCK 15.

 SAILS USERS PUT THE ADDRESS CODE OF THE STORAGE ACTIVITY THAT WILL RECEIVE THE ITEM IN BLOCK 15. DLOGS USERS PUT THE UIC IN BLOCK C-2. KEEP AN EYE ON YOUR DA 2765'S. SOME FORMS ARE OUT WITH BLOCK 15 IDENTIFIED AS ORG SUP CODE. IT'S A PRINTING GOOF AND DOESN'T AFFECT THE INFO YOU PUT IN THE BLOCK
- 4 SHORTLINE DESCRIPTION OF THE ITEM IN BLOCK M

5 THE TYPE, NUMBER, DATE AND PAGE NUMBER OF THE AUTHORIZING PUB FOR THE ITEM IN BLOCK O



TAILOR-FIT YOUR MASKHOOD


Having trouble fitting your M6A2 CB mask hood on your M17A1 mask? Relax! The hood's not too small. You just have to be v-e-r-r-r-y careful when you put the hood on the mask.



The hood's eyering opening has a black mark at the top. That mark has gotta line up exactly with the "dimple" in the mask eyering.



Then once you've lined up the "dimple" and the black alinement mark on the hood,

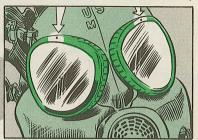

work out the wrinkles around the eyering and voicemitter. That'll guarantee a tight fit when you put on the mask.

Smoothing out the wrinkles also stops any problem with permanent crease in the facepiece when the hood and mask are put in the carrier.


JUST SEE TM 3.4240-258-14, MITAI MASK AND ACCESSORIES (MAR 71), FOR ALL THE DETAILS.


PROTECT YOUR "WATER BOYS"

Water purification sets are tough babies —if you use their chemicals right.

But, you can kill your water purification set if you store chemicals in it.

That's real important whenever you're turning in your set. If you have any chemicals opened, either use them or destroy them. You can store any unopened chemicals but never inside the water purification unit. They'll chew away at the insides if you do.

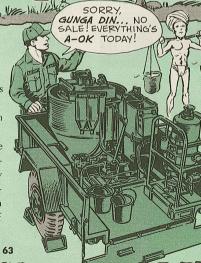

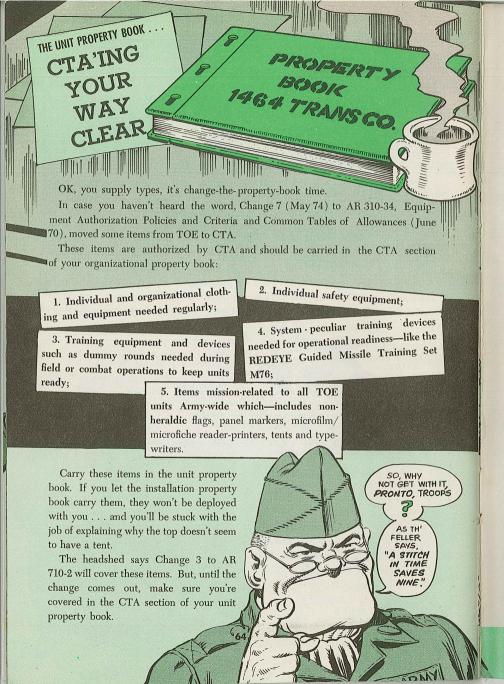



Regulator Goes DX

Your vehicle's 100-amp voltage regulator, NSN 2920-00-900-7993, is now a DX item. Though designed as nonsupply. So turn 'em in—don't toss 'em. Your support got the word on checkout 1240-00-706-4484. They're listed in TM commands 11 Dec 74 by the U. S. Army operators are authorized them. Tank-Automotive Command (AMSTA-M).

Get A Hose Clamp

When rust or corrosion gets the best of your T-195 transmitter's hose clamps in the AN/GRC-46() RATT rig. get new ones. You can get a 23/4 - in screw-driven hose clamp under NSN 4730-00-909-8627, like it says in Para 2-12 of TB 43-0001-9-4 (Aug 74).

M109/M109A1 Drain Fix

the 12 bolts out of the operator's page 4-41.

Strap Happy

Need to replace the strap assemblies on your 4-Deuce mortar's M45 boresight unit? Get the snap strap repairable, these VR's are now in short assembly with NSN 1240-00-706-4483 and the connecting ring strap with NSN and repair in a letter sent to all major 9-1240-278-35P (Oct 69), but

COMSEC Installation Kits

There's a new pub out listing installation kits for COMSEC equipment. SB11-700 (July 74) is a guide to the kits and their NSN's, and what equipment and vehicles they're used with.

Chaparral Turn-In

When you turn in the track, the launch station or other major components of your Chaparral missile Now you can give the primary fuel system for rebuild, include ALL parts filter in your M109-series howitzer its and components. That means the required daily draining without taking commo, too, plus all circuit cards, cables and panels—REGARDLESS OF compartment access panel. TB 43- CONDITION — Otherwise, the whole 0001-36-4 (Oct 74) has the dope on system you turn in may have to be surveyed.

Would You Stake Your Life on the Condition of Your Equipment?

∴U.S. GOVERNMENT PRINTING OFFICE: 1975 - 657-031/8



REALLY BURNS ME UP...

...THE
WAY SOME
GUYS SHUT
THE ENGINE
OFF, TOO
SOON...



BEFORE SIUTIDOWN