



ISSUE 766 SEP 2016



AGM Battery Trick for Recharge M1A2 SEP Tank Slave Starting Procedure Stryker CTIS Settings for Road Conditions Stryker Transfer Case Shifting M1132 ESV, XM1257 ESVV Stryker, Troubleshooting MICLIC Trailer Brakes

M2/M3-Series Bradley's M242 Cover NSN



TACTICAL VEHICLES 10

Up-armored HMMWV Tow Bar, Hardware NSNs Tire and Wheel Assembly NSNs



CONSTRUCTION EOUIPMENT

SEE, HMMH Tire Replacement Tips 5K LCRTF Fork Pin Lubing 120M Road Grader Cab Air Filter Element PM 120M Road Grader Inching Pedal Use, Caution



AVIATION

Shadow UAV Maintenance MQ-1 Series Gray Eagle UAV PM Pointers OH-58A/C Mounting Nuts Mix-up

Duel at Dessau

MISSILES 35 Patriot Outrigger Lubing 36 Javelin Shipping Help 37

SMALL ARMS 37

M240L Short Barrel Regulator NSN 37 MK 19 Machine Gun Clearing Procedure 38-39 M16-Series Rifle, M4/M4A1 Carbine Barrel Clearing Procedure Correction 39



CBRN	43
Mask C2A1 Canister Turn-in	43-44
M26 Decon Wand Nozzle Connection	44-45

COMMUNICATIONS 4

AN/PSN-13A DAGR Software Upgrade Guidance 47-4 AN/PSQ-20/20A Night Vision Goggles Repair 5

	SOLDIER SUPPORT	51
--	-----------------	----

Junctional Tourniquet, MOLLE Bag NSNs 51 LOGISTICS MANAGEMENT 52

	ISO Container MELs	53
21	PS Back Issue Help	54
	EMS NG Error Codes	55
22-23	AAME Awards Reminder	56-57
24-25	DLA eDocs Update	56-57
26	AAAC Training Mandatory	58-59
	EMS Insider Newsletter	59

27-34 Connie's Post Scripts

TB 43-PS-766, The Preventive Maintenance Monthly, is an official publication of the Department of the Army, providing information for all Soldiers assigned to combat and combat support units and all Soldiers with unit maintenance and supply duties. All information published has been reviewed and approved by the agency responsible for the equipment, publication or policition of the information is optional with the user. Masculine pronouns may refer to both genders. The use of product or company names does not constitute endorsement of those products, services or companies by the U.S. Army. The use of non-DoD hyperlinks, along with their content, does not constitute endorsement by DoD or DA. Neither DoD nor DA exercises any editorial control over, and cannot vouch for content on non-DoD websites.

8-9

16

PS, The Preventive Maintenance Monthly (ISSN 0475-2953) is published monthly by the Department of the Army, Redstone Arsenal, AL 35898. Periodical postage is paid at the Huntsville, AL post office and at additional mailing offices. Postmaster: Send address changes to PS, The Preventive Maintenance Monthly, USAMC LOGSA (AMXLS-GP), Bldq. 3303, Redstone Arsenal, AL 35898.

You are invited to send PS your ideas for improving maintenance procedures, questions on maintenance and supply problems and questions or comments on material published in PS.

Just write to:

MSG Half-Mast PS, the Preventive Maintenance Monthly USAMC LOGSA (AMXLS-GP) Bldg. 3303 Redstone Arsenal, AL 35898

Or amail

usarmy.redstone.logsa.mbx.psmag@mail.mil

ernet address: https://www.logsa.army.mil/psmag/pshome.cfm By order of the Secretary of the Army:

MARK A. MILLEY

General, United States Army Chief of Staff

Official:

GERALD B. O'KEEFE

Administrative Assistant to the Secretary of the Army

1617203

60-61





would be a perform PMCS on vehicles and other Army equipment. You're counting on them to look out for potential maintenance problems.

But does it sometimes seem like preventive maintenance gets treated as a "back burner" issue? Does a vehicle have to be deadlined, affecting unit readiness, before maintenance becomes important?


It's not like you can inspect all that equipment yourself. Plain and simple, it takes a team to keep the little things from growing into maintenance nightmares.

So the next time you spot something small—a truck's worn V-belt, a weapon needing lube, loose tank track—teach the operator to be proactive. If he fixes it now, he won't have to worry about it failing and threatening a mission. That's the **preventive** in preventive maintenance!

When PM is moved to where it belongs—the front burner— you'll have a unit that hums along as smoothly as its equipment.

PS 766 1 SEP 16

COMBAT VEHICLES

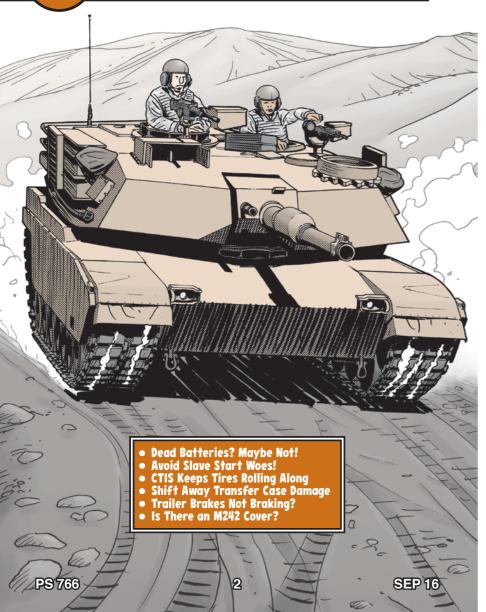

DEAD BATTERIES? MINIE NOW



EVERY SOLDIER KNOWS
THAT REPLACING BATTERIES
CAN REALLY EAT UP YOUR
UNIT'S MAINTENANCE
BUDGET.

NEW BATTERIES FOR JUST ONE MIAI TANK CAN RUN MORE THAN \$2,000!

1. Place a good battery in parallel to the dead battery, positive to positive and negative to negative.

2. Attach the charger's jumper cables to the good or bad battery, positive to positive and negative to negative. You can avoid some minor resistance losses by connecting to the dead battery.

BUT DEAD ABSORBED
GLASS MAT (AGM) BATTERIES
LIKE THE HAWKER MAY NOT
REALLY BE DEAD. THERE'S
A CHEAP FIX FOR BATTERIES
WHOSE VOLTAGE HAS GOTTEN
SO LOW THE CHARGER THINKS
THEY'RE DEAD...

Attach jumper cable in parallel positive to positive and negative to negative




- **3.** Charge for about 15-20 minutes. That pushes amperage into the dead battery, raising the voltage high enough to be sensed by the charger.
- **4.** Remove the good battery.
- **5.** Now charge the bad battery like you would normally.

CHECK OUT THE TARDEC VIDEO ON TRICKING DEAD BATTERIES BACK TO LIFE.

IT'S ON MILTUBE AT: https://www.milsuite.mil/video/watch/newvideo/5996
GO TO THE 2:46 MARK.

PS 766 3 SEP 16

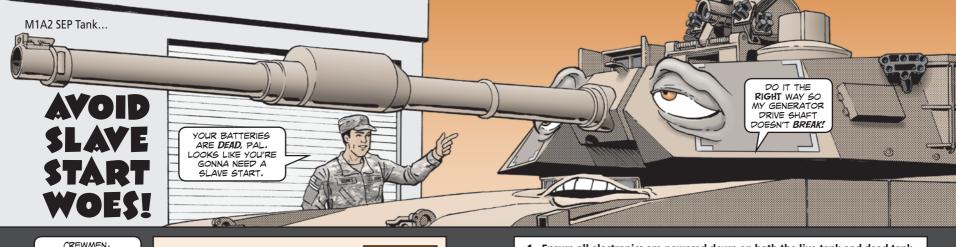

CREWMEN,
SLAVE START YOUR
M1A2 SEP TANK THE
WRONG WAY
AND YOU CAN
SERIOUSLY
DAMAGE

THE GENERATOR
DRIVE SHAFT AND
THE VEHICLE'S
CHARGING SYSTEM.



A BROKEN GENERATOR DRIVE SHAFT MAKES YOUR TANK NMC.

REPLACING THE SHAFT IS A BIG HEADACHE BECAUSE THE POWER PACK HAS TO BE PULLED. IN SOME CASES, YOU MAY EVEN HAVE TO REPLACE THE TRANSMISSION.

YOU CAN AVOID A LOT OF TROUBLE AND EXPENSE BY SLAVE STARTING YOUR TANK THE RIGHT WAY. THE STEPS IN BOLD ARE DIFFERENT FROM WHAT'S IN THE TM...



- Ensure all electronics are powered down on both the live tank and dead tank, including the Force XXI Battle Command Brigade-and-Below (FBCB2).
- 2. To prevent damage, the external slave receptacle should be used whenever the situation allows. On both tanks, connect the battery box power cable by removing the protective cap and remounting the cable from the storage position to the power receptacle.
- For tanks equipped with 4.4.01 and earlier software, set the left battery compartment circuit breaker to OFF.
- **4.** Turn on Master Power for the live tank.
- Start the live tank.
- **6.** Plug the slave cable into the live tank.
- $\textbf{7.} \ \ \text{Plug the other end of the cable into the slave receptacle on the dead tank}.$
- **8.** Turn on Master Power for the dead tank.
- 9. Check that the Parking Brake Set message appears on the improved driver's integrated display (iDID) of the dead tank.
- **10.** Set tach idle on the live tank to ON.
- 11. With iDID on the main menu, press the Power Sources pushbutton on both tanks.
- **12.** Make sure M is highlighted on the NATO UTL PWR A/M pushbutton on both tanks.
- **13.** Press the Battery Start P/A pushbutton until A is highlighted on the dead tank.
- Wait until the dead tank reaches 26 volts. This could take 15 minutes to one hour.
- **15.** Start the dead tank.
- **16.** For vehicles equipped with 4.4.01 and earlier software, follow these instructions. Set the left battery compartment circuit breaker to ON.
- 17. With iDID on the main menu, press the Power Sources pushbutton on both tanks.
- 18. Make sure A is highlighted on the NATO UTL PWR A/M pushbutton on both tanks.

- 0

- **19.** Remove the slave cable from both tanks.
- **20.** Re-cap the slave receptacles.
- **21.** Let the dead tank recharge its batteries for a minimum 30 minutes using its own generator with tach idle on.

PS 766 4 SEP 16



Dear Editor,

I see too many Stryker tires destroyed by improper inflation. One Stryker unit recently had to replace more than 320 tires during a National Training Center rotation.

Too often that's caused by drivers who don't bother to set the CTIS for the conditions they're driving in. Under- or over-inflated tires get seriously damaged and have to be replaced.

That's a lot of work and money that could have been avoided just by following the -10 TM. It tells you exactly how to set the CTIS based on road conditions, as well as vehicle weight.

Regardless of the setting used, keep an eye on the low pressure and overspeed LEDs. They'll let you know if the air pressure is too low or you're traveling too fast for the terrain setting you've selected.

SPC William Taylor 3rd BCT

Editor's note: That's some good advice that'll keep tires rolling along no matter what the conditions.

Setting
CTIS to match road conditions...

...prevents tire damage

Stryker... Shift Away Transfer Case Damage



DRIVERS, THAT GRINDING NOISE
YOU HEAR WHEN YOU SHIFT
YOUR STRYKER'S TRANSFER
INTO LOW GEAR ON
THE FLY IS MORE THAN
JUST ANNOYING.
IT COULD MEAN THAT YOU'VE
DONE SOME SERIOUS-AND
EXPENSIVE-DAMAGE TO THE
TRANSFER CASE.

YOU MUST BRING YOUR VEHICLE TO A COMPLETE STOP BEFORE SHIFTING THE TRANSFER INTO LOW. IF YOU PON'T, THE TRANSFER CASE MIGHT START COMPLAINING LOUPLY.

VITAL PARTS CAN CRACK, MEANING YOU MIGHT BE UNABLE TO SHIFT IT AT ALL.

REPLACING THE TRANSFER CASE WILL SET YOUR UNIT BACK MORE THAN \$21,000 FOR A FLAT BOTTOM STRYKER AND MORE THAN \$38,000 FOR A POUBLE V-HULL STRYKER!

HERE'S THE **RIGHT WAY** TO SHIFT YOUR STRYKER'S TRANSFER CASE INTO LOW GEAR...

1. Come to a full stop.

- 2. Apply the service brakes.
- 3. Put the transmission in neutral.
- 4. Apply the parking brake.


5. Shift the transfer to low.

- 6. Release the parking brake.
- 7. Put the transmission in D (drive).

NOW YOU'RE READY TO DRIVE WITHOUT DOING ANY DAMAGE!





Bring vehicle to a complete stop and place transmission in neutral

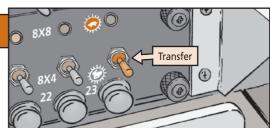

PS 766 6 SEP 16 PS 766 7 SEP 16

Trailer Brakes NOT Braking?

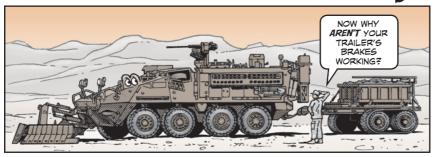

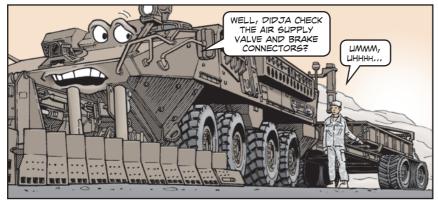


Crewmen, when you're pulling an M200A1 modified MICLIC trailer with your ESV or ESVV Stryker, the last thing you want is for the trailer's brakes to fail. That can mean a banged up Stryker and trailer. It could even get you and your fellow crewmembers hurt!

But before calling your mechanic about a problem with trailer brakes, do a couple


checks first. You might be able to take care of the problem with a simple fix.

First, make sure the trailer brake air supply valve on the driver's instrument panel is engaged. If it isn't, the trailer brake lines won't get any air and the brakes won't be able to do their job.

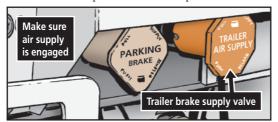


If the valve is engaged and the brakes still don't work, make sure the trailer brake connectors at the front and rear of the vehicle are connected. While you're at it, look closely for damage or leaks.



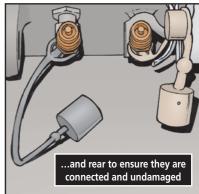

If the air supply valve is engaged and connectors are good to go but the brakes still don't work, tell your mechanic right away.

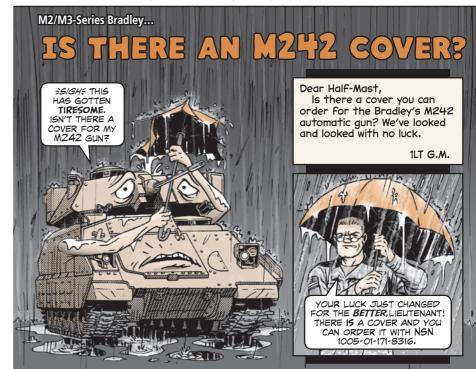

PS 766 8 SEP 16

PS TACTICAL VEHICLES



Up-armored HMMWVs...


Searchin' for a Tow Bar



Dear Half-Mast,

I need help! I've looked high and low, but can't find NSNs for the tow bar and tow bar adapters for up-armored HMMWVs.

SFC E.A.P.

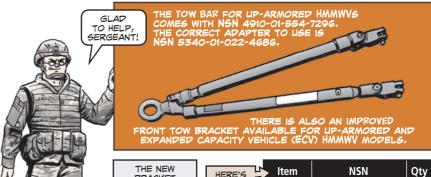

BRACKET REQUIRES DIFFERENT SCREWS AND LOCKNUTS THAN THE ORIGINAL SETUP, BUT THE WASHERS AND MOUNTING **TORQUE** (90 LB-FT) ARE UNCHANGED.

HERE'S	Item	NSN	Qty
WHAT YOU'LL	Bracket	2540-01-599-0075	1
NEED TO ORDER:	Screw	5305-00-071-2071	2
ON DIN	Locknut	5310-01-548-1848	2
	Washer	5310-01-121-1703	4

THE WASHERS ARE UNCHANGED FROM THE ORIGINAL CONFIGURATION AND DON'T NEED TO BE REPLACED UNLESS DAMAGED.

PS 766 11 **SEP 16**

Tactical Vehicles, Trailers, CCE/MHE... One Stop Shop for Tire and Wheel Assemblies

EYEBALL THE CHARTS BELOW FOR THE LATEST TIRE AND WHEEL ASSEMBLY NSNS FOR ARMY TRUCKS, TRAILERS, CONSTRUCTION VEHICLES
AND MATERIAL HANDLING EQUIPMENT!

HMMWVS				
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size	
HMMWV load range D	01-493-5859	01-333-7632	37.0/12.5R16.5	
HMMWV load range D (24 bolt rim w/ Michelin Baja or Goodyear MTR tire)	01-558-2138	01-541-4090	37.0/12.5R16.5	
HMMWV load range E (20 or 24 bolt rim w/ Goodyear MTR or Michelin Baja T/A tire)	01-563-8620	01-563-8328	37.0/12.5R16.5	

Medium Tactical Vehicles					
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size		
FMTV A0/A1 (M1078-M1090 M1092, M1093 M1096, M1148 M1157)	01-500-4619	01-356-9098	395/85R20 MV/T (Goodyear) MIL395/85R20 XML; (Michelin)		
FMTV LTAS (A1P2)	01-571-5857	01-564-6172 (Goodyear) 01-572-6017 (Michelin)	395/85R20 MV/T (Goodyear) 395/85R20 XZL+ (Michelin)		
LAV	01-532-5635	01-527-8260	325/85R16		
M939A1/A2 without ABS	01-506-7243	01-214-1344	14.00R20		
M939A1/A2 with ABS	01-506-8319	01-473-3997	11.00R20		
M1117 ASV	01-478-0593	01-479-4200	14.00R20		

Light and Medium Trailers					
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size		
M129A4 semitrailer	01-514-7903	01-045-3688	11.00R22.5		
M172A1 trailer	01-506-7650	01-325-1934	10.00R15		
M149A2, M200A1 D, M313, M750, M373A2	01-611-7619	01-063-7947	10.00R22.5		
M103A3, M105A3, M149, M149A1, M200A1 SS, M105A2, M332	01-528-9461	01-063-7947	10.00R22.5		
M796A1 bolster trailer	01-514-7909	01-204-4488	12.00-16.5		
M860A1	01-506-7315	01-500-4505	445/65R22.5		
M870 trailer	01-611-6025	01-434-8732	285/70R19.5		
M870A1 trailer	01-610-6931	01-610-0236	285/70R19.5		
M870A3 trailer	01-571-7223	01-518-5292	275/70R22.5		
M871, M871A1, M871A2	01-506-4129	01-481-5378	11.00R22.5		
M871A3	01-508-2786	01-519-0940	255/70R22.5		
M872-series semitrailer	01-547-4136	01-506-0388	11.00R22.5		
M872A4, M871R, M871A1R, M871A3R & M871A2R	01-584-7914	01-569-2153	11.00R22.5		
M967A2/M969A3	01-527-4609	01-045-3688	11.00R22.5		
M1061A1	01-514-7909	01-204-4488	12.00-16.5		
M1062 trailer	01-506-7648	01-045-3688	11.00R22.5		
M1076 PLS	01-500-4991	01-357-8333	15.50/80R20		
M1082, M1095 FMTV trailer	01-542-7405	01-518-5292	275/70R22.5		
M1101/1102 trailer load range D	01-493-5859	01-333-7632	37.0/12.5R16.5		
M1101/1102 trailer load range D (24 bolt rim w/ Michelin Baja or Goodyear MTR tire)	01-558-2138	01-541-4090	37.0/12.5R16.5		
M1101/1102 trailer load range E (20 or 24 bolt rim w/ Goodyear MTR or Michelin Baja T/A tire)	01-563-8620	01-563-8328	37.0/12.5R16.5		
M1147 LHS trailer	01-542-7405	01-518-5292	275/70R22.5		

Route Clearance Vehicles					
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size		
Buffalo (front)	01-535-9462	01-334-2694	16.00R20	$\overline{}$	
Buffalo (rear)	01-535-9459	01-334-2694	16.00R20		
Buffalo (front for hull #'s 65-current)	01-554-6621	01-334-2694	16.00R20	PS M	OR
RG31 (MK2 and MK3)	01-541-5364	01-537-4093	365/80R20		

PS 766 12 **SEP 16**

MRAP Vehicles				
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size	
BAE RG33/RG33 HAGA	01-555-4810	t01-552-5577	395/85R20 XZL	
BAE RG33/RG33 HAGA PLUS	01-563-0583	01-561-7314	16.00R20 XZL	
BAE TVS Caiman	01-555-4749	01-559-2516	395/85R20 XML	
BAE TVS Caiman PLUS	01-565-2137	01-564-6172	395/85R20	
GDLS RG31 365 w/steel rim	01-560-8477	01-388-6679	365/85R20 XZL	
GDLS RG31A2 365 w/ aluminum rim	01-572-5907	01-388-6679	365/85R20 XZL LR J	
GDLS RG31A2 395 w/ aluminum rim	01-572-5445	01-552-5577	395/85R20 XZL LR J	
M-ATV	01-576-5896	01-572-6017	395/85R20 XZL+LR J	
M-ATV UIK	01-592-6682	01-334-2694	16.00R20 XZL	
Navistar DASH	01-570-6352	01-572-6017	395/85R20 XZL+LR J	
Navistar DASH ISS & Ambulance	01-584-5955	01-334-2694	16.00R20	
Navistar MaxxPro & MaxxPro PLUS (front axle)	01-555-5456	01-552-5577	395/85R20 XZL	
Navistar MaxxPro PLUS (rear axle)	01-565-5657	01-561-8321	12.00R20	

Line Haul Tractors				
Vehicle	Size			
M878A2	01-514-5105	01-507-3633	11.00R22.5	
M915A2 (front), M969, M969A1/A2, M871, M129A2C, M129A3	01-506-4125	01-045-3688	11.00R22.5	
M915A2 (up-armored)	01-537-8294	01-465-5823	12.00R22.5	
M915A3	01-506-4128	01-481-5378	11.00R22.5	
M915A3 (up-armored)	01-537-8297	01-465-5823	12.00R22.5	
M915A2/A4 (rear), M871/A1/A2	01-506-4129	01-481-5378	11.00R22.5	
M915A4 (up-armored)	01-537-8299	01-465-5823	12.00R22.5	
M915A5	01-615-1443	01-603-9820	315/80R22.5	
M916A1/A2 (rear)	01-506-4133	01-436-3334	315/80R22.5	
M916A3 (up-armored front)	01-557-2625	01-552-6448	425/65R22.5	
M916A3 (up-armored rear, right outer, left inner)	01-584-7917	01-514-3999	315/80R22.5	
M916A3 (up-armored rear, left outer, right inner)	01-584-7915	01-514-3999	315/80R22.5	
M917A1 (front)	01-506-4131	01-436-3332	385/65R22.5	
M917A1 (rear)	01-506-4132	01-436-3334	315/80R22.5	

Heavy Trucks and Trailers			
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size
M977 HEMTT w/o CTIS	01-477-1660	01-334-2694	16.00R20
M1070 HET & M1074/M1075 PLS trucks w/CTIS	01-506-2715	01-334-2694	16.00R20
M373A2/M750 trailer	01-506-5910	00-262-8677	9.00-20
M989A1 HEMAT trailer	01-506-7324	01-452-0605	385/65R22.5
M1000 HET trailer	01-506-5762	01-323-4813	215/75R17.5


MHE and Construction Vehicles*				
Vehicle	Assembly, NSN 2530-	Tire, NSN 2610-	Size	
4K RTFL (JI CASE M4K)	01-506-6873	01-320-0460	15.00-19.5	
4K Entwistle forklift	01-596-0860	01-320-0460	15.00-19.5	
5K LCRTF (right side)	01-621-5737	01-506-0391	380/75R20	
5K LCRTF (left side)	01-621-3685	01-506-0391	380/75R20	
6K VRRTFL (right side)	01-518-3656	00-726-5164	17.50-25	
6K VRRTFL (left side)	01-518-3659	00-726-5164	17.50-25	
10K ATLAS (right side)	01-416-1035	01-459-0440	17.50-25	
10K ATLAS (left side)	01-514-8514	01-459-0440	17.50-25	
ATLAS II (right side)	01-572-4923	01-553-3398	17.5-20	
ATLAS II (left side)	01-572-2281	01-553-3398	17.5-20	
50K RTCH (Caterpillar)	01-506-6885	01-114-3732	35.00/65R33	
50K RTCH (Kalmar)	01-484-1419	01-483-5851	29.50-35	
924G/H wheel loader (right side)	01-617-0921	00-726-5165	20.50-25	
924G/H wheel loader (left side)	01-617-1879	00-726-5165	20.50-25	
CS-563D vibratory roller (armor)	01-572-7187	01-559-2780	23.1-26 (12 ply)	
HMEE-1, tan	01-618-8466	01-627-2267	445/80R25	
HMEE-1, green	01-598-4010	01-627-2267	445/80R25	
M10A 10K (right side)	01-506-6884	00-726-5168	20.50-25	
M10A 10K (left side)	01-527-9583	00-726-5168	20.50-25	
MW24C (right side)	01-581-5782	01-726-5165	20.50-25	
MW24C (left side)	01-584-7913	01-726-5165	20.50-25	
SEE	01-527-9584	01-220-6413	12.50R20	

*NOTE: There are no tire and wheel assemblies available for the 613C, 621B, and 621G scrapers; the 120M road grader; and the M400T/W skid steer loader.




PS 766 14 SEP 16 PS 766 15 SEP 16

PS CONSTRUCTION

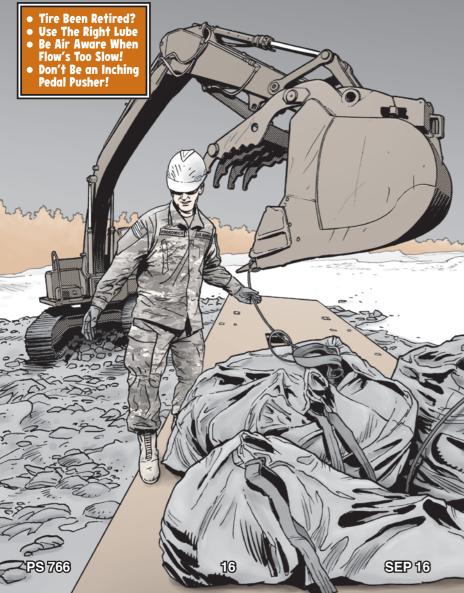

SEE, HMMH...

TIRE BEEN RETIRED?

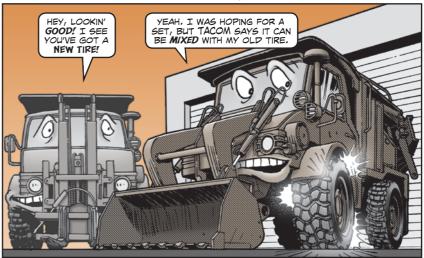

Dear Half-Mast,

We ordered the Michelin 12.520MPT XL tire, NSN 2610-01-220-6413, for our unit's small emplacement excavator (SEE) and high-mobility material handler (HMMH).

But the replacement tire we received is a Michelin 335/80R20MPT XZL. Is this a mistake? Or can we use this new tire with the ones already installed on our vehicles?

SFC M.S.F.



THE MICHELIN 12.520MPT XL TIRE HAS BEEN DISCONTINUED, SERGEANT.

THAT NON WILL ONLY BRING THE MICHELIN 335/80R20MPT XZL TIRE NOW.

BUT BOTH TIRES HAVE THE SAME DIAMETER, SO TACOM SAYS IT'S OK TO USE THEM TOGETHER ON THE SAME AXLE.

FOR BEST PERFORMANCE, HOWEVER, YOU SHOULD ALWAYS TRY TO USE THE SAME TIRES ON EACH AXLE.

REGARDLESS, DON'T MIX A WORN TIRE (LESS THAN 11/32 TREAD DEPTH) WITH A NEW TIRE ON THE SAME AXLE. THAT'LL WEAR OUT THE NEW TIRE FASTER.

PS 766 17 **SEP 16**

5K LCRTF... USE THE RIGHT LUBE







Operators, don't use GAA to lube the fork pin on the 5K light capacity rough-terrain forklift (LCRTF).

Grease attracts dirt, grit and sand like a magnet. That combo acts like sandpaper, scoring the bushings inside the fork tines as they slide over the pin. Eventually, the bushings wear out and break apart.

To keep those bushings in working order, clean off any old GAA with dry-cleaning solvent and re-lube using dry-film lubricant, NSN 9150-01-260-2534. You'll find the word in Section H of Card 19 in LO 10-3930-680-13 (Dec 13).

And if a bushing is already damaged, have your mechanic replace it with NSN 3120-01-618-8082.

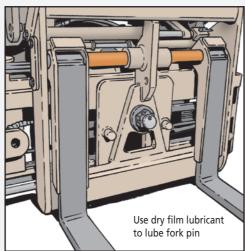

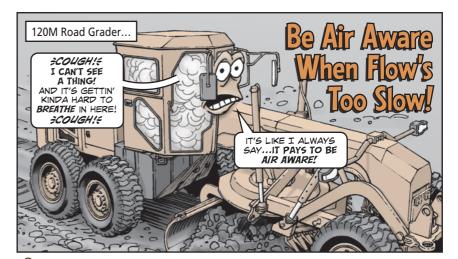


perators, when it comes to the inside and outside air filter elements for your 120M road grader's cab, you need to be air aware.

Dirty filter elements mean dirty air inside the cab. Clean elements keep clean air circulating—and you breathing easy—while out at the dusty worksite.

So if you find yourself coughing a little too much while in the driver's seat, try this:

- 1. Check the air inlets for sand or dirt buildup. Ice and snow can be a problem during cold weather.
- 2. Pull both filter elements and tap them gently against the palm of your hand to remove as much trapped dirt, dust and sand as possible. Just be careful not to bang an element against anything hard. That will bend its sealing edge or crush the filtering material. Then you've got bigger problems than a clogged element.




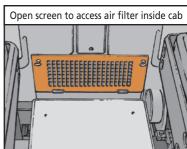

3. If available, clean the elements with low-pressure air (30 psi or less). If not, make sure it gets done when you get back to the motor pool.

You'll find more information on cab filter element cleaning in WPs 0013-38 and 0013-41 of TM 5-3805-293-10 (Dec 10).

PS 766 18 **SEP 16** PS 766 19 **SEP 16**

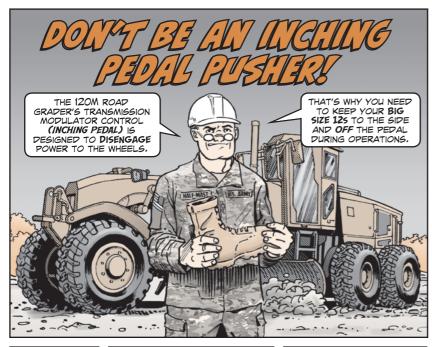


A BOOT THAT RESTS ON THE PEDAL WILL ENGAGE AND DISENGAGE THE VEHICLE'S DIFFERENTIAL.

THAT OVER-PRESSURIZES THE TRANSMISSION AND BLOWS THE INTERNAL TRANSMISSION DIFFERENTIAL SEAL.

YOUR GRADER IS GOING NOWHERE THEN!

Don't rest foot on inching pedal

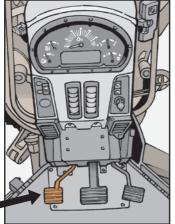

HERE ARE TWO MORE
CAUTIONS TO KEEP IN MIND
ABOUT THE INCHING PEDAL...

- Avoid prolonged use of the inching pedal when moving heavy loads. Instead, shift into a lower gear to match load conditions, particularly if the grader is stalling out.
 It's OK to use the inching
- It's OK to use the inching pedal as a clutch for directional changes. The machine is designed to "shuttle shift."

SEP 16

YOU'LL FIND THIS INFO IN WP 0005-25 OF TM 5-3805-293-10 (DEC 10).





Dear Editor,

While helping keep the Shadows of the Oklahoma National Guard Flying high, I've come up with a few suggestions for other units:

Do Refresher Training

For a long time, contractors did much of the Shadow maintenance. But Soldiers are now again responsible for the maintenance. Warrant officers and senior NCOs need to refresh their crews' skills in maintaining the Shadow. A few hours of training and supervision can help prevent major and expensive problems later.

Soldiers especially need training on how to fill out forms and records from DA Pam 738-751. Things won't get fixed if Soldiers fill out the forms wrong.




Don't Forget Ground Support Equipment and Trucks During PMCS

No matter how well you've taken care of your Shadows, they won't be doing much flying if you've ignored the ground support equipment and trucks during PMCS. When you PMCS the Shadow, PMCS them, too.



Keep Tools Calibrated

There are several Shadow tools that require calibration by TMDE. Make sure the tools are enrolled with TMDE so they can keep track of when they are due for calibration. Stagger the calibration dates for the different tools so they don't come due all at the same time.

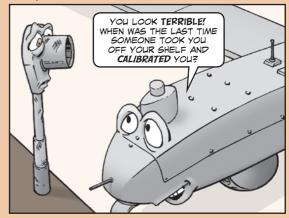

Make Sure Everyone Reads Messages Sent to Field

Maintenance and operation instructions are often updated through these messages, so it's critical everyone reads and heeds them. We solved that problem by making the messages into a reading file. That way every operator and maintainer must sign off that he's read and understood the messages.

Pay Careful Attention to Aircraft and Vehicle Grounding During Fueling Operations

The Shadow's fuel is extremely flammable, especially during cold, dry weather. A spark could set it off. For grounding info, see TM 1-1550-689-23¢P or TM 1-1550-1689-23¢P.

CW2 Thomas Seal

Editor's note: *Not a shadow of a doubt that these are good tips, Chief! Thanks.*

PS 766 23 SEP 16

MQ-1 Series Gray Eagle Your Eagle Soaring

TM REALLY

SOARING THANKS

TO THESE TIPS!

Dear Editor,

While maintaining our Gray Eagles, we've come up with a few ways to help Eagles soar.

Before flight, check for loose brake rotor screws. We had one screw work loose during normal ground operations, which caused a wheel to lock up during landing. Tap on each screw. If it clicks, it's loose. You may be able to tighten the screw yourself. But if it still clicks, it needs to be replaced.

Listen for click while tapping on brake rotor screws

Repairmen, if Loctite 2422 is unavailable, verify the rotor screw torque is 50-60 in-lbs. Don't loosen the screw before checking torque. When you're through, put on a torque strip or mark the screw with an indelible marker.

See Alert Bulletin 15-1687 Rev if Loctite 2422 is available. If you don't have the bulletin, contact your AMCOM LAR or PS: usarmy.redstone.logsa.mbx.psmaa@mail.mil

Until you can follow the bulletin's procedure on securing the screws, check them during your post flight inspection.

Check the safety wire for the main landing gear bolts for looseness or fraying. When crews put on the grounding clamps, they sometimes let the clamps catch the safety wire. That frays and loosens the safety wire, which means the landing gear bolts could work loose. If a wire is loose or showing wear, report it.

Be very sure to turn off the ground power supply before disconnecting the cables to it. If you don't, the cables can arc and be damaged. First turn off the AVIONICS switch, then the OUTPUT and INPUT switches. Now it's OK to unplug the cables.

If the fuel dump tube is leaking, suspect a sticking fuel dump valve on the airframe-mounted fuel tray. Have your repairman check it out.

Watch your head around the two 201 antennas. They are made of hard, unforgiving material. It's easy to bump your noggin against the antennas when you go underneath the Eagle. We had one Soldier suffer a concussion that way.


Give the ALPHA probe a wide berth. One good bump can break it loose from the fuselage. Since it contains the outside air temperature sensor, the yaw string, and the angle of attack sensor, that puts the Eagle out of business. And it's an expensive fix.


Don't yank on the yaw string during PMCS. That damages it. Just give it a gentle tug to make sure it's secure.


Keep the area between the Eagle and the control system clear. If something like a truck rolls through, you lose communication with your Eagle.

> SSG Anthony Dowlen SPC Rodney James SPC Robert Learned 3rd Aviation REGT



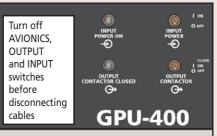

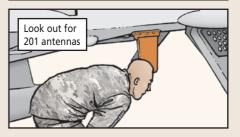

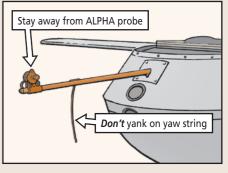

Editor's note: Eagles will indeed soar with your tips.

PS 766 24 SEP 16

USE THE CORRECT MOUNTING NUTS





Mechanics, aviation maintenance action message (AMAM) H-58-14-AMAM-05 says the nuts listed as Item 19 in Fig 61 of TM 1-1520-228-23P are the wrong ones. The nuts are used to mount the swashplate support assembly to the main transmission.

The incorrect self-locking nuts are NSNs 5310-00-982-4912 and 5310-00-807-1469. They're both strong enough, but aren't the right shape to do the job properly. **Do not** use these nuts on the swashplate support assembly, NSN 1615-00-121-6355.

The only self-locking nuts authorized for the swashplate come with NSN 5310-00-807-1476. When you receive the replacement nuts, remove the transmission fairing assembly. Replace each of the eight incorrect self-locking nuts used to mount the swashplate support assembly one at a time. Follow Tasks 5-114 and 5-121 of TM 55-1520-228-23-1.

Make a note until the correct hardware is added in the next TM change. Check out the specific details in H-58–14-AMAM-05 at:

https://asmprd.redstone.army.mil/FileHandler.ashx?file= UFI_a14006ce-0e89-4895-8309-211497a93062



BUT IN THE FINAL DAYS OF THE WAR, THE AMERICANS SENT A NEW TANK TO THE BATTLEFIELD. COULD THIS NEW TANK TAKE ANY GERMAN TANK HEAD ON? THAT WAS THE QUESTION EVERYONE WAS ASKING. THE ANSWER WOULD BE DETERMINED AT THE...

DUEL AT DESSAU

APRIL 20, 1945; 3RP ARMORED DIVISION, OUTSIDE DESSAU, GERMANY: A NEW T-26 SUPER PERSHING, ONE OF ONLY TWO SENT TO EUROPE, SITS IN AN OUTDOOR MOTOR POOL. ITS FIVE CREW MEMBERS STAND IN AWE IN FRONT OF THE TANK.



PS 766 26 SEP 16



WORD IS THERE'S A
KING TIGER HIDING OUT IN
DESSAU, IT'S GOTTA BE
KNOCKED OUT BEFORE
OUR GUYS CAN ADVANCE
INTO THE TOWN.







...KING TIGERS
ARE SCARY, SURE.
BUT WE GOT A TANK
NOW THAT'S JUST
AS GOOD.

MEANTIME, MAYBE DOING SOME PMCS WILL TAKE YOUR MIND OFF THINGS. IT'S THE SAME IN EVERY WAR: WINNING BATTLES STARTS WITH PREPARATION.

NO DETAIL, NO MATTER HOW BIG OR SMALL, CAN BE OVERLOOKED.





DURING WORLD WAR II, PMCS WAS AN IMPORTANT PART OF EVERY SOLDIER'S DAY. THE ARMY'S CHANGED A LOT SINCE THEN, BUT KEEPING VEHICLES AND EQUIPMENT IN WORKING ORDER HAS ALWAYS BEEN A PRIORITY!





THE QUESTION IS THE SAME NOW AS IT HAS ALWAYS BEEN:
WOULD YOU STAKE YOUR LIFE, RIGHT NOW, ON THE CONDITION OF YOUR EQUIPMENT?



PS 766 28 SEP 16

THE DAY
IS ENDING
AND THE
CREW HAS
FINALLY
GOTTEN
THE TANK
PREPARED
FOR THE
NEXT
DAY'S
BATTLE...

EARLY

THE NEXT

MORNING

APRIL 21, THE CREW GATHERS

IN FRONT OF THE SUPER PERSHING.

























PS 766 31 SEP 16

























PS 766 32 SEP 16



THE M4
SHERMANS AND
INFANTRY WORK
WITH THE T-2G,
PRESSING THE
ATTACK.




LATER IN THE DAY, THE T-26 RETURNS TO THE KING TIGER...










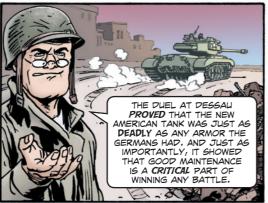

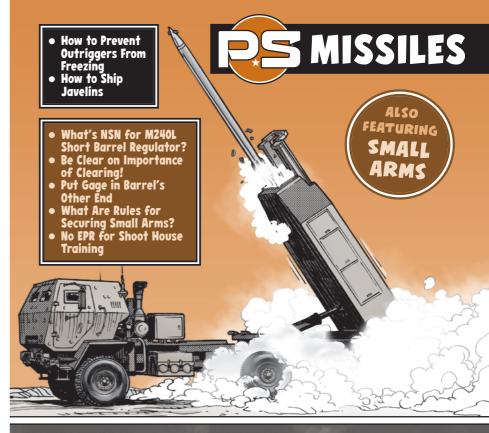



PS 766 34 SEP 16

Patriot Missile System...

UH-OH, MY OUTRIGGERS ARE FROZEN IN PLACE! WISH YOU GUYS
HAD DONE A
LITTLE LUBING
AND EXERCISING.
NOW I'M
DEADLINED.


HOW TO
PREVENT
OUTRIGGERS
FROM
FREEZING




Dear Half-Mast,

We have trouble with the Patriot's outriggers freezing because the leg base and elbow joint pins get bent or misshapen. That deadlines the whole system. Is there a way to prevent this?

1LT R.C.

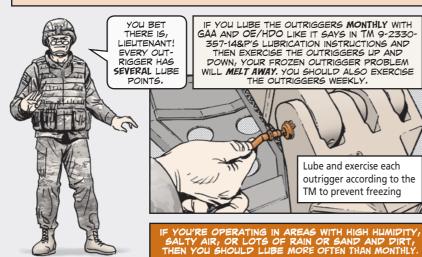

HOW TO SHIP JAVELINS

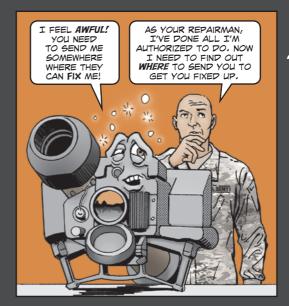

It's critical Javelin missile units know where and how to get the command launch unit (CLU) repaired. If units don't follow the correct shipping procedures, they could damage the CLU or cause repair delays.

To make shipping and repair of CLUs as simple as possible, AMCOM has a phone number to call for help: (888) 528-4862. They will give you step-by-step shipping procedures to get your CLU repaired as soon as possible. Help is just a phone call away.

WHAT'S NSN FOR M240L SHORT BARREL REGULATOR?

Dear Half-Mast,


The M240 machine gun's TM 9-1005-313-23&P (Aug 10) lists NSN 1005-01-512-6424 (PN 13001601) for the gas regulator. But the regulator for the new short barrel has PN 13013485 stamped on it and the regulators for the standard and short barrels aren't interchangeable. Is there an NSN for the short barrel regulator?



SGT P.H.

YOU CAN ORDER THE SHORT BARREL GAS REGULATOR WITH NSN 1005-01-564-6020, SERGEANT,

THE SHORT BARREL PARTS BREAKDOWN WILL BE ADDED TO THE NEXT UPDATE TO THE -23&P.

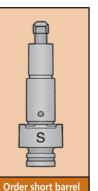

gas regulator with NSN 1005-01-564-6020

PS 766 SEP 16 PS 766 37 SEP 16



Dear Editor.

We've had several instances where MK 19s weren't cleared after being fired at the range. The weapons made it all the way back to arms room with a round casing stuck to the bolt face. There is no way to check if the round is live without retracting the bolt, which could be very dangerous in the close confines of an arms room.


It would be great if PS emphasized the importance of clearing an MK 19 after firing and how to do it.

Douglas Stewart COMET

WE HEARTILY AGREE, DOUGLAG. GUNNERS SHOULD **NEVER** TURN IN AN MK 19 WITHOUT CLEARING IT FIRST AT THE RANGE **OR** AT THE END OF A MISSION, HERE'S HOW...

- 1. Put the weapon on SAFE and keep it pointed down range.
- 2. Remove the case catch bag if necessary.



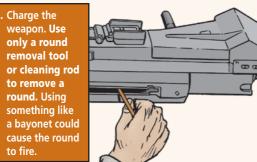

Return the charger handles to the forward position and rotate only one charger handle up.

- 5. Insert the tip of a cleaning rod (or round removal tool) through the receiver rail as close to the bolt face as possible.
- **6.** Raise up on the cleaning rod to force the round off the bolt face and out the bottom of the gun. Catch the round so it doesn't hit the ground.



Dear Editor,


In your article in PS 759 (Feb 16) on the dangers of CCMCK, you showed an M16/M4 barrel being checked with a straightness gage. The gage is being inserted through the muzzle.

But if you check the procedure in WP 0015-24 in TM 9-1005-319-23¢P, it says "Hold upper receiver and barrel assembly in vertical position with muzzle pointed down. Insert gage into chamber end of barrel. Release gage and catch it as it exits muzzle end."

In other words, the gage should be inserted just the opposite of what you show.


CW2 Ryan Harmon


Editor's note: You're absolutely right, Chief. The picture in the TM is wrong, too, and will be corrected in the next update.

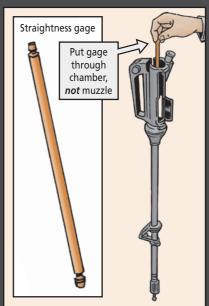

PS 766 38 SEP 16

WHAT
ARE
RULES
FOR
SECURING
SMALL
ARMS?

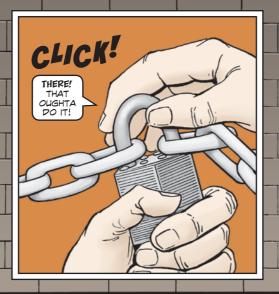

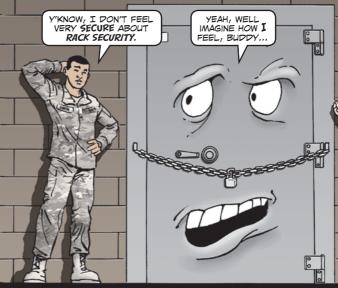



Dear Half-Mast,

I know there are strict rules for securing small arms, but I'm not sure where exactly to find them. Can you help?

Mr. M.C.

YOU BET, SIR! THE WORD ON SMALL ARMS SECURITY IS IN AR 190-11, PHYSICAL SECURITY OF ARMS, AMMUNITION, AND EXPLOSIVES (SEP 13). YOU CAN FIND IT AT: https://armypubs.us.army.mil/epubs/DR_pubs/DR_B/pdf/r190_11.pdf

THE AR HAS EVERY-THING YOU NEED TO KNOW ABOUT ARMS ROOM SECURITY!



- All arms racks or containers must be locked with approved secondary padlocks. In arms rooms that are not manned 24 hours a day, rifle racks and containers weighing less than 500 pounds must be fastened to the floor or wall or fastened together in groups totaling more than 500 pounds with bolts or with chains equipped with secondary padlocks.
- Bolts used to secure racks must be spot-welded, brazed or peened to prevent easy removal. Chains must be heavy-duty hardened steel, welded, straight links, galvanized, and at least ⁵/16-in thickness or of equivalent resistance to the force required to break or cut a secondary padlock.


IF YOU HAVE ANY DOUBTS, CONTACT YOUR LOCAL SECURITY OFFICE, THEY ARE THE EXPERTS.

F YOU NEED CHAINS AND PADLOCKS, USE THESE NSNS...

- NSN 4010-00-149-5583, 550 feet of heavy-duty chain
- NSN 4010-00-171-4427, 20 feet of heavy-duty chain
- NSN 5340-01-408-8434, a secure padlock with a 3-in shackle
- NSN 5340-00-158-3805, a secure padlock with a 2-in shackle



PS 766 41 SEP 16

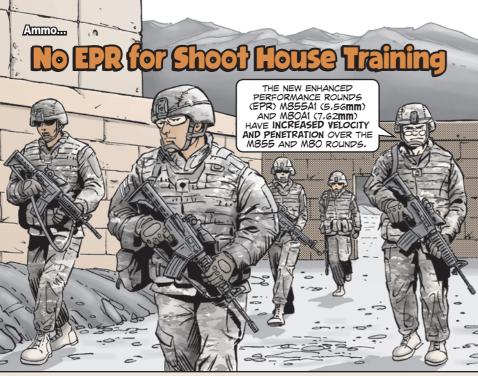



THE EPRS ARE
GREAT FOR THE
BATTLEFIELD,
BUT A
POTENTIAL
SAFETY CONCERN
FOR TRAINING
IN LIVE-FIRE
SHOOTHOUSES.

THESE EPRS COULD PENETRATE THE WALLS OF SHOOTHOUSES.

EPRS ARE APPROVED, HOWEVER, FOR USE IN INDOOR AND OUTDOOR BAFFLE RANGES.

M855 round has green tip

THE ARMY IS DOING SAFETY TESTING ON EPRS, BUT IN THE MEANTIME

DO NOT SHOOT M855A1 OR M80A1 EPRS IN LIVE-FIRE SHOOTHOUSES. M855A1 round has a tarnished bronze tip




NORMALLY, THE SAFEST ROUNDS FOR TRAINING ARE:

- M855
- M80
- M1037 or M973 shortrange training ammo
- Close combat mission capability kit (CCMCK) low-velocity marking rounds

FOR MORE INFO, SEE ALL ARMY ACTIVITIES MESSAGE 059/2016 AT: https://epic.lia.army.mil

QUESTIONS? CONTACT LARRY FITTS, (703) 697-1312, OR EMAIL: larru.fitts.civ@mail.mil Protective Masks...

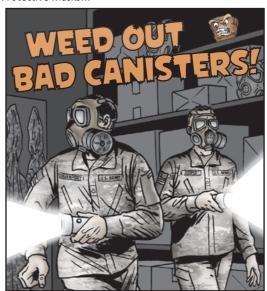



THESE CANISTERS ARE USED WITH M40, M45, M48, JSAM AND M53-SERIES MASKS.

CANISTERS WITH LOT NUMBERS BEGINNING WITH TVI AND IRT ARE LEAKING CARBON.

THE CARBON CAN BUILD UP IN THE OUTLET VALVE AREA, LEADING TO MASK FAILURE. THE CARBON DUST CAN ALSO CAUSE MILID EYE AND RESPIRATORY IRRITATION. IN A CHEMICAL ENVIRONMENT, THE MASK COULD FAIL TO PROTECT.

CBRN SPECIALISTS SHOULD IMMEDIATELY CHECK FOR THE BAD CANISTERS, USE ONLY C2A1 CANISTERS WITH LOT NUMBERS BEGINNING WITH MMB OR RFT. COLLECT THE BAD CANISTERS FOR TURN-IN.



THE LEAKING CARBON IS NOT A CARCINOGEN, BUT... ...IT CAN CAUSE MILD EYE AND RESPIRATORY IRRITATION. IF YOU GET CARBON ON YOUR SKIN, WASH IT OFF WITH SOAP AND WATER. IF YOU GET CARBON IN YOUR EYES, FLUSH THEM OUT WITH WATER.

you can access the SAFETY DATA SHEETS on the carbon at: https://tulsa.tacom.army.mil/SAFETY/download.cfm?filename=soum/tacom_wn/MSDSCALGON12X30.pdf

PS 766 42 SEP 16 PS 766 43



FORWARD DEPLOYED UNITS SHOULD COLLECT ALL BAD CANISTERS AND CONSOLIDATE THEM AT THE **BRIGADE LEVEL**

REPLACEMENT CANISTERS WILL BE PROVIDED ON A ONE-FOR-ONE BASIS.

TACOM CONDUCTED AN EXCHANGE OF CANISTERS AT CAMP ARIFJAN, KUWAIT, AND BAGRAM AIRFIELD, AFGHANISTAN.

CANISTERS WERE LEFT BEHIND AT BOTH LOCATIONS TO HANDLE ADDITIONAL REQUESTS.

FOR INSTRUCTIONS, CONTACT PATRICK LOUDY AT NIPR: patrick.c.loudy.civ@mail.mil OR SIPR:

patrick.c.loudy.civ@mil.smil.mil

OR CALL (586) 282-1558, DSN 786-1558.

ALL OTHER UNITS SHOULD COLLECT AND TURN IN THE BAD CANISTERS BY CONTACTING THEIR LOCAL DLA DISPOSITION SERVICES OR REQUESTING THE JEFS/DARD DISPOSITION REQUEST FORM.

CALL JEFS/DARD AT (229) 639-6500 DSN 567-6500, OR EMAIL: smblogcomjeap@usmc.mil

AFTER FILLING OUT THE FORM, EMAIL IT BACK TO JEFS/DARD AND PROVIDE A COPY TO:

usarmy.detroit.tacom.mbx.ilsc.masks@ mail.mil

AFTER RECEIVING THE SIGNED DD 1348 FROM DRMO OR JEFS/DARD, ORDER REPLACEMENT CANISTERS BY CONTACTING ITEM MANAGER CYNTHIA MURRAY-VICKERSON AT DSN 786-1562, (586) 282-1562, OR EMAIL:

cynthia.l.murray-vickerson.civ@ mail.mil

IN ADDITION, SEND THE DD 1348, UNIT SHIPPING DODAAC, AND DOCUMENT NUMBERS AND QUANTITY TO BE REPLACED TO

usarmy.detroit.mbx.ilsc.masks@mail.mil

QUESTIONS? CONTACT PATRICK LOUDY



M26 Decon...

YOU WON'T NEED A MAGIC WAND TO KEEP YOUR WANDS SPRAYING IF YOU FOLLOW THESE TIPS FROM THE ARMY CHEMICAL SCHOOL



Dear Editor, It doesn't take much to break the variable pressure nozzle for the M26 decon's wands. It's made of soft metal that's easily damaged.




Screwing handle on like this damages variable pressure nozzle

Remember **not** to force things when you screw in any of the hoses and wands. It doesn't take much muscle to damage the hose and wand threads. If they won't screw together easily, they're probably crossthreaded. Back off and see if the threads are damaged. If they're not, try again. Still no luck? Your repairman needs to check it out. The threads may have a burn that can be filed off.

Don't drop the hoses or wands on a hard surface. That can damage threads, too.

Before you store hoses, hang them up for a few minutes so they drain completely. If hoses are stored with water still in them, mildew will areet you next time you decon.

WHOA! YOU DIDN'T DRAIN MY HOSE OR LUBE MY FITTINGS, I'M GONNA BE SITTING HERE FOR QUITE AWHILE AND I NEED CORROSION PROTECTION!

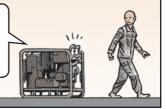

You do not need to use Lagermeister SLG to grease the M26. It's way too expensive. Instead use utility grease, NSN 9150-01-563-3416. It costs less than \$12 for a 14-oz tube.

SSG Justin Maddox SSG Terrell Robinson SSG David Sasberry US Army Chemical School

most nozzle damage: Don't brace the wand nozzle on the ground when you screw in the handle. That quarantees you'll need a new nozzle. Assemble the wands like this:

tight is fine. 3. Turn the lance so its nozzle is resting on your boot and attach the trigger gun to the lance's input. 4. Attach the 33-ft high-pressure hose to the trigger gun. You're done.

Remembering one simple rule can prevent

1. Connect the variable nozzle to the spray lance by turning the lance so

its input is resting on your boot.

any tools to tighten the nozzle-hand


2. Thread the variable nozzle into the output end of the lance. Do not use

If the nozzle is damaged, you don't need to replace the whole wand. There is a variable pressure nozzle available with NSN 4730-12-190-0890.

OUCH! YOU

JUST RUINED MY HOSE THREADS WITH ALL THAT MUSCLE!

SEP 16

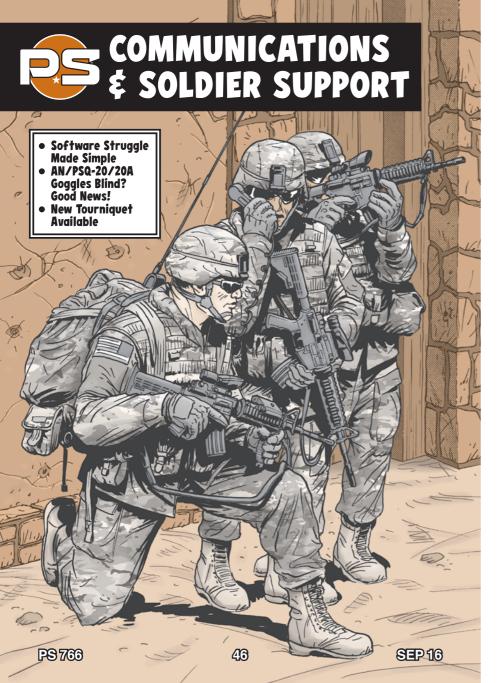

Software Struggle Made Simple



FOR PEAK PERFORMANCE!

HEY! WHAT'S
GOING ON WITH
THAT PAGR? I
CAN'T PROVIDE
MY FULL
CAPABILITIES
BECAUSE
OF ITS OLD
SOFTWARE.

KEEP YOUR DAGR SOFTWARE UP-TO-DATE



Dear Editor,

We've heard that a lot of units are struggling with upgrading their AN/PSN-13A DAGRs to the latest software version, 984-3006-008, that's required by MWO 11-5820-1172-23-1.

Our unit recently completed the upgrades to our DAGR's, so we'd like to share some simple steps on how to do it.

First, you'll need three pieces of equipment:

 A computer (we used an MSD-V2) with the new software downloaded to a known location on your hard drive. The minimum requirements for the computer to use is identified in Paragraph 5.3(4) of MWO 11-5820-1172-23-1. For the download, go to:

https://www.pmpnt.army.mil/instructions-for-access/


(NOTE: If you're a registered user, click on the <u>LOG IN TO PROCEED</u> button. On the next page, click <u>DAGR</u> to access the latest materiel for download. If you aren't a registered user, fill out the simple access form on the Downloads Instructions for Access page.

The download is in a zip format (MULTI-RPG_5.zip). You'll need to extract the MULTI-RPG.exe file for later use.)

- A DAGR/AC power cable, NSN 6130-01-521-3157. It keeps the DAGR from depleting its batteries and losing power during the upgrade.
- 3. A DAGR/PC cable, NSN 5995-01-521-3198. This is used to connect the DAGR to your computer. If this cable isn't available, you can substitute a PLGR/PC cable, NSN 6150-01-375-8664.


Follow these steps to upgrade the software:

1. Connect the DAGR/AC power cable to the DAGR's J4 port.

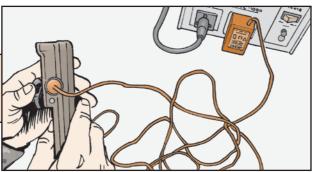

2. Connect the DAGR J2 port to the computer's COM port using the DAGR/PC cable.



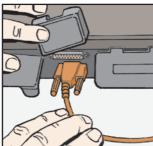

- 3. Power on the DAGR. Verify that the software version loaded is not current.
- 4. Launch the software update by double-clicking the MULTI-RPG.exe file on your computer.



version is shown on both the Power on Display page and on the About Menu page.

Software

Select the check box for the COM port that's being used on the computer to connect it to the DAGR.



- 6. From the drop down menu, select a baud rate of 115200.
- 7. With the DAGR powered up, click <u>Start</u> to begin reprogramming.

8. When the Status bar says, "Power Cycle the Unit," power off and power back on the DAGR.



9. After the restart, the DAGR will continue to reprogram, even though its screen is blank. The computer's green Status bar displays "Program Receiver x%" during this step.




10. When the reprogramming is complete, the Status bar turns blue and says "Finished."



42

- 11. Check the DAGR's software version. It should read **984-3006-008**.
- 12. Turn off the DAGR and disconnect the power and PC cables.
- 13. Now that you've updated your DAGR, record the software update in MMIS by following the instructions in Paragraph 8 of MWO 11-5820-1172-23-1.

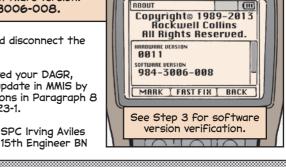


49

15th Engineer BN

THANKS, SPECIALIST AVILES! YOU TOOK A COMPLICATED ISSUE AND MADE IT EASIER!

PS END

AN/PSQ-20/20A Goggles Blind? Good News!

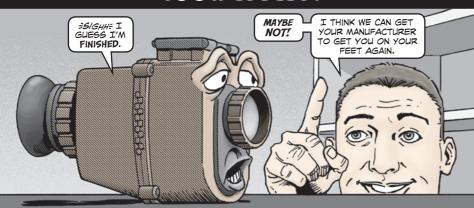

If your AN/PSQ-20, NSN 5855-01-534-6449, or AN/PSQ-20A, NSN 5855-01-603-0489, night vision goggles aren't working, there's good news. You can get them fixed if they qualify.

The fix doesn't cover ancillary items or components of end item for the goggles and is available only if the goggles fail after a thorough inspection following TM 11-5855-322-10 and -23&P or TM 11-5855-335-10 and -23&P. Your 94F repairman does that.

To get your goggles fixed, you'll need a return authorization from the manufacturer. Get it by logging into the warranty repair portal:

https://nvwarranty.gs.exelisinc.com/Login.aspx

New users will need to register by clicking on the <u>HERE</u> button on the left side of the web page. Returning users can log on with their email address, password and DODAAC.

Once you receive a return authorization, fill out a DD Form 1348-1A and ship the goggles to:

Harris

Warranty/Customer Repair Service 7635 Plantation Road

Attention: Marketing Department RA#

Roanoke, VA 24019

IF YOU HAVE QUESTIONS, CALL HARRIS AT (800) 533-5502 OR (540) 563-0371,





NEW TOURNIQUET AVAILABLE

THE US ARMY MEDICAL
MATERIEL AGENCY
(USAMMA) IS FIELDING
A NEW JUNCTIONAL
TOURNIQUET DESIGNED TO
SAVE WARFIGHTERS WHO
ARE INJURED IN THE GROIN
OR ARMPIT AREAS.

THE SAM® JUNCTIONAL TOURNIQUET WEIGHS ABOUT ONE POUND. IT STRAPS ON LIKE A BELT AND INCLUDES TWO INFLATABLE AIR BLADDERS THAT MEDICS CAN INFLATE INDIVIDUALLY OR AT THE SAME TIME.

IT CAN BE POSITIONED IN LESS THAN A MINUTE—A CRITICAL ADVANTAGE FOR COMBAT MEDICS WHO OFTEN JUST HAVE MERE MINUTES TO SAVE A LIFE.





THE COMBAT APPLICATION TOURNIQUET
16 STILL STANDARD ISSUE TO ALL
DEPLOYING SOLDIERS, BUT IT DOESN'T
WORK ON JUNCTIONAL INJURIES.

A JUNCTIONAL TOURNIQUET
MODULAR LIGHTWEIGHT LOADCARRYING EQUIPMENT (MOLLE)
BAG HAS ALSO BEEN DEVELOPED
THAT FASTENS TO A COMBAT
MEDIC'S MAIN M9 BAG.




GET BOTH THE NEW JUNCTIONAL TOURNIQUET AND MOLLE BAG WITH NON 6515-01-646-2617 (ABOUT \$500)...

...OR ORDER THE TOURNIQUET ALONE WITH NSN 6515-01-618-7475 (ABOUT \$300).

EACH SINGLE-USE TOURNIQUET COMES WITH A TRAINING DVD AND STEP-BY-STEP INSTRUCTIONS PRINTED ON THE ACTUAL DEVICE, PLUS AN INSTRUCTION CARD.

THE US ARMY MEDICAL DEPARTMENT CENTER AND SCHOOL ALSO TRAINS NEW COMBAT MEDICS IN HOW TO USE THE JUNCTIONAL TOURNIQUET.

PS 766 50 **SEP 16** PS 766 51 SEP 16

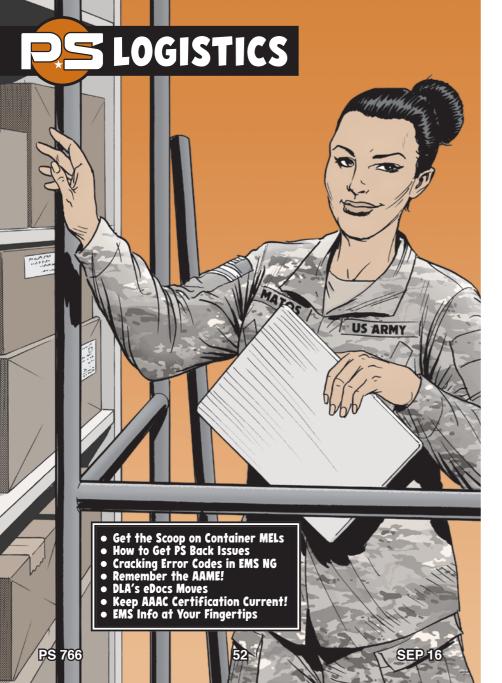

GET THE SCOOP ON CONTAINER MELS







VISIT ACAMS TO GET THE LATEST WORD!

If you've been searching for the maintenance expenditure limits (MELs) on Armyowned ISO containers, you may have found TB 43-0002-1 and TB 43-0002-40. These TBs are outdated and don't include FSC 8150 (freight containers).

The Defense Transportation Regulation Part VI, Chapter 604, *Intermodal Container Inspection, Reinspection, Maintenance and Repair* (Oct 15), states that "DOD Components will establish MELs and waiver criteria for all containers owned."

The Army Intermodel and Distribution Platform Management Office (AIDPMO) serves as the Army's "single" manager for ISO containers and has established MELs for Army-owned containers. You can find established MELs guidance in the Army Container Asset Management System (ACAMS) under the "maintenance" link on the ACAMS help page at: https://acams.sddc.army.mil/dpms/

For ACAMS access, go to: https://eta.sddc.army.mil/ETASSOPortal/default.aspx Or contact the ACAMS help desk at DSN 770-5120, (618) 220-5120, or email:

usarmy.scott.sddc.mbx.acams-helpdesk@mail.mil

For info on ISO containers, contact AIDPMO at DSN 770-4486, (618) 220-4486, or email: usarmy.scott.sddc.mbx.g3-aidpmo-maintenance@mail.mil


For more container guidance, including policy and regulations, see AR 56-4, *Distribution of Materiel and Distribution Platform Management* (Sep 14), at:

http://www.apd.army.mil/pdffiles/r56_4.pdf

and Defense Transportation Regulation Part VI, Management and Control of Intermodal, at: http://www.ustranscom.mil/dtr/dtrp6.cfm

PS 766 53 SEP 16

How to Get PS Back Issues

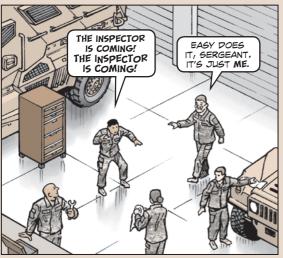



Il open an email on your PC

QUESTION

ARTICLE IDEA

Phone Number

Phone Number

UNITS, IF YOU NEED TO CATCH UP ON YOUR PS COLLECTION SO YOU'RE ALL SET FOR THE NEXT MAINTENANCE INSPECTION, HERE'S HOW...

EMAIL YOUR BACK ISSUE REQUEST FROM A .mil OR .gov ACCOUNT. BE SURE TO INCLUDE YOUR NAME AND MAILING ADDRESS. SPECIFY THE MONTHS OR YEARS AND HOW MANY COPIES OF EACH ISSUE YOU NEED. SEND YOUR REQUEST TO: usarmy.redstone.logsa.mbx.psmag@mail.mil

YOU CAN ALSO REQUEST BACK ISSUES BY CLICKING ON THE REQUEST BACK ISSUE BUTTON AT OUR WEBSITE: https://www.logsa.army.mil/psmag/pshome.cfm

JUST SCROLL DOWN TO THE BOTTOM OF THE TAN-COLORED COLUMN,

NOTE THAT OUR PRINTED BACK ISSUES ARE LIMITED AND ORDERS ARE FILLED ON A FIRST-COME, FIRST-SERVED BASIS.

REMEMBER YOU CAN ALWAYS DOWNLOAD PS IN DIGITAL FORM FROM OUR WEBSITE, TOO.

TO SET UP A MONTHLY SUBSCRIPTION TO PS, FOLLOW THE INSTRUCTIONS AT:

https://www.logsa.army.mil/psmag/ps-subscription.cfm

Software...

CRACKING ERROR CODES IN EMS NG





When it's crunch time at work, getting a software error can be frustrating.

One common question TACOM gets is how to identify errors generated by a diagnostic work package in the Electronic Maintenance System—Next Generation (EMS NG) Viewer.

Here's a shortcut you may not know. There's a complete list of diagnostic error codes in Appendix A of the EMS NG Viewer User's Guide.

To access the guide inside the EMS NG Viewer, select <u>Help Topics</u> from the help menu. There's also a standalone PDF file from the viewer page of the EMS NG technical support website at: http://www.ems-helpdesk.com


The error codes are listed in numerical order and show the displayed error message, along with the event that caused it. This info might not resolve your issue immediately, but it helps you hone in on the problem. Then you can work with the EMS NG help desk to solve it.

If you get an error code that's not identified in the user's guide, contact the EMS NG help desk and it will be added to the guide's next release.


For EMS NG support, call 1-(877) 445-1780, or email:

usarmy. detroit. tacom. mbx. ilsc-electronic-maintenance-system@mail.mil



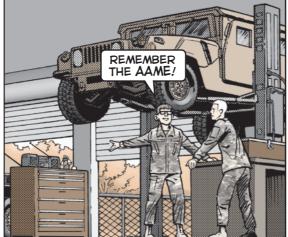



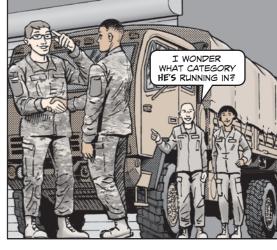

Dear Editor.

I want to remind units that the annual competition for the Army Award for Maintenance Excellence (AAME) is here again.

The AAME started in 1982 to recognize exceptional accomplishments in maintenance and to improve and sustain unit maintenance readiness, efficiency and initiative.

Since its beginning, the AAME has undergone several changes. Currently there are 12 individual categories for the field level and one depot level.

If you're already following your unit's Command Maintenance Discipline Program (CMDP), you're on track to enter the AAME competition for FY16.

The hardest part is writing up the packet. But even that's not as hard as some might think. Simply open up the AAME Program Guidelines and draw up an outline of questions to answer from the message. Then each week focus on one of the bullets from your outline.


During all phases of the competition, your unit will be evaluated by maintenance experts who will constantly provide feedback and best practices on ways to streamline and improve your policies and procedures.

Remember that your entire staff will reap the benefits of doing well in the AAME. Winning the competition in your category means the Chief of Staff of the Army will recognize your unit. Why not get your Soldiers recognized by the Army's top leaders for the hard work they're doing?

For detailed instructions, get the AAME Program Guidelines at:
https://cac.cascom.army.mil/ORD/aame/AAME_Message.pdf
More info on the AAME competition and its history can be found at:
http://www.goordnance.army.mil/AAME/aame.html

SFC Dustin Forgey Ordnance School

Editor's note: Super encouragement, Sergeant. Here's an extra bonus: Winners also get listed in PS!

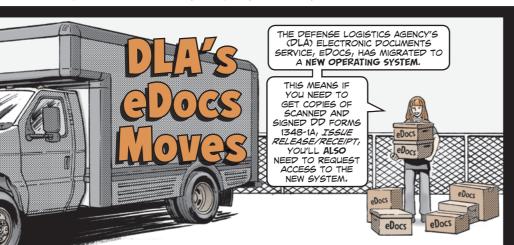

DOWNLOAD A PREFILLED DD FORM 2875, SYSTEM AUTHORIZATION ACCESS REQUEST (SAAR), AND INSTRUCTIONS ON FILLING OUT THE FORM FROM THE NEW EDOCS SYSTEM AT: https://www.dacspr.documentservices.dla.mil/eDocs

WHEN YOUR SAAR IS APPROVED, YOU WILL RECEIVE AN EMAIL WITH INSTRUCTIONS AND HELPFUL HINTS IN ACCESSING THE NEW EDOCS SYSTEM.



PS 766 57 SEP 16



The Army Accident Avoidance Course (AAAC) is mandatory safety training for all Soldiers and civilians who drive Army motor vehicles. The course covers individual risk management, personal responsibility, driving hazard awareness, defensive driving techniques, accident avoidance and motorcycle safety.

AAAC certification must be renewed every four years, per Page 67 in Section 11-7, subsection 4(b) in AR 385-10, *The Army Safety Program* (Nov 13). You can get the pub at: http://www.apd.army.mil/pdffiles/r385_10.pdf

You can find the AAAC in two places. First, you can take it online through the Army Learning Management System (ALMS) at: https://www.lms.army.mil/

You'll need your CAC for ALMS access. In the search box at the top, type "accident avoid," and the course should appear in the list. You can also reach ALMS through AKO by choosing the <u>Self-Service</u> tab and clicking <u>My Training</u>. Look for the ALMS box and click the logo.




An alternate option is to download the AAAC course files to your PC from the US Army Combat Readiness Center (USACRC) website at:

https://safety.army.mil/TRAININGCOURSES/ OnlineTraining/ArmyAccidentAvoidanceCourse.aspx



Publications...

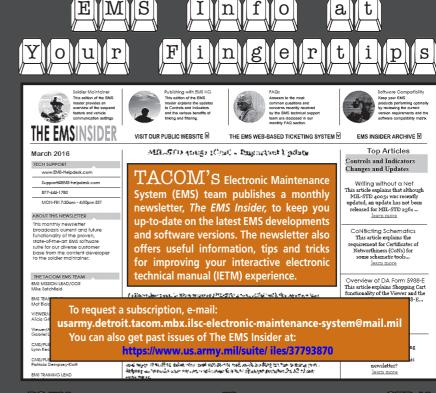

PS 766 59 SEP 16

Connie's POST SCRIPTS

BLACK HAWK MODULATING VALVES TURN-IN

Mechanics, the supply system has seen a drop in unserviceable returns for the Black Hawk's modulating valves, NSN 2995-01-159-4660, (PN 3214072-3). To ensure continued supply, turn in those unserviceable assets *now*.

M915A3 Air System Valve

Get a new air system valve for your M915A3 tractor truck with NSN 4820-01-159-0741. It replaces NSN 4920-01-151-0741, which is shown as Item 53 in Fig 170 of TM 9-2320-302-24P (Feb 06). That NSN brings the wrong part.

PSSST ... GOT VIDEO?

PS Magazine's new interactive mobile app can embed or link to Army maintenance videos or other helpful topics. Have you seen a useful video? Let us know! Send the info/link to:

usarmy.redstone.logsa.mbx.psmag@mail.mil

PLS M6 Dump Body Tarp

Need a replacement tarp for your PLS's M6 dump body modular? Get the one you need with NSN 2540-01-631-8339. NSN 2540-01-449-5775, which is shown as Item 19 in Fig 1 of TM 9-3990-259-13&P, is actually for the M917 dump truck. It's too wide and short for the M6 dump body modular.

HARDWARE SHIPPING BAGS

Cotton-sheeting bags are handy for shipping small, unbreakable items like nuts, bolts and screws. Order what you need with these NSNs:

Size (inches)	NSN 8105-	Qty
3 x 4	00-183-6981	100
3 x 5	00-281-3924	100
4 x 9	00-183-6982	100
4 ¹ / ₂ x 8	00-179-0089	100
5 ¹ / ₂ x 14	00-183-6985	50
6 x 4	00-586-5630	100
6 x 9	00-271-1511	100
6 ¹ / ₂ x 10	00-174-0836	50
7 ¹ / ₂ x 18	00-183-6989	50
8 x 10	00-290-3360	50
8 ¹ / ₂ x 16 ¹ / ₂	00-543-7837	1

M915A3 Door Seal NSN

Get a 16-ft roll of non-metallic seal for the doors on your M915A3 tractor truck with NSN 5330-01-568-3541. Just cut the seal to the correct length. Make a note of this NSN until it appears in the next update to TM 9-2320-302-24P.

UH-60, HH-60M Swashplate Controls Needed ASAP

Mechanics, unserviceable return rates are low for the Black Hawk swashplate control (scissor link assembly), NSN 1615-01-105-8716, (PN 70104-08020-045). That's causing a high demand for the part in the supply system.

So check your storage rooms, supply closets and anywhere else you might have a broken swashplate. If you find unserviceable swashplates lying around, get them turned in *now*.

HMMWV Glow Plug Warning Labels

A warning label to stick on the dashboard of your HMMWV comes with NSN 7690-01-267-7370. The label reminds drivers to wait until the glow plugs are ready before they try to start the engine. The label reads: *WARNING* DO NOT START VEHICLE UNTIL WAIT LIGHT GOES OUT. (Note: Only one label comes with this NSN, not 50 as listed in FED LOG.)

CAT LIGHT SWITCH SAVINGS

On Page 9 of PS 752 (May 15), we told you how to save lots of money on the 924H wheel loader's light switch. NSN 5895-01-544-5202, shown as Item 22 in Fig 46 of TM 5-3805-298-24P, costs about \$605. NSN 5930-00-307-8856 brings the same light switch for around \$80, a savings of \$525. What we didn't mention is that the same light switch can be used on the 924G and 966H wheel loaders as well as the 613C scraper/water distributor.

120M Road Grader Input Lockout Switch

Get the 120M road grader's input lockout switch with NSN 5930-01-580-0114. It includes a red toggle lock to keep operators from bumping the switch during operations. It replaces NSN 5930-01-557-4363, shown as Item 4 in Fig 130 of TM 5-3805-293-24P (Mar 11), which doesn't include the toggle lock.

HAND SANITIZER

Get a package of 24 3-oz bottles of hand sanitizer with NSN 6508-01-535-5409. The foliage green bottles are made to withstand the heat and can be opened with just one hand. This sanitizer kills 99.99 percent of most common germs.

YELLOW SAFETY PAINT

Get a 5-gal container of yellow safety paint with NSN 8010-01-019-1776. This water-based latex is used to paint guide marks and warning lines inside your motor pool. It's non-flammable and presents fewer health and safety hazards than the old oil-based paint. Before disposal, check with your environmental safety office for state or local regulations on latex paint waste.

DLA Customer Assistance Handbook

The latest edition of the DLA Customer Assistance Handbook is available. Access the handbook online or order a hard copy at:

http://www.dla.mil/CustomerSupport/Resources/Communications.aspx Questions? Email: handbook@dla.mil

DISTRIBUTION: To be distributed in accordance with the initial distribution number (IDN) 340312, requirements for the TB 43-PS-Series.

Would You Stake Your Life on the Condition of Your Equipment?

PS 766 60 SEP 16

