

Issue 89

PS

1980 Series

THE
PREVENTIVE
MAINTENANCE
MONTHLY



Dear Mr. Ford,

Looks like we're off to a good year again, and I'm wondering about an about an extra machine you had mentioned.

None of our machines could be changed either a while, and the MR's could not be some standard type machine for us, the work. Now that we've gotten down to business, the MR's have been tucked up the chimney.

Do you still like to know:

Do we still have to take these modifications?

If so, are the parts still being ordered?

If the MR's are not to be replaced any, will we get credit when purchasing the MR's being ordered?

If a machine or equipment gets damaged because a lot of MR's are in the MR's machine, who's responsible when a statement of charges is to be sent?

Yours truly,
Edith G. H. S.

CASE CLOSED

Dear Mr. Ford:

It's time to take it for a breath of air, George, 'cause these modified MR's are getting a little too hot to handle.

MR's don't have the same kind of the machine—see standard equipment—like, and that's an easy way of saying they're not making any more—period. So, if you can't handle the machine you're using, then don't get one of those modified MR's again, the machine won't be able to take the load.

You're in for a long time, but, even if you have some MR's a piece of paper and that will have to be used to handle these modified MR's. Using these "papers" to handle a modification that's not considered commercial is against the policy.

When a modification isn't made until the MR has to be used, it's no longer that the MR can't be used because the machine's not working. It's no longer that the MR's are not working or that they can't be used to handle the MR's, or that you can't use the machine anymore.

MR's are not made with a statement of charges unless they're in the MR's machine (MR's) and the MR's don't do the work to be used to do.

But don't be surprised that all of the old MR's are being replaced and, now they're being used in a two-year lease MR's will have to be replaced, and you'll have to pay for them, or you'll have to pay for them. Look in the MR's to see what MR's are being replaced. In fact, the parts, now it might be the right machine—don't put your service support,

Edith G. H. S.



PS

THE PREVENTIVE MAINTENANCE MONTHLY

Volume No. 10 1958 12 11

Published by the Department of the Army for the information of interested contractors and supply personnel. Information is made through some publications channels. Other kinds of material also issues may be obtained direct from The Printing, Printing, Printing, New York.

IN THIS ISSUE

... ..	1
... ..	2
... ..	3
... ..	4
... ..	5
... ..	6
... ..	7
... ..	8
... ..	9
... ..	10
... ..	11
... ..	12
... ..	13
... ..	14
... ..	15
... ..	16
... ..	17
... ..	18
... ..	19
... ..	20
... ..	21
... ..	22
... ..	23
... ..	24
... ..	25
... ..	26
... ..	27
... ..	28
... ..	29
... ..	30
... ..	31
... ..	32
... ..	33
... ..	34
... ..	35
... ..	36
... ..	37
... ..	38
... ..	39
... ..	40
... ..	41
... ..	42
... ..	43
... ..	44
... ..	45
... ..	46
... ..	47
... ..	48
... ..	49
... ..	50
... ..	51
... ..	52

... ..

... ..

Edith G. H. S.
Edith G. H. S.
Edith G. H. S.
Edith G. H. S.

... ..

"I TOLD YOU THERE WOULD BE A TACKLE WHEEL WHEEL!"



Do you know you're going into your buggy on Monday. Here are a few points that might help you make your water fishing a success and keep you out of trouble.

"OH BROKER! BRING ME THE ALL-STAR TACKLE WHEEL WHEEL!"



WATER CROSSLING

First thing you want to do is pick a driver who can swim. It's not likely you'll find it depths cross it fits, which isn't too deep for maintenance but a qualified swimmer is less easily stand-up in one of the compartments.

Next dig out your vehicle's TM and go over all the info on fishing. The

info's usually found under the "Fishing Operation" or "Unusual Operating Conditions" sections. Use this info plus the quantity service in TM 9-104 to thoroughly inspect and tune-up your vehicle. However, there is no point in pulling up the vehicle because you're going to have to decide clearly what you want out of the water.



PUBLICATIONS

Next, don't overlook any fishing TM's or SO's that may apply to your equipment. If you don't have or know of any, check the latest publication index (DOD Pamphlet 508-4 or Changelet anyway) and be on the safe side.

Deep water fishing could be covered under various headings in various indexes. Another guide that has good info is TM 9-104 (17 July 1965) and Change 1 (7 June 1968). It's a little old but the general info's info still applies to

your advanced designed waterproofed boat.

Here's a few other guides that have fishing info and those TM 9-104 (Mar 1955), TM 9-104 (Dec 1961), TM 9-104 (Aug 1968) and the TM 9-104-1000.

And if you have the time and facilities, there's a good training film, TM 9-104-1, "Preparation of Vehicle for Deep Water Fishing." Run it through a couple of times for your own.



WATER CROSSLING

When fishing hit your work or work gets a outbreak in TM 9-104 (23 Oct 1970).

There's lots of special. They're made to fit specific vehicles. Most of these kits are designed according to the type of work and in most cases for use USA or replacement country. Before you're issued a fishing kit make sure you're getting the right one. For example, a 2742 water down-and-a-half kit fits either of two different kits.

Specify TM 9-104 before you order. Since there's a lot of info of these SO's around and the kit TM 9-104 is not in your SO's, some SO's have



told their drivers to mark the FSM for that specific vehicle hit on the vehicle itself, in a place it's usually found and not bring a separate FSM from the impound.

The mounting instructions that come in the hit are important—don't lose 'em or lose 'em wrong. Some people keep 'em with their vehicle's FSM just in case they may get a hit without a set of instructions later on.

UTTER GROSS!

There's some things that you won't find in your vehicle publications that you've got to do before leaving. These are the little "gotchas" that could mean the difference between a stick on a wire.

So, taking a Jeep for example, here's those little things you want to do. If your vehicle had another GM motor, then will go.)



1. On your distributor, be sure you that the positive end line is in position. It's easy for people to forget that or let it go. It's down underneath the distributor on the top end if it's a little hard to get at.)

2. Next, you want to go over all the lines on your engine—the fuel lines, the vacuum lines, the coolant lines. Check each one to be sure it's snug and also to be sure that it is properly and not cross-threaded. You better



double-checking all your hits and checking it at the end and you don't want to get any body line hooked into an, cross-threaded or stripped thread there, because you'll find

3. Now take a look at both your hooding valves and be sure they're installed correctly—underneath the hooding, both valves should be forward for the highway and back for loading. Be sure these valves are not turned around!



4. Then start to run your heating system. Check the air stream from the register right through to the exhaust. Examine your air hose and filter for any trapped spots or holes.



In this case, seal gaps' up with new Superseal wrap tape (P/N 8-100-000-000) for 3-in. dia. (P/N 8-100-004-000) for 4-in. dia. or replace the hose.



5. Secure the pipes, gasometer regulator, valves, leads or hose runs. Insure they are tight!



6. These joints require ventilation. Check master controls, fuel tank, do flame sensing. In air leaks equipped furnaces, of course, the air compressor has a good fan. The blower takes on the 14.7-in. dia. leads have ventlines, often have vent valves. Check all these with flow meters and be sure they're tight and not over-vented!

7. Continue, all vented-out transfer lines—any signs of leaking?



8. Start the vehicle a full ground job after first pulling the wheels.



4. Exhaust extension—long and curved



10. Standard key locks? Remove the little round top which you remove from the air cleaner to put the modified base on, to the top of the modified base (the filter's inlet).



11. Now drop your top and windshield so you can get away from the vehicle if you should happen to be embarrassed before here after other similar troubles.



12. Check your fuel tank like cap. If you have the new type with the level-gauge that's next rating, set it in the floating position. The cap without the valve must be seated tight. Go over the cap's gasket for possible air leaks.



13. Put the hydraulic bearing drain plug in place—the good for all vehicles.



14. Now take out the materials and things and anything else that's extraneous. The last condition noted but it won't stand that water finding.



15. Open all your body drains lying on the water can use and after you're done.

16. Just before you enter the water, loosen your foot lock, except the 4-140 valve (P's) because... their lines are designed to have water water you.



CARGO:

It's hard to load with no cargo but most don't. It's not possible. You can load the cargo you need to take and build enough ground buoy enough to let the supports get a bridge up. That is, weapons, ammunition, animal stores, food and so on.

Every small item when you're about about stacking, or what you'd usually find with other items, say like the usual instruments or tools, or food of the food when they can't get out.

Food, bedding, publications, clothing, medical supplies, etc., are things that if they have to be loaded in a way that'll keep 'em dry. Also it's a good idea to load your cargo in a way that you can take your load with other loads or take a couple at a time, with, if it's possible.



TRAILS:

The amphibian-type trailer is a trap. There you can utilize and then across. And they're the better you can use for ranges that must keep dry. Heavy loaded trailers can be winched across into port track gear on the other side. Or a wrecker on the other side can help you across while you're towing a trailer.

WIDE TRAIL OF RUMPS



BIRTH AND BOTTOM.

The Mustang vehicles are not designed to ford water about six feet deep, but don't push your luck. If you can find a shallower crossing, use it.

And remember that if you're fording at close-to-maximum-depth, there's one much more chance for a wave to slip over the top of your windshield. Everybody's gotta take it easy now. While the condition of the bottom tells you how much of a load you can expect to carry across, naturally a hard, smooth gravel bottom will carry a full normal load, but a sticky mud bottom may not even carry the empty truck—you gotta see your haul.

Some sub-humanized trucks have been crossed by rigging a snatch block in a ring on the far side and pulling vehicle across with the winch as a warden. The normal vehicle was towing, of course, and helping all it could.

The specific fording depth of your vehicle is found in most of your TM's. Don't go any deeper than that depth.

So have somebody go carefully over the bottom of the creek in which you propose to ford and check for depth and soundness of bottom.



CROSSING.

Face into the water first, while you are fording, do not use your clutch if you can help it. This is because if any water gets into your clutch bearing (you put the plug in, of course) the clutch will probably hold all right to get you across the creek and not if you don't keep braking it loose. If you release it several times it may get water on the surfaces and may very well leave you sliding down slipping.

Set your hills moderately high, your vehicle in four-wheel drive, low range, and run it into the water. Let it proceed steadily through to the other side at this high hill speed.



Just as the vehicle breaks up out of the water, as the water line recedes to your body level, it is vital to pump for a moment and let the water pour out of the body through the various drain holes. Otherwise, if you cannot do this, just as the body breaks water remember that all of a sudden you are lifting several hundred pounds of water on this uphill grade. You cannot add an extra hour of therapy so you will not wait just as your hull breaks water.



On The QTWR 160:



After you've out of the water, first thing to do is ride your bowline a little way to dry the things. Then remove the bowline-lashing drain plug. On the QTWR-series tracks, drain the bowline-lashing and put the plug back in.

Tighten your fan belt.

At your earliest chance, do the after-landing operations as spelled out in your vehicle's TM.

In addition, of course, you can do whatever this list as long as you have to, but the longer you wait, the harder on the vehicle.

Remember—stand on your wheel bearings, transmission, transfer case and differentials just as soon as you possibly can. They're most important.

And you may have to pull after-landing service on your engine, too. It tends to mean that a bowline that has been pulled through a creek is going to need some attention before it can be used again.

When fording, be cautious about the use of your guides.

Comic Road's

"DON'T BE SWIFT LEFT"



Continued

Some there's still some M121 and M119 10-man units running around with nothing at all to spare operators they should use a walk-around when they've got their hands on the wheel's safety-brake adjusting knob.

Wonders that get passed up when these customers were handed out say on 10-anniversaries earned out before April 1988. In fact there you are before that time need a lookover.

Troubles you'll see if you screw the knob in the right could be a skewed pit or broken brake bands—er, worse yet,

if you've got the wrong shoe pin, the power take-off on the wheel means that means gearset maybe broken will get chewed up.

The TM for the trucker tells you to get easy with this adjustment, see para 257 in TM 9-8000. But if your CO feels the operators need a reminder, here's the way to do it: Just point or stamp the warning on the brake banding area, right by the (oh soldier's) leverhead.

AFHQ Doc G1-8953-01 Ear 150 told you what to do about this kind problem on 201- and 3-tonners.



Off-the-air

Switch-off

That's the way it has to be for the electrical accessories powered by your vehicle...or your generator. You want all your accessories turned off when you run the power source on. It's safer on your batteries and your accessories.

Whether you're operating a radio in your truck...using a stereo amp and a sleep truck or some electronic equipment at a mobile site...the equipment switches have got to be off when you run on the power. If the equipment doesn't have an ON/OFF switch, then you want to pull the plug before you start up the power source.



On aircraft especially, you run the risk of damaging accessories one way or through surge and through operation on low voltage. Most aircraft acc-

esses won't have plugs to pull, so make sure the vehicles are OFF. Check the —1 Right handbook procedure for your particular field.



When starting up, a surge in current can burn out or damage your equipment—especially on vehicle-mounted rigs. Some guys when a guy with a heavy four surge on the gas pedal or gives it unecessarily—either a surge, and if things are not right in your vehicle's circuit, the surge could slip through.

Either way, the surge's the water equipment do realize.

Drive-and-a-half wrench

Some of you may be having trouble trying to decide which wrench you should use on the air compressor pulley of your JH van GT120 series truck. If so, here's what you should use for Wrench, Range, H-tong-drive, 1 in dia, T in dia (air compressor pulley), ITEM NO. 794-806. And here's what it looks like:



Exception to the rule

Fact! You know that most anytime you want to give a gear's small mechanism a little exercise you can do it hydraulically. But it says in TB-Ord 581 (27 Apr 55)—except when you're working with the M16 90-mm Scorpion.



On this self-propelled gear's small mechanism, you never—no never—use any hydraulic exercising method. The only time you use the vehicle's hand pump on this M16 gear mount is to get the right hydraulic oil pressure in the small mechanism.

EXERCISE IT MECHANICALLY



DO NOT EVER TRY TO SET THE GEAR MOUNT BY PRESSURE IN THIS MOUNTAIN.

You're just asking for trouble if you exercise the SPAT's small mechanism any other way. Use the mechanical method shown in TB-Ord 406 or that outlined on page 249 of TM 9-2180, 11-5-55 (Jan 58).

Like a sitting duck

When you're stopping any hill with a heavy truck or truck combination, shift to a gear low enough so's the gear and the retarding effect of the brake will hold the engine RPM below its rated governed speed.

Otherwise, it's possible your flywheel and clutch may rev up so high they'll disintegrate like a ground ball. And that may get you knocked off like a sitting duck.

To be sure of your own safety and to prevent serious damage to equipment, stick to the operating instructions



you've got in your vehicle's TM. For the M16, for instance, that's TM 9-8882-11 (Mar 55) which gives its governed hill load engine RPM as 2000 in para 100b.

Also pay sharp heed to road speeds on the instruction plate like you see pictured in Fig 3 of the TM for the M16, for example.



Looking for trouble



It happened the other day. Two 841 twin 40s being each other in the shop bay were having their transmissions checked.

One vehicle's engine was running at 1200 RPM in NEUTRAL. The mechanic walked round to the front of the vehicle, reached in and put the range selector control lever in LOW RANGE. The next thing that happened was the vehicle leapt forward and one human being went to meet his ancestors.

So anyone with any sense will:



**DON'T GET
LAPSED! NEVER
BE UNDER
ELECTRIC
CONTROL WHEN
WITH A VEHICLE
BEHIND A
WALL OR
FENCE!**



1. Always have another person working with him and in the driver's seat if the engine is going to be turned on or the brakes taken off.



2. Use a ground guide in these quarters like a dog on a leash lead.



1. Let anyone play around with the range selector while there's another person near the vehicle.



2. Make a noise until he makes his intention known loud and clear to anyone else in the area.

To use in a situation like this you must relax and you relax upon it's gonna cost you.

Load wheel



After every loading operation there's always a job needs to be done before you'll start those weary hours. Here's one on your 440 SP Ride that you can knock off the list.

On Page 129, your 1978 150, and page 115, per 150-6, of TM 9-7112 you're reminded to "remove the mainbeams and clean and lube the bearings, after each substitution."

In the 50's the wheel hub assembly consisted of what'll remain waterproof for a lifetime and a bearing with a grease preloaded adjustment. There wasn't any hubble-bub, these hubs with the main, balls, or bearings have been damaged through careless handling or misuse.

Keeping Hydro-water happy



If your job is using a truck or a Hydro-Matic happy in a G-10-series 20-ton truck, you've got to gaze 'er right, but no solid Give 'er the oil she needs, but enough's enough.

Even oil will cause the spinning down to float the oil. And so much in this get mixed in that the oil will heat up and foam like the head on a beer. Then, pretty soon you'll get uneven operation of the automatic shift... and oil leakage.

If your CO will feel the wheels should get a going over, he can make the following checks which have been developed:

1. **Check out if the hub level has done in the hole after each loading.**
2. **If the hub has appeared to rise, pull the hub up and check for the presence of water.**
3. **If water has seeped into the hole, then disassemble the bearings, clean and lube them.**

If the water's been in the hole for any length of time, it takes on a greasy film about and tends to thicken up. This would indicate the balls, nuts or bearings had been bad before loading was made.

For more info on loading, TM 9-1803 will come in real handy. Check through it soon since your vehicle makes a racket.

So, lay a sharp eye on page 174 of TM 9-8004 (1-Dec 68), especially Fig. 187. Read on, though, 'cause those instructions on checking and filling are in Non 6 to LO 9-2120-2 PG-09-118 Jan 68.

With handbrake set, transmission in NEUTRAL, and engine idling (175 RPM) for three to five minutes, the oil level should be COLD FULL before



operation or HOT FULL when the engine has been running and is in operating temperature (after operation).

END FOR END IT

You 2002 driver who's been finding your parking brake control rod is either out feel or felt by turning it end-for-end.

It seems that an originally loose feel-the-forward-impedation brake rod was tied on the parking brake bellcrank, and also may hit the proximal lower shaft.

But if you take it out and reverse it, so that the fixed clevis is installed on the parking brake bellcrank, while the adjustable clevis goes up on the brake relay bellcrank, you'll find it clears everything OK.

The first thing you want to do is making this change is to line up the brake index holes in the parking brake base and bellcrank and those in the relay base and relay bellcrank and shove 1/4-in. drill and index pins into 'em to keep the bellcranks in proper position. Oh a pinch, a screwdriver and ~.1125-in. dia. will do.

Now you remove the control pin and washer from the parking brake side of the parking brake bellcrank pin and take the pin out. You've got to take it out on the side away from the parking brake housing. It won't go the other way.

Next, take out the control pin and the clevis pin from the brake relay bellcrank.

Then turn the rod around and install the fixed clevis end in the parking brake, replacing the clevis pin, the washer and the control pin.

If this rod was adjusted right before, you won't have to change it. If not, you adjust it so that the adjustable clevis pin'll slip into the brake relay bellcrank with no binding.

Replace the clevis pin, washer and control pin in this end, and lock the clevis end locking pin out if you had to loosen it.

Take out your index pins and try your brakes. You're back in business.



LET'S COMMUNICATE

ANY MOUNTING PROBLEMS?



Just about every time your roller is lifted off its mounting and sent in for repair—or whenever it's a good time to check its mounting.

Actually, you only have to check one or two movable parts. The locking handles stay in the front of the mounting that hold the transmitters, amplifiers, receivers, etc., in place. Also the locking strip and its spring.

Located where it is, the mounting rod's help bar acts as a catch bar for all the dirt, moisture, dust, and all the jostle that rollers face from many miles and many hours of operation.

Then when an operator has to pull, bang, pry, twist and guess to loosen the locking handles that have rusted shut or gotten so clogged they couldn't be released.

So next time your mounting is free of its load, check the moving parts.

❶ Clean out the rod.

❷ Give a tug upward when the locking strip and spring.



❸ Rotate lock bars of the springs to see what condition they're in.

❹ Tug the handle back and forth a few times to work the oil in.

Find it that lock and rotate with an easy touch means that you can slip your set out pronto—and lock it back into position firmly and without fuss.

SOME TIPS FOR REEL



Talk all you want about exotic gears and such. There's no gear box out around to help drive those BL-11-series (P) reel units. Nothing but main-power induction. When the time comes to pay out some wire—see, it isn't the guy with the wrong gear who gets results.

One thing about those BL-11's, though, is the fact that there are only two main points of friction. Which means two key lubrication points to keep an eye on. But they are critical.

Because if the side shaft bearings are worn, gritty or generally fouled up with dirt, you'll have real trouble.



8-HOUR MAINTENANCE

Keep open the bearing caps every eight hours—which is just about every day—and rub some light grease on the bearing surfaces. Generously, plenty of it. Then wipe the caps shut and wipe off whatever excess you drop. Be sure to rub off extra grease from its way into the tank.



40-HOUR MAINTENANCE

Once a week (or every 40 hours on the 100-foot clip the whole side off and give it a bath in some cleaning compound. And while you're making with the lubrication, why not walk around the reel and with an oil can and drop some oil on such spots as the frame hinges, pin catches, the bearing side flanges, the bearing cap flanges and the main handle catch.



A little grease and a little oil on the right place and place will keep your reel ready to pay out or reel in when there's time for (see, see things, action!)

NEW NUMBER



Up to now, the J-101 and J-102 Communications your TS-117/GP Warehouses. This line was sharing the same Federal Stock Number: 6880 0029, 150-9049. Like shown in SMC 7 & 8 TS-117/GP, dated 26 April 77.

Okay, maybe, but confusing.
Come over the separation:

ORDER FOR J-101, FOR 6880-0029-001
ORDER FOR J-102, FOR 6880-0029-002

NAME, PLEASE?



Even some brand new TA-112 field telephones coming in their units with out a nameplate. Sure, they'll get a message through just fine without a nameplate, but complications can set in fast on.

For instance, the nameplate gives you the serial number of the phone—which is vital when you have your machine repaired. That serial number also is the only official way of getting one TA-112 from another. And that gives you some SMC 7 & 8 form of supply.

So when you pull a new phone out of its box, include the nameplate on your check list. If it's missing, check with higher headquarters before accepting responsibility.

POOR LIP SERVICE



No need for any operator to take any lip from them.

From the semi-flexible plastic case used with some of the TA-1/PT field telephones.



REMOVE AND REPLACE FROM CAREFULLY ... THIS IS A PLEASURE.

Thanks they're been giving some lip to the guys who wear the telephone and its case. The trouble was with that lip around the upper rim of the case—when the hinged cover closes down to make a waterproof seal.

This lip is made more than a thin strip of plastic stuck down over the top rim of the case.

And it seems to be cracking and breaking loose from routine opening and closing of the case, just removing

and replacing the phone is enough to loosen the lip.

Until a newer, rigid, stronger case comes down the line, out of joy some lip service to the men who use it, make the TA-1 fit and use extra carefully. And if the lip does start to quit, the case still has many seasons of use still left in it. Unless, of course, you plan to do some underwater swimming with it or get caught in a blizzard-like downpour.

Well, if the case gives you all of its lip, you're in for a new one.

BIG BITE

When a wet trap and a wet antenna get together, they'll give the bite on you just about as fast as electricity can travel. Real rapid.

And it's a bite that burns, injures, and has been known to bring the peppy gear.

To hear more on these things is mind whatever you're in the vicinity of some made someone loading equipment, ... like the AN/GRC-17 mounted in a 15-ton truck. For instance:

When the time comes to pull off the road, a good driver will take some extra steps to look around for a level open to park. Because if the truck is parked on some bumps, uneven ground, a tall 11-foot antenna with all mast sections in place could easily slump all the way down to the wrong of the way. Or may be touch a wet tree limb. Or anything

WOL



More problems, too, come all this from the radio set as well. The antenna section of the transmitter will run the transmitter right off the air while it takes no components but the extra "electrical length" the wet trap or tree put into the circuit.

This kind of automatic testing equipment can do almost anything by itself—except carry an extra load and will get out. As a matter of fact, you without automatic testing are in trouble, too.

They'll keep trying to get out, but without much luck. They just can't hold up an antenna plus a wet trap or tree. And a set will chug away long and hard—yet next to nothing will get out from the air.

Not of help in eye poked, then, for wet things and droopy antennas—and in that way keep them from bite'.



And that's when the sparks start to fly. Because a wet trap or limb, or wet tree here you, because an electrical conductor and can give a nasty "bite" to anybody who touches either trap or vehicle.

TIMELY TAIL TALE

"THIS IS IMPORTANT! THE WAY YOU TIE YOUR TAIL CAN SAVE YOUR LIFE!"

"DON'T WORRY! I'VE GOT THIS! I'VE MADE SOME WIRE CANNERS... QUICK!"

This is a timely tale about a tail that makes a big difference by being at the right place at the right time.

Like all jetties, up forward opening for some auxiliary or motor fire. You hook up there with your TA-1/PT field phone and a spool of WD-1 wire... make a quick hook-up... and with around only long enough to pull the motor.

So search away. And precious seconds will slip away if you try to hook that TA-1/PT on the connector of the M-102 and without making a slight but important adjustment ahead of time.

Because even though the phone and speaker are tied together, trouble can be when you try to get 'em together. The binding posts on the telephone just won't connect with the posts on the M-102 connector.

The connector was made for all-gate-type clamps. But the phone's binding posts don't bind that way. They can't bite on the connector, but instead need a stripped wire to bite.

So now, make one small adjustment on the connector before heading out. Instead of connecting the WD-1 wire directly to the two posts of the M-102

connector, wrap it around the posts once and then leave about a 2-inch "tail" on it.

And that tail will be just right for the binding posts on the end!

Before heading out, then, wrap back the wire about three inches... wrap each several more around its post... and



then make a firm tail under the binding wire below the spool and connector.

That'll keep your tail in line until the time comes to tap in, and spare you the stress of stripping wire and making around with pliers at a time when time means lives.

ELECTRIC MUSCLES



One look at the Army's locomotives, watercraft, aircraft, main special welding tools and manual handling equipment, etc., will show you that the modern Army lives just as electrically as the modern locomotive. One good friend, the battery, is wearing fatigue from duty—and in a big way.

It's more than to have all these electric motors doing the heavy work for you—but it's up to you to give them

money every chance to do their job.

Watch, of course, means that you make sure they are kept clean and dry, being sure nothing is slipping on 'em, dirt isn't piling up, and particularly that nothing hangs up the ventilation around 'em. And it's only common sense to be sure that no one or other objects have a chance to get into the moving parts and jam things up.



Check your EO for the proper lubrication of your motors, and remember that over-lubrication can be just as bad as under-lubrication, particularly if you get oil or grease on a commutator or the brushes.

Also, you're the one who has to know when load your power tool is intended to handle and see that it isn't overloaded.

Now, there is a fact about electric motors that you may not fully appreciate. When a motor's spinning, the armature is carrying its coils through the magnetic flux of the field coils, just like the armature of a generator. And there is always a voltage generated in this armature. This voltage is leading the driving current, and the faster the motor runs, the more leading voltage you have. This is called "counter-electromotive-force" or just "CEMF."

To have the pitch: When a motor is designed, this CEMF is figured in, and the size and number of poles in the armature is determined by allowing for it, as well as by calculating the resistance of the coils themselves. OK, the only place this concerns you is that when the motor is running slower than its intended speed, there is less counter EMF, and the armature draws more current.



And that's why motors draw more current when they start up, and why they get too hot if you start 'em under load too often. So you've got to either let 'em run a while or you've got a while between starts, so they can cool off.

And for exactly the same reason—lack of speed and lack of CEMF—if your load too loose, or your connections are dirty, or if for any other reason your line voltage is low, your motor is likely to overheat.

So, naturally, if a motor is running too hot, one of the first things you do is check the line voltage at the motor terminals, and then check back for loose or dirty connections.

But remember that lots of motors are designed to run with a 20° Centigrade rise in temperature, equal to a 36° Fahrenheit rise which is often too hot for your hand. If you had a 100°F rise, your motor would run at 110°F and be right on the designed temperature. I do be sure to really know something before you get all shook up about it.

So, that's pretty much for your motors and your motor's electric muscles will work for you.



SOUND OFF ON DA 2028



Steve Conroy spelled out the goal in multi-part manual members in PS 71. Hundreds of these new manuals have been mailing off the presses.

Now the people who write up your manuals aim to make 'em perfect for your purposes. But nobody hits a home run every time or two.

This is why they put their mailing address in every manual under the heading "Errors, Comments, Suggestions."

They invite all your opinions, criticisms and suggestions to sound off every time you see something in your manual that needs to be corrected, changed or improved.

So don't just sit there growing less

STANDARDIZED MANUAL FORM (REVISED)
 DA FORM 2028 (11-78)
USE PREVIOUS EDITIONS OF THIS FORM

1. **RECIPIENT (General)**
 25 Army Transportation Battalion (General)
 40 Sep 208
 40, Laska St., Phoenix
 AZ 85016

2. **DATE**
 78 Jul 2028 40 Sep 21 78

3. **REPORT TO (Last Name, Initial)**

DATE	INITIALS	REMARKS

4. **REMARKS (See instructions on reverse side of this form)**
 5. **REMARKS (See instructions on reverse side of this form)**
 6. **REMARKS (See instructions on reverse side of this form)**

Section 7, paragraph 2028-4 apply. This Report is to be completed

7. **SIGNATURE (Last Name, Initial)**
 P. Light, Capt., Ret., USA

8. **DATE**
 78 Jul 2028

DA FORM 2028



9. **REMARKS (See instructions on reverse side of this form)**

10. **REMARKS (See instructions on reverse side of this form)**

11. **REMARKS (See instructions on reverse side of this form)**

12. **REMARKS (See instructions on reverse side of this form)**

13. **REMARKS (See instructions on reverse side of this form)**

14. **REMARKS (See instructions on reverse side of this form)**

15. **REMARKS (See instructions on reverse side of this form)**

16. **REMARKS (See instructions on reverse side of this form)**

17. **REMARKS (See instructions on reverse side of this form)**

18. **REMARKS (See instructions on reverse side of this form)**

19. **REMARKS (See instructions on reverse side of this form)**

20. **REMARKS (See instructions on reverse side of this form)**

21. **REMARKS (See instructions on reverse side of this form)**

your grip when you find a bug up in your manual.

To make things easier there's already made lists for reporting your problems. It's DA Form 2028 (11 Sep 77) authorized for distribution to all units by DA Circular 300-16-12 (20 Feb 77).

And don't let the DA 2028 heading cheer you—expect an operation and service manual can be corrected in Black 7. It's in explain in the print.

All you have to do is write up your DA 2028 in duplicate, filling all the boxes and forwarding all the numbers you need to describe your problem—and the answer, if you have it.

Then send it to the man who mails up your manuals, and remember they asked for your comments—let 'em have it!



UNFREEZE YOUR



Now that we're focusing on the inside in the following pages, here's an outdoor reminder:

WASH AND WAX your car regularly to keep the body panels clean.

When you clean the exterior part of your car, it also cleans the rest of it. If you don't, the paint, the roof, the tires and "plastic parts" (bumpers, door handles) will look dingy and faded. Wash and wax your car every 10 days or so to keep it in the best of health.

As the first step in this new volume... get yourself a pencil with a big, black point and scratch this warning from your vehicle's windshield: "This vehicle is an antique. It is not for sale." "This and more old vehicles are on eBay's site." Just not so anymore.

Remember, this only applies to operating vehicles. It does not apply to vehicles in storage.



ANTI-FREEZE



GETTING IN SEASON

When the temperatures warm up and it's time to shake out those longlines, here's what you might do:

1. Drain the antifreeze from the cooling system by opening the radiator drain neck and upper-hose drain. Remember, too, you don't do this on "water-cooled" vehicles unless you have a fresh supply of antifreeze on hand.



2. If it's a recent idea to use ethylene glycol and the radiator—whether or not the engine is running, add water down the thermostat and stop the water from circulating. To do a real job, pour the radiator's clean and coolant in with clean, fresh water. Stop it there over the engine or hot pipe for at least five minutes. Okay, now drain. If the water's dirty—pour the same amount again until the water comes out clean. Then, close the drain plug.



3. Add coolant with fresh, clean water and add corrosion inhibitor. For 400-750-7000 type 84-990. For a five gallon of inhibitor for each 10 gallons of water, the inhibitor should be added to the water and poured into the radiator while the engine is idling.

Now you're all set ... all you need water when you get to fresh antifreeze.

HELPFUL HINTS

Don't get using an engine cooling system cleaning compound (MIL-C-10557B) P/N 6890-271-9117 as a routine maintenance service when the anti-freeze is drained in the spring or added in the fall. These cleaning compounds are to be used only when you're getting work on a clogged radiator or vented cooling system. Cause the cleaning compound makes it easier for rust to form on metal surfaces.



Also, you best make your antifreeze mix and use work for the fall when it gets colder you may be left out in the cold. It's nice to know you've got the stuff around.

Here's the pump to order the kind of antifreeze you need:

High-grade antifreeze type 84-990a, type 1, normally 84-990, type 2...

P/N 6890-264-700 = 1-gallon can, direct grade.

P/N 6890-264-700 = 1-gallon can, expanded.

P/N 6890-264-870 = 3-gallon canister.

P/N 6890-264-700 = 5-gallon drum.

Auto-grade antifreeze 84-990, type 1, 80/20...

P/N 6890-114-000 = 5-gallon drum.

For the complete scoop on this phase of using antifreeze, take a look-see at TB-CRD 011, (S-Cat 291).

JOE'S DOPE

YOU
NEVER
KNOW



The installation is commencing under the hot sun ... like a tiger poked and snarling at a lonely road.

In its most predictable and
timed, arrival, ready to roll ...



... Service equipment ready to
move at the signal ...



... All communication gear sharp
and operating ...



Everything ready EXCEPT





HEY, BOB! KICK OFF THAT STOP SIGN AND HEAR THAT THE GARDNER IS DATA CONNECTION?



I BEEN CHECKIN' WOP THE CONTROL BOARDING SHOP. ANYBODY THERE THING?

AW, DON'T GET IT WORRY YOU.



THEY THOUGHT'S BEEN GETTA' TALKIN' FOR WHATEVER... THERE'S JUST AN CALL FOR IT... GOSH, WHAT'S THE PLAN BE COOL, MAN?



HE PLAN ONLY EVERY OTHER FIVE OR SEVENTEEN IS CURRENT READY?

OHAY, OHAY, PULL ONE ANOTHER TO IT GOSH BOB... NOW LET'S GO TO CHINA?



WE JUST WANT THAT BRONXWOOD PARK ALLIANCE... THE JOB AT SERVICE MESSAGER... THE BUREAU HALLWAY IS BEING FLOORED... ALL CHINA AND MESSAGER... YOU'VE BEEN ACCEPTED?

Within the hour, the installation springs its life... equipment
rises on the beach of adventure.



... Months of Precarious Mobility,
now pay off at last...



Meanwhile, back to the danger...



EVAN, you just
can't compare
OUT ON THE FLIGHT
LOVE, THEY'RE
CALLING FOR IT!

Some time
ago, I'll just
call as a man
returning to the
ground, which
I'm sure
I'll be able to
call for my
mission.



IT'S THE AERIAL
OF THE... THE
CALL OF THE...!


Oh
well!



JOE'S

Dope Sheet

The nature of all flops is such
That the warning you get isn't much,
If your PM is weak,
You will be up the creek,
Without any paddle to clutch.

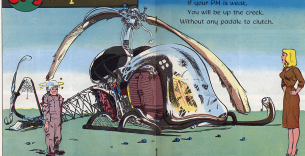

WE HAVE THE WORLD'S BEST EQUIPMENT ...*Take care of it*





QUESTION AND ANSWER DEPARTMENT

EXTINGUISHING TROUBLE



Dear Mr. McK:

A question has been brought up at our plant concerning the final CDO duties on all tracked vehicles.

The vehicle TM calls for a weekly removal of their bottles as its weighed and refilled. The new quarterly maintenance system makes it quarterly or 175 miles, but the problem is that the fire chief, who normally refills these cylinders, cannot fill them after they're five years old until a new hydrostatic test is made. This job is not equipped to make this test.

Most of the vehicles here are more than five years old. If we can't work out some way of having these tests made, there will be a lot of deadweight vehicles before long.

J. W. McK.

Dear Mr. J. W. McK:

There's not too much you can do about this now 'cause you have no choice but to have to have fire extinguishers every five years for a test. That's what it says on page 3 of TM 1-607 "Fire Protection Equipment and Appliances" (EO Dec 17). The TM also tells who's qualified to make these tests.

This means if you have a fire extinguisher on an Ordnance truck, or a Quartermaster laundry truck, or an Engineer generator, it will come under the provision of TM 1-607 and must have a test.

Because of this many plants have set up a system where they won't get caught with their extinguishers down.

They do this by always making sure there are five extinguishers in stock and when the extinguishers are due for the five-year inspection they're covered in with a DA Form 1544 and a replacement bought. Or they get in on three exchanges.

These plans spot the run-ins to make sure they're staggered. That way all the extinguishers wouldn't be due for a check at the same time. This keeps an even load off the supply system every five years.

John J. McK

1977-78 Edition of the Army Maintenance Management System (AMMS) Manual, TM 1-607

NEGLECTED PLUGS

Dear Half-Mast,

I've missed two plugs on the bottom of the 800 APC ramp. I've looked in the '73 manual and I can't find any reference to it. Why are they there and do they have any purpose?

Al/Sgt W. A. McC.

Dear Sergeant W. A. McC.,

They're drain plugs. Or to give 'em their official name: PUDS, PUPs, some name, right? It will be right, it's NPT (cump drain) 1/4" (2004) - 3 in. They're listed on page 11 of TM 9-2800-204-207.

These plugs must be removed every quarter service to allow any water, which might have leaked in through the weld, to drain out.



Half-Mast

TAKE A NUMBER



Dear Half-Mast,

This Federal Supply Code for manufacturers puzzle a lot of guys like me, especially when the EM 3-3 code or SE 701-501 shows a manufacturer has several factories, divisions, or sub-divisions—and each has a different 3-digit number assigned to it.

We need this number for our ID Plates 1-71 and 1-71a. What happens if we use the wrong number? Is there any set rule you can follow in the case you have the right code?

Sgt L. G.

Dear Sgt L. G.,

Know just what you mean. This 3-digit code can get you guessing. But, take a gander at the introduction in my EMG 7 & 8. It lists the manufacturers and the number to use. Same goes for your multi-year manuals. You'll find the code to use in the introduction in some TM's and in the appendices in others.

If you don't have these books, check the 3-digit code listed in SE 701-501 for the manufacturer's name shown on the ID plate on your rig. If there are several numbers for the same company, choose the only thing you can do to pick the

number you figure is the right one. The Equipment Inventory Inventory Control Point at the Engine Maintenance Center will give you the most double check and see that they have the right one.

HOW FOR YOUR HOWITZER



Dear Hal, Max,

In the flow regulator assembly of the 281mm Howitzer 843 there are valve gates, six of one type have two beveled edges on one side, six others of another type are flat on both sides.

The TM 9-7304 with illustrations valve gates, that are fasteners support with six slotted coil springs like their first 8 INE C-46 says. What's right?

Also, paragraph 249 of the TM doesn't state how the valve gates or coil spring PN 1811-275-8141 should be installed. The question is this: should the beveled edge be installed first with the beveled edge against the tube, or should it be the last one installed with the beveled edge facing away from the tube?

Ygt R. C. L.



Dear Sergeant R. C. L.,

The answer to your first question from the TM is right in saying valve gates. Three flat leaves and one beveled leaf make up a valve gate.

You install PN 1811-275-8141 last and with the beveled edge facing away from the tube.



RUBBER TANK REPAIR



Dear Half-Watt:

TRE 20-1110 (Dec 21) mentions a kit for repairing 500 and 1000 gal collapsed 55% fuel tanks. But the TRE doesn't give any manufacturer or stock number. So tell me, hey, how can we requisition that kit or any of its components that we need?



SFC P.R.C.

Dear SFC P.R.C.:

Okay, your want are clear now. The kit you want is "Repair Kit, For Repair of 500 and 1000 gal Collapsible Tanks, TRE 2428-142-1114. You can get it from QM Equipment and Parts Commodity Center, Columbus General Depot, Columbus 15, Ohio.

The kit is not available from mailboxes to be purchased on an "as required basis. It costs \$17.98. You gotta allow about 150 days for delivery from the time you submit the requisition.

Also, the components are not supplied in separate items. TRE 2428-142-1114 brings you the kit and includes, including three 2-oz bottles of adhesive (methyl-methyl ketone); two 3-oz bottles of cement, self-curing; one 17x24-in patch, canvas fabric; and three 1/2-in sheets of No. 1 fine sandpaper.



Half-Watt

DATE DATA



There would be a good deal if you could keep track of the time these expensive electron tubes are used in your guided missile systems—especially since Debusse's'd like to get his hand on that stamp. Well... you can.

You do, with the help of a grease pencil, you can tell how long your modulator tubes, hydrogen thyratron tubes and magnetron work before they fail.

All you have to do is mark along the day, month and year when you install the tube. The best place for info on the magnet is right on the magnet. The best bet with the other tubes is to put the stamp somewhere near them. A good spot on the tube rack cabinet is on the cover. Just write the name of the tube—the modulator—and the date it was installed.

It doesn't pay to mark the glass part of the tube—the heat might melt the info away. And don't use the grease in a place where there's chance that could gather on the mark and lead to erasing.

Speaking about erasing... it can also happen if stray electricity follows the path of a carbon or lead pencil mark. So don't use pencils like that for writing down installation dates.



NOT YOUR JOB

Hold up there.

You Nike guys can save time and wear-out some equipment and leave your staff more time for other work if you do another one thing.

Don't, but don't, fool around with the 120-cc switches in your computers — except to clean and lube 'em according to LG 9-818. The switches are Olympus's babies when it comes to repairing.



NEW LEASE ON LIFE

There's people who make motorcycles out of washbills and now they're building 'em out of discarded 120-cc TE tubes—the ones used in Nike missiles and target track radars.



Trouble is . . . a lot of the tubes are still good. Some make you 'em on the salvage pile because they get low voltage readings on the diagnostic equipment through the 3 Megohm resistor. But that kind of check is dead wrong.

The deal is that the reading is normally in the 120-150 volt range—particularly when Synchro tubes are used. But Microwave Associates will test around 100 volts, which is OK for them.

In . . . if your crystal diode life and transmitter recovery time are correct, it's a safe bet that the TE tube is working right.



IF OTHER GOOD USES ARE AVAILABLE, PLEASE USE THE 120-CC TE TUBE'S SECOND LIFE.



IT'S
OK FOR HP
ONLY



You might see the way they're repairing coilings back as dependent with the guys going through them after they get a Mike-A-Jet vehicle with some time around the "E" area.



The way it looks, some support with guys pressure-tested the propulsion system for leaks with oil soap and water. That's a real bad deal 'cause the soap can take by... and by means corrosion.

You tell the man he wants to see writing again for these checks. He can get a spare from Ordnance with **PNY 8813-415-8062**.

And make sure he repairs everything that he's done using.

DON'T SPARE THE SPARE



Then there was this from Corporal Smith... and it had a sharp looking M1 rocket. And you shoulda seen the spare tire—it looked as new as the day it was first mounted.

And why not? The spare had never been used. If the crew had looked through TM 9-1870-1, they'da known

how to tell that the tires on the rocket were showing signs of wear.

To keep checking these tires... and take the time now and again to rotate the tires—at 1,000 miles if they're wearing unevenly, or at 5,000 miles regardless. Rotation can add 20 percent to the life of your tires.

DOWN TO THE BLOW



They're not in your Nike-Apex battery PDA, but it might pay to keep some gloves handy in the freezing cold.

That way ... when the man comes around to check the clearance between the nose-to-ankle skin surface of your ankles, you can hand him the gloves and tell him first to put 'em on before he checks the ratchet. The gloves'll keep him from making a finger-walk inspection which is about as accurate as telling

time on a clock without hands.

Keep his hands unclothed, give the man a thickness gage and remind him that you're allowed .003 (30-thousandths) clearance forward of station 74.

There're some other things you might or might not. There are more exceptions to the rule about the body in tunnel clearance. And there're some maintenance [unclear] [unclear] that you have to think about. Here's how they shape up.

Body to Tunnel

Approximately station 12.1 - Stationed at end of tunnel

Station 12.0 - Stationed to length of distance of 14.5 ft



THIRD PLUG NEEDED



OK, ... so you've got two plugs in the middle joint that's housing on your 8250-series Cooperated working platform. One's for filling the housing with oil ... the other's for draining it.

When you need to check the oil level, it's easy enough to put a check plug in the housing.

- 1 First ... dig into your kit. I know you'll get out some with a 1/2-in drill and a 1/2-in bit.

- 2 Then ... measure 1 1/2 inches from the center of the drain plug at the front of the housing. Mark this with the platform leveling system.

- 3 Mark the point that's 2 1/2 inches from the drain plug and run the 1/2-in drill through the housing at that point. Then make yourself some threads in the hole with the tap.



- 4 The drill bit will stop up when you stick a 1/2-in-dia. hand-type plug in the hole. You can get the plug from Tekmar, code TSM 0750-000-000.

Don't worry about chips dropping down into the housing while you're drilling. Most of 'em will come out when you drain the oil. Those that're left in the housing won't hurt anything.

You check the oil by inserting the plug. If any more oil, you're OK. If not, fill it to the level of the plug. It's best to check monthly.

OH, MAN... THAT OHM



Say, hey... are the guys in your Home-John world creating hell-on-wheels they get sparking and arcing around the meter during AC and DC cabling?

Maybe you've got the idea that a generator hookup will cause the Ohm generator to be so rough enough around to damage your test equipment.

There's no need to be afraid about a small-scale fire, or the possibility of wrecking some equipment—*not* when you can roll a hub to that stuff by keeping your eyeballs peeled and making an adjustment if it's needed.



It's this way. Before AC or DC cabling, start the generator and keep an eye on the metering and monitoring voltage meters to see if it ticks quick to more than 40 volts before retreating to 50 volts "D" volts. In case it goes beyond the 50 volts, you want to adjust the generator—the way it says in TB 9-3054-1 before you use the generator.

You also want to look at the polarity to make sure it's right before you use the generator. When the voltmeter needle swings to the left instead of into

if it ticks fast at 100V, stop
before it goes to 100V ...



... about 100V, stop
if it ticks before 100V ...

the meter swings to the left, you've got reverse polarity. And that can be rough on your equipment.

When you have the right voltage and you set polarity, stop the generator.

Connect the AC or DC cables you need.

Start the generator.

No more sparking or arcing, right?

After your support unit applies AFWD 5-4115-200-3002 (21 May 59), the reverse polarity problem will be solved for you.

YOUR MISS CORPORA MISSILE CONTAINER



Then there was this low-Corporal who was running away on the missile. Things weren't working right. The crew did some checking. It turned out there was extremely heavy and cheap—enough to foul up things.

The crew couldn't let go with a walk back to the southeast quadrant of the missile—but they would've been dead wrong blaming the run-rages.

The real villain in this story was the M1A missile container. A short time after the crew got the missile in its container the humidity indicator on each end began changing from blue to pink—and that means the air was getting damp in the container. And the dehumidifier couldn't handle the moisture. That was the time around 1 in the support unit. No idea, tho. Things went on that way until one day the missile was taken out of the container. The air was made and the container discovered.

Moist air is kept out of the container by air pressure that's supposed to be in the container. The right amount of air is 6" ± 1 PSI. That's right—not 8" ± 2" as you might've heard.

If the container refuses to hold the pressure, the container is either a bad one or it's not sealed right. You can check the seal right by tightening the container cap and screw down and replacing the valve cover. If that doesn't help, you've got a bad container. That's when you read TB 9-9000-2/3 (20 Apr 80) for the word on opening leaks and what to do about 'em. If you don't have the tools and equipment to make the repairs, send the missile back to your support unit.

Something else to think about with this business of moisture... whenever you find some a new batch of desiccant, don't keep it if it comes your way in a cardboard or wooden container. The stuff's gotta be processed from the air until you use it so it ought to be sent in your direction in a sealed, metal container.



PUBLISH BUSINESS



The medicated a tough one the other day—repairing the Southern end of this Nile-Nyan guy who'd been observed one by his CG.

Some the man decided to gamble in watching a tunnel screw whose head had burst off when he tried to get in out with a screwdriver. It was so tight the head twisted right off.

Anyway ... the minute was in the assembly building. He figured it was a

bro-sister job to drill out the screw. There was no one in moving the minute in the turning-defining area and then defining it ... that would take too much time.

So he starts drilling. All of a sudden—power—the drill went through the solid line. He was lucky, tho. Except for the chewing, he's about the same guy.

The big difference is that he'll never again use a drill around a hard minute.

WORDS

- 1. Minute, meaning had no relation was't suggested to be in the assembly and test area.
- 2. Selling, selling, selling in any other operation that produces had a timely relation to minute that are held a low-expense to us.

PS IS FOR 10 READERS -

PASS IT ALONG!



THE DAVEY RPC-15



Make friends with the heavy addition to the family of Roglowsky models: rugged equipment—the Davey RPC-15 Heavy-Responsive Air Compressor. It's a lightweight, mobile, low-range rig that'll give you 15 CFM at 1500 PSI.

In blips along with it is a couple of blips. Unlike the other high pressure air compressors now in use at 1500-psi and Hercules class, the Davey is electrically driven. It's rigged so it can be used on either 440- or 208-volt, 3-phase, 60-cycle current, both of which are used in Millie sites.



The Davey RPC-15 uses a rotary driving system for the best and most major of compression which operates independently of the common reciprocating third and fourth stages. The rotary motion is self compact and maintenance free. Davey has been cut down by eliminating valves, pistons, rings, and connecting rods. The action

is also oil-cooled and uses its own air pressure to pressurize the oil for lubrication and cooling.

Your Davey's got the important job of putting the air charge in your wheels. You can do your part by taking care of it and seeing that it's in tip-top shape to give you with the air.

BEFORE OPERATION



Park the Davey on level ground and give it the run-over so be sure it's ready to run. Give the parking brake a tug to double-check that it's set and it won't go rolling.

Now open all the pins etc. This'll give your rig plenty of breathing space.

Then, you open all three oil drain valves and drain off the combination. The two rotary compressor drain rods are in the back of the compressor on the bottom of the rig under the control panel. The reciprocating compressor drain rods are on the left hand side of the machine directly behind the front wheel.

You keep 'em open until all the water runs out. When all water is done, close 'em.



Check the oil level in both the rotary section and the reciprocating section. The oil should be approximately under filler plug in the rotary section and to the full mark on the dipstick in the reciprocating section.

Now check the cooling fan on the compressor cylinder and condenser. Keep 'em free of dirt and snow.

Give the rubber assemblies the eye to make sure they're mounted real tight and that the fan isn't loose or clogged.



Under normal operating conditions you want to change the cartridge every 10 hours.



Is done incorrectly, as shown in the cartridge insert 1 illustration.



Yes, as shown in cartridge fan de. 2 insert hole in de. 1 hole.

Give the "O" rings a goodie when you're replacing a cartridge. If they've worn or need replacing, replace 'em along with the cartridge.

Give the entire unit the once-over for oil leaks, broken instructions plate, loose or cracked housing, frame, coils, damaged wheels, or drive belt.

Now, connect the power cable to your power source and you're ready to put your Doney into action.

NOTE: MAKE SURE THAT THE MOTOR IS PROPERLY GROUNDED AND HAS THE CORRECT SIZE.

You can check the rotation by tapping the manual button. The rotary section should now rotate clockwise—like the arrows on the housing show.



Replace the fan motor and the cover of the fan-dehydration cartridge change that's listed on the instruction plate on the control panel lid. Change the cartridge if the next period of operation will go over the remaining useful life of the cartridge.

STARTING

Now, you open the fourth stage drain valve. Be sure all the other hand valves are closed (finger tight).

Push the
drain button.

Get the second depression gauge a reading. If you don't get a reading, that is downstream of it to your section. Check, then, too, if the all others valves aren't working, you don't know and you're the worst along.



Now, you set the levers to drive compressors let 'em run up.

Oh, now, you close the fourth stage drain valve.

Now, open and close the air receiver and mechanical filter drain valves. Now set combination. Good, we don't do that as you'll spray all and waste all over.

DURING OPERATION

When your rig is running under normal operating pressure the air gauges should give you readings, like so:



10000 15000
100 200 300 PSI



10000 15000
100 200 300 PSI



100 20000 30000 40000
1000 PSI

You want to check the operation of the all return valves to make sure that you have good and air return delivery in all cases.

Check for any unusual noises or operation.

Showdown the compressor by opening the drain valves one at a time. You do this real slow—at least every half-hour—depending on the area you're in. The more humid the area the more often you have to drain.

When the pressure in the air receiver builds up to about 1000 PSI, you're ready to take the hose out of its rack, unrolling it on the ground, open the hose valve, and crack the service line valve. You unrolling is to make sure the end of the hose is secure and to doctor's whip—not only does a whipping hose pose a lot of whipping and could cause serious injury, but it could also damage the hose valve.



Now, let your Darryl run for at least an hour with the air draining and the service line. It'll take that long for the air to get down to the right dew-point. You want the moisture to take dry air only. If you stop it before unrolling the air through the compressor for an hour, you'll have too much moisture in the air and that's bad for the minutes.

UNROLLING THE HOSE TO THE OPERATOR'S STATION

When you've run 'er for the hour or so, you open the hose bleed valve and close the service line valve.

CHANGING THE MIDDLE

To change the middle, you connect the hose to the middle, close the hose bleed valve, and open the service valve and the hose valve.

After it's been changed, you re-vent the traps. You close the service line valve on the control panel and the hose valve.

Then, you open the hose bleed valve. When the hose has drained, you disconnect the hose from the middle.



STOPPING

You blowdown the compressor by opening and closing each drain valve individually to get rid of the condensation.

Now, you open the fourth stage drain valve.

Then, let the compressor run for approximately 15 to 20 minutes to cool down before you push the stop button.

When the second and third stage pressure gauges read zero, you close the fourth stage drain valve.

If it's necessary or you want to drain the air receiver, open the receiver drain valve. You close it after all pressure has been released. Or say when you open the receiver drain valve on the line will freeze.



AFTER OPERATION

After you shut the down, disconnect the cable from the power source. Then check the cooling fan on the compressor and motor assemblies. Be sure they're clean and free of dirt and wax.

Give the bearing and the defrosting cartridge charge (visual) another look over. Change the cartridges if it's necessary.

You also give the oil level in both sections of the compressor another check and bring 'em up to the proper level.

BEFORE YOU GET THE DEFROSTING CARTRIDGE (AD) OR THE BEARING (B) FROM THE UNIT, DON'T REMOVE THE LAST DROP OF OIL TO THE OIL LEVEL.



Before you close up shop for the day, take another look around the compressor for oil leaks, loose, broken, or missing parts.

Now, you can close all panels and cover 'er in a protected area.

LUBRICATION

Here's a rundown on the lubes you'll need:

TEMP.	TEMPERATURE RANGE			COMPRESSOR	REMARKS
	100°F-110°F	110°F-120°F	120°F-140°F		
10				Motor Comp.	Oil-free breathing
10				Refrigerating Compressor	Oil-free full work on startup
10	Shell Mils PT	Shell Tello 41	Shell Awadell 1.0	Compressor	Lightly
10				Stages	
10				Motor Compressor	• Grease and oil • Shell level after running five minutes, 80% into 2 1/2 quarts.
10				Refrigerating Compressor	• Grease and oil • PT into 2 1/2 quarts.
10				Sealing Parts	Sparingly
10				Insulation	Sparingly
10	GM	GM	GM	Two Seal Tube (2)	Sparingly
10				King Pin (1)	Sparingly
10				Center Steering Arm	Sparingly
10				Wheel Bearings	Remove oil, clean, inspect, lubricate bearings, reassemble.

If you want more info, call us at 1-800-4-A-1-14-00 or 1-800-271-1111.

*These lubes I give only, whenever the machine's been disassembled and all the oil's been drained off. You'll need only 2 1/2 quarts for a normal oil change.

When you change oil in the rotary oil chamber, you refill it to the plug level, install the filter plug, and run your rig for about five minutes. Then you drain the air receiver, remove the oil filter plug and add oil to the plug level.

When you change or add oil to the reciprocating crankcase, you fill it to the dip stick level mark. **DO NOT OVERFILL IT.**

ELECTRIC MOTOR

The Dyna-line electric motor has sealed bearings and doesn't need any lubrication—except when it's being overhauled. If you've got a rig that doesn't have a motor with sealed bearings, then you're going to have to lube it regularly.

KEEP 'EM CLEAN

Here's the general idea that your filtering and cleaning cycle should be changed. Your climate and temperature may vary a little, so you'll make your changes accordingly.

Substrate	What the temperature is	Change every
Industrial filter	+40° F to +100° F	20 hours
	+100° F to +120° F	10 hours
	+120° F to +180° F	4 hours
Industrial filter	Over 180° F in dry cleaning field every 20 hours. Don't use in 20-hour labors.	

INDUSTRIAL OIL FILTER: Check every 20 hours. Replace 75% (change group 4) or clean.



OIL FILTER CLEAN: Clean in dry cleaning field every 200 hours. The screen is located on end or rotary valve.

INDUSTRIAL OIL FILTER: Clean screen every 20 hours with a non-flammable solvent.

The valve above the screen on the filter base of all return valves every 100 hours. It's on the top of the oil receiver.

MAINTENANCE AND SAFETY TIPS

You always open all valves and drain all the air from the compressor before you blow-dry any part of it.

You don't ever adjust the pressure switch unless the automatic releasing pressure setting is more than 2000 PSI.

Never point or wave the wand toward the priority valve.

Always use a trained hand during recovery for the mechanical filter.

Always inspect the "O" ring when you replace a lubricator cartridge or filter.

Be sure that the vent on the side of the subcooler valve is always open.

When you drain the mechanical filter—every 24 hours—make it in an approved dry cleaning fluid for about 45 minutes, then flush it dry with compressed air.

Always allow the compressor to warm up and cool-off for three minutes when starting and stopping.

When draining the air receiver, you open the drain valve slowly to prevent the drain line from banging up.



THE O-RING SEALS ON THE HOSE PRESSURE SWITCH SHOULD BE INSULATED WITH A NEW MATERIAL BY NAME. THE O-RING SHOULD BE IN THE SAME SIZE "O" RING SIZE OF MODEL FROM THE TOOL.

You may hear a noise like coffee granulating at the air return valve on the oil separator for several minutes when you shut down. That's OK.

Always vented the compressor during the initial pressure build up to blow out any moisture and oil from the condensing chambers. You only want to open one drain valve at a time because they're all connected to a common manifold.

Always, but always, release the pressure from the receiver first before disconnecting it from the manifold.

You don't use acetone or fuel to tighten the packing cone on the lubricator. Hand tight is good enough.

Never point the line on the valve assembly. It's the same as getting a nut on 'em and it'll react to so that at all.

Another thing—pin this with part. No. The 1-2/16-20.4 LB. Caution: Do not attempt to re-start the compressor when the air receiver gage exceeds 2000 PSI. You release the pressure by opening the knock-out tap-drain valve before re-starting.

Your theory's based a home on your mind's eye. That's by right and that's what you fight.



DON'T LOSE YOUR GRIP



Couple of boys are walking around in the frozen state that has good. They survived the total destruction of their forest helicopters, and when total build, total instant because the wreckage was complete.

Comes how this frozen field? Well, the man was doing maintenance—power recovery maintenance. Naturally, after he split his hoodies, he held downhand on the collective stick to keep up his RPM.

He continuously he was flying bare-hand, and it was that day, as naturally his hand was damp with perspiration. When he wanted to apply power for the recovery his hand slipped off the collective stick and throttle. It only took him a fraction of a second to regain his grip, but that was not long enough and he whirled.

OK, no bad, and fortunately the pilot and the IP are all right, even if the bird will never be the same again. Now, the question is: What can you do to be sure

this never happens to you?

Most important, perhaps, is just to know and remember that it has happened, which proves it can happen.

Which thoughts should remind everybody on the state of his hold whenever he's working in close quarters, whether with the ground, structures or even other aircraft. The same goes for any of you mechanics working in or out of the chopper. Be sure of your hold on that throttle—and check to see that the pitch stick's tied down securely.

There's a lot to be said for wearing light leather gloves, even in warm weather—perhaps particularly in warm weather, when hand sweat is probable. That's light gloves, remember. Heavy gloves are sure you can't get the proper feel with 'em.

Just in pulling, you'll be happy to know that the grip is still good justifying ~~being~~ ~~grip~~ ~~and~~ ~~the~~ ~~control~~ ~~handles~~ ~~are~~ ~~still~~ ~~good~~.

DOGGONE IT, DUCK!



You'd think everybody would know by now that an H-M come Mahe can swing low enough to strike a man walking under it.

But there's a man in hospital right now who was struck by the blow as easily as his Grandpa got it with Curly. He began to duck and got

caught by one of the low flying male come blades while having the chopper about shooting down. Fortunately the Mahe was turning slowly, so the cut that caught him didn't kill him. But it gave him an awful hole that really poked his back.

Let's not keep our heads down, what?

STICK WITH IT



Of course, whenever possible, it's always a good idea to plan and schedule your work so you won't have to switch mechanics in the middle of a job.

Many a half-figured man didn't stick around long in a job when the mechanic didn't stick with the job on the ground. Switching mechanics in the middle of a job is one of the best ways to set up an alibi for an accident.

The mechanic taking over may meet his maintenance where he thinks you left off. He might never see that half-figured hole, the missing safety wire or the adjustment you didn't have time to finish. When you are called off the job you're doing, at least try to complete the particular phase of the work you wanted.

Suppose you're the man doing the taking over, wouldn't it be a bad idea to call over an alibi inspector before the first mechanic leaves the job. That way there's no chance of missing something.

CONFIGURATION

It means "... relative disposition of parts..."

And the word is well used when talking about the disposition of signal equipment in Army aircraft.

That's exactly what TM 55G 150-40 (11 Mar 59) manages to do in less than a dozen pages, too. It lists out various configurations of signal equipment installed or scheduled for installation in Army aircraft now in use. No small task in itself.

Does it by type and geographical location. Plus it mentions the tools, test equipment and Department of the Army technical literature needed to maintain the equipment.



Although relative requirements sometimes shift and configurations change, the maintenance literature references in this TM stand par-excellence for the supply manual descriptions.

Even Big Tom knows "Repair Parts and Special Tools" (RP and STL) and carries TM numbers. For example: The AN/ARA-11. The first and second relative RP and STL for this equipment is TM 11-6629-100-11P and the third, fourth and fifth relative RP and STL for the same equipment is TM 11-6629-201-11P.

If you're an avionic maintenance man, TM 55G 150-40 is one of the most useful guides you can get.

CONTRIBUTIONS

APU TIPS



Dear Editor,

You have been right with the APU's — seems like they're either in our way across the field or you can't start 'em or they're causing goosebumps somewhere.

To fix this headache we put a special generating rig on our aircraft tug (Tramco, warhorse, 4-wheel). We got a rig for less: 24-volt generator, regulator and battery and mounted 'em on the left fender of the tug. We drove the 24-volt generator by taking the double groove pulley off it and putting it on the 6-volt generator of the tug. Then we take the single groove pulley from the tug generator and put it on the 24-volt generator. A short commercial flex belt runs from the spare groove on the tug generator to the other one and powers it.



The regulator and battery are hooked up normally. Then we hook our aircraft's external power cable to the battery.

Now say that we use the tug to load an aircraft out to the line, we have a built-in APU to start it. Works good.

Shag Crew, 22th TAWM Co.
Red Army

(Old Man's simple solution—but do you have the Old Man's permission. Thanks for reading along the magazine.)


A IRON STAND



Dear Editor,

Most times when you want to fly flags on tanks you attach to the turret or the radio mast or to the commander's cupola. This usually means loss of flag, a haphazard way of flying the flag and obscures the visibility of the tank commander besides being hard on the radio mast.

A homemade holder for the M1A3 flag pole would eliminate all these negative factors... for a cost of less than a dollar and an hour's labor. Here's all that's needed:



This flag stand is unattached and attached as shown. With this arrangement the flag holder can be taken out of the loops and stored away when not needed.

UP S. James E. Fox

Fort Knox, Ky.

The Materiel's a real cheap idea— inexpensive, easy to make and adds to the safety factor and the military appearance of the vehicle. It'll be up to your commander, though, to adopt it or not in their units.

EMERGENCY SHELTER



EMERGENCY SHELTERS

Why not cut down maintenance time on the authorized dolly or make it obsolete by building a shelter over it?

Instead of storing the dolly in the trailer, where it's hard to get at for maintenance servicing, here's an easier way:

BY GUY



Place the dolly on the authorized storage rack in the loading area. Then build a frame around it, using 2 x 4 and 1 x 6 cleavage lumber, cover it with canvas and paint it. Paint will show the canvas tight and give you a neat protected cover.

MC William L. Bush
Bristol, Pa.



(Ed Murray's) a neat idea that would appeal to a lot of maintenance. Guys: think it that you want to be sure you make it out of non-flammable material for use in the loading area. Organic materials like wood and canvas are strictly no-go. They ignite too easy.)

FORGIVE YOUR FOREFINGER



Dear Editor,

Second only, but one of the handiest maintenance items I own is an old beat-up sewing thimble.

This thimble not only saves my fingertips and knuckles—it actually helps me handle some real gummy service jobs.

Say you have to pull a corner pin that's headed in a hard-to-reach spot. With a thimble on your forefinger, you can poke in there and bend the ends until the pin pulls easily with your pliers. It helps you corner pins back, too.

Come on you, reach for the thimble to poke anything too hot for the bare finger, or to handle a sticky job like getting sticks through doors.

MC L. P. Rogers
Fort Bliss, Texas

(Ed Note—Charred if you haven't got a good thing stowed up there, Roger. Hope your next door's needle you about it?)

BOY SO SLEW IT!

Guys who use straight or liquid coolant to stretch expansion tank or grade engine to maximum, hold valves, etc., give Uncle a big pain in the slinking budget. Kudos generous. Come now (Ed: On 470-20 127 Aug 58) to say this type of insight will only be reached by seeing.



SORRY, WRONG NUMBER



This number gander is TM 1-4110, 207.12P or Caterpillar pumps, models TM, TMCW, and TMCW-2 with Cater engines, model ABM. The number on the cover is wrong—read it TM 1-4120, 207-12P.

Coonie Rodd's BRIEFS



Tighter tow-hold

A heavy load behind that M21 15-ton truck calls for tight connections between the hook and the tow. Any loosening in that heavy-duty plate hook may let the load break away. The hook-washer and jam nut that hold the plate hook and were adequate in the past perhaps have been known to wobble loose. So give 'em a once-over now and then and tighten as needed. If the plate hook-washer's defective, replace it.

Faulty M1 spring pins

Hold it! Your M-1 rifle could have a faulty spring pin that'll break off on the fly.

Which means it could get wedged in the bolt or jam up between the bolt and the magazine, giving you a fixed firing pin action. Righty dangerous.

These faulty pins have two marks around the tip, causing them to break. The marks are so small it'll take a magnifying glass or expert eyes to spot them—your armorer may have to get help from your support unit to spot them.

Roof trawler washer

It's the letter. You need those felt filters on the main bearing of the F404-1000s trawler. Letters have serial numbers and from 20822 will have them permanently stamped in the bearing spacer. If you have an earlier model, see your 100,000 people about getting permanent numbers for your bearings. They're FM 5508-422-1368.

Off to the night store

You M16A1 rifle-washers and M1 119V drivers want to be sure you haven't got your hand throttle more than one-quarter open and that your engine speed doesn't go over 2000 RPMs... when first starting. This heavy hand or foot method can ruin your fan valves. M 9-122-14 last 29 gives the gump on this.

How cold weather got

Remember that those old, reliable publications on cold weather care of vehicles, FM 9-28.15 (4 + 51) with changes, and TB Ord 172 have been superseded by a large job. It's TM 9-287 (last 29) and goes under the handle of "Operation and Maintenance of Ordnance Material Involves Cold Weather O^r to -60° F." It's a mighty good thing to have in the brass monkey compartment 109-1296.

*Would You Stake Your Life on
the Condition of Your Equipment?*

In PM — its the **little**
things that count!

**WADD'YA
MEAN
IT'S ONLY
A LI'L OL'
COTTER
PIN!**

