


RETURN TO
FIRE CONTROL SECTION

ISSUE NO. 13

PS

THE
PREVENTIVE
MAINTENANCE
MONTHLY

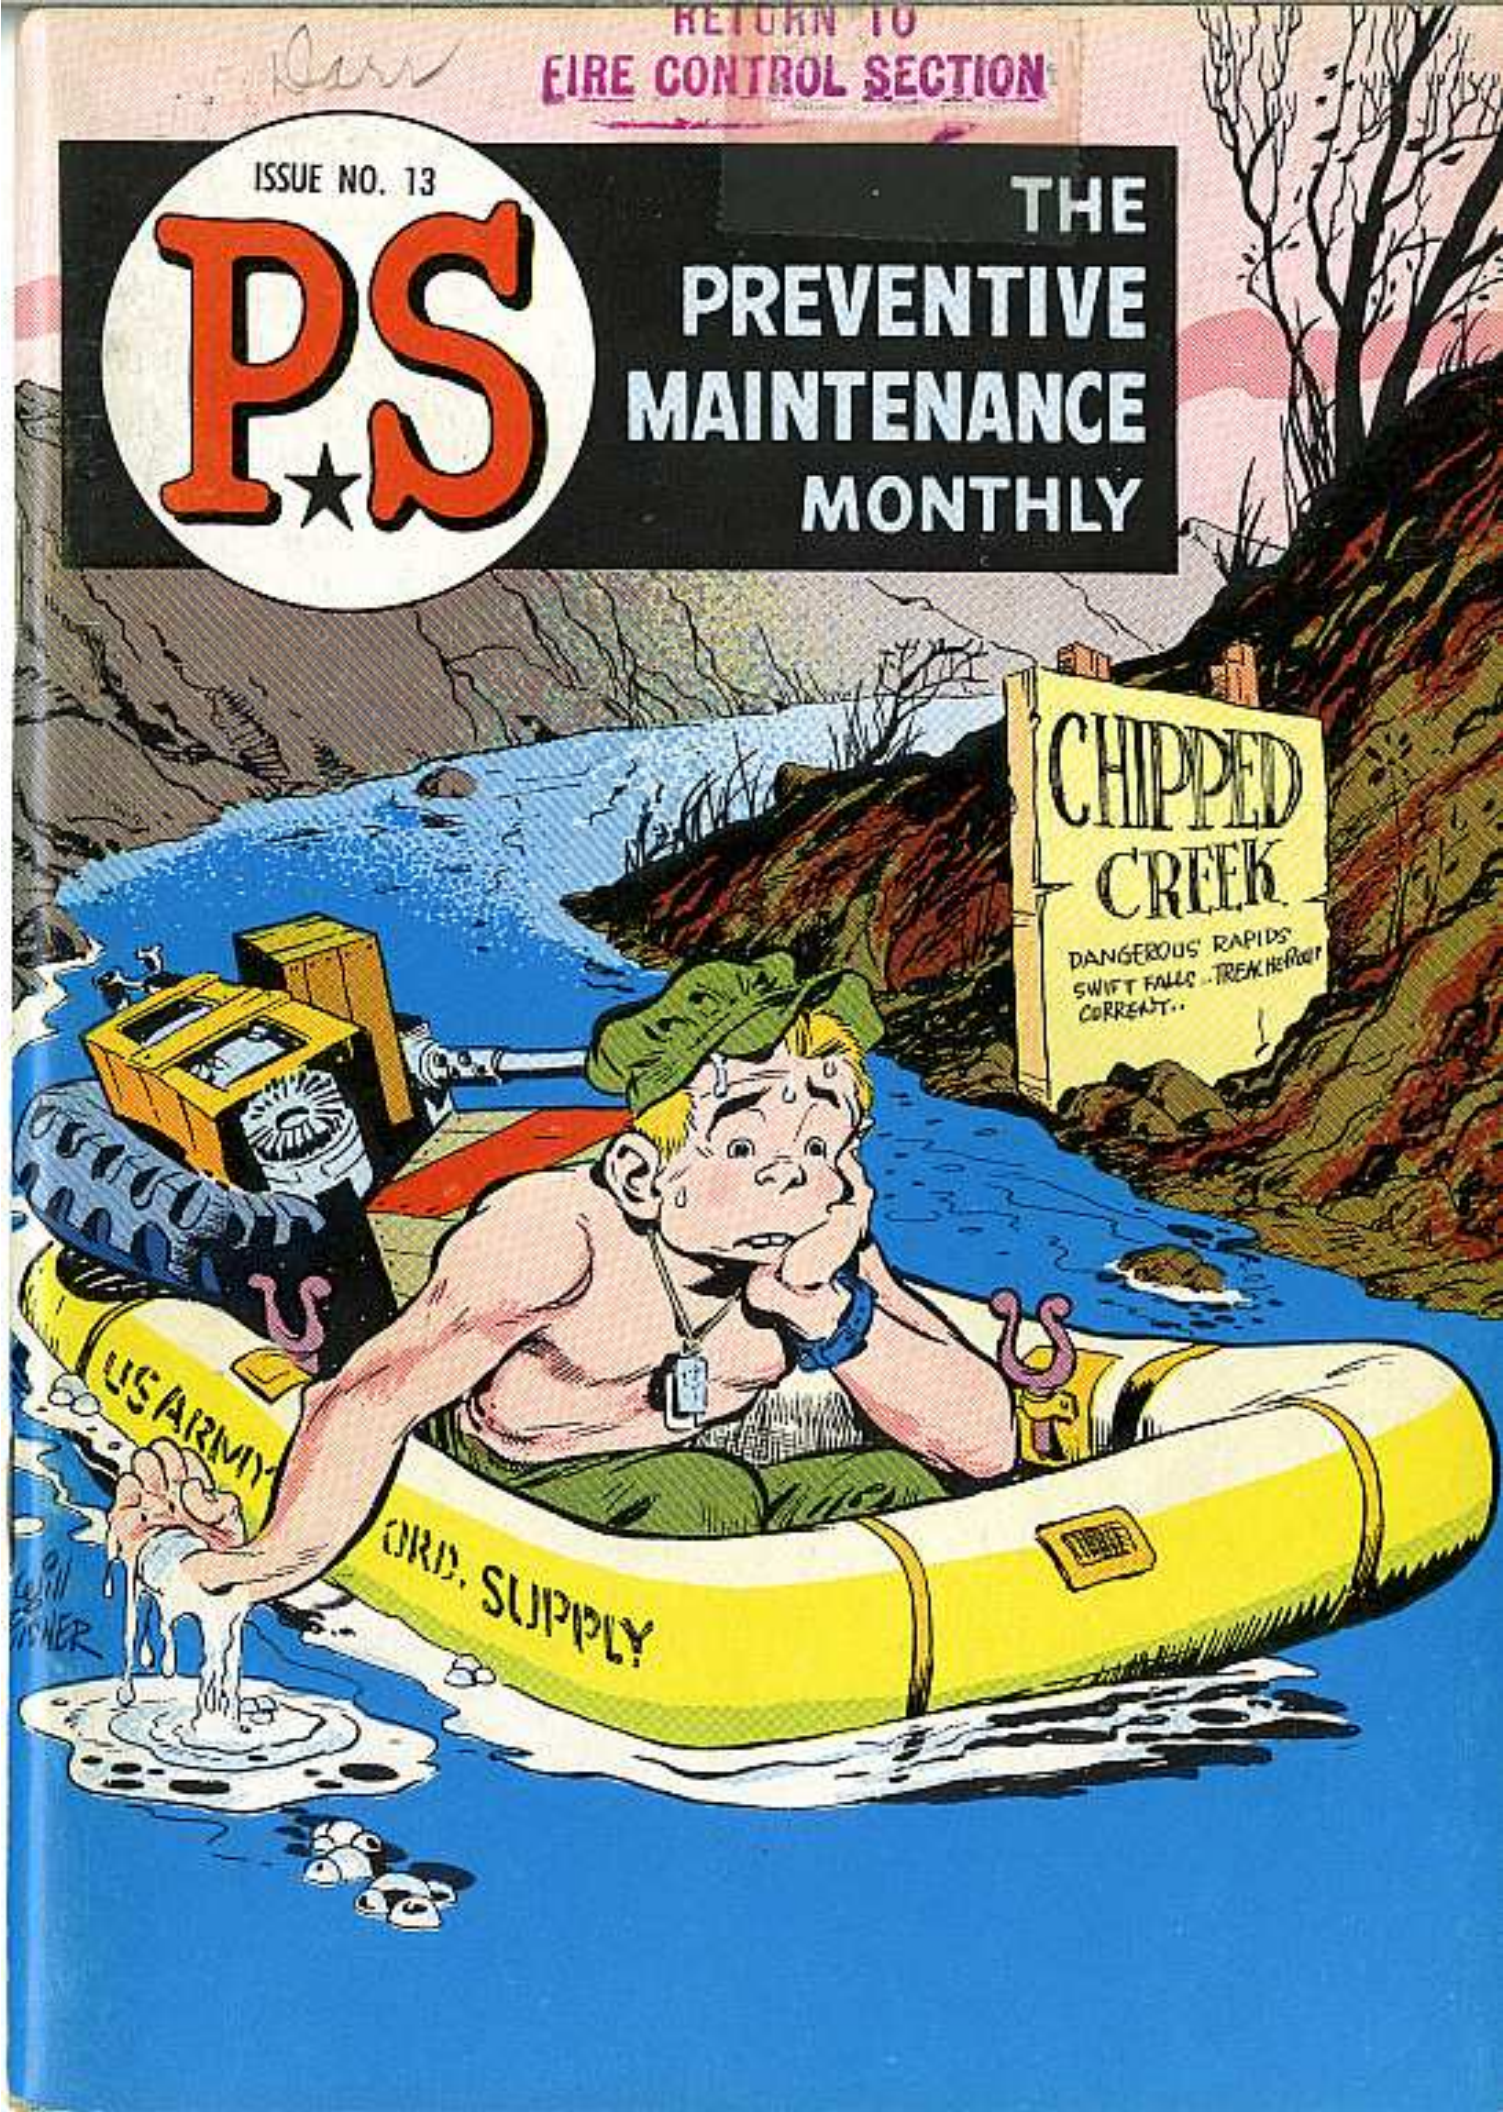

Bill Fisher

*Gentlemen, step over here a moment
and meet the new hydraulic-crane truck
that's gracing better motor pools everywhere.*

the new M62 wrecker

The M62 is a recovery vehicle capable of all but the heaviest recovery work, but the real joy it will bring to your life is the way it takes the jerk out of jerking an engine or power-package, or grooving and ungrooving a gun tube.

YOU all know that the big problem in any lifting job is the little movements. It's even trickier as your blistered hands and aching back can testify, to thread your umpty-ton gun tubes into their socket.

Well, that's where the new crane made by the Austin-Western people comes in. Being hydraulic, it is capable of much finer control under full load than any friction-clutch hoist you ever saw, and can ease an engine or gun tube into place as easy as you please.

Looking at the wrecker (Fig. 1), you can see that it's a crane mounted on the M39 series 5-ton International chassis. This crane can swivel clear around. But to keep you from knocking the cab off the truck in your wilder moments, a removable stop limits the travel to 270°. You can raise that boom from the level traveling position anywhere up to 45°, and the hook end will travel out about eight feet.

HOW IT WORKS

Before you try to run this machine, you'll want to know how it works.

Here's how:

To start at the beginning, it is powered by the engine. Power is taken off from a continuation of the input shaft of the transfer case. This means you must have the transfer case in neutral to run the crane or the rear winch. (The emergency brake can be on since the brake is mounted on the transfer-case's output-shaft.)

From the transfer case, the power goes to what is called a power divider at the rear of the truck. You set this power divider to your choice of winch or crane, and when in crane position you have actually engaged the hydraulic pump which provides operating pressure in the crane lines.

To save you a lot of scampering from the bed to the cab and back, and to give you better vision and control when using the rear winch, they have brought back an extra clutch control and a throttle lever to the rear position.

Now, the hydraulic pump runs best at 1500-rpm, and to keep it there they rigged a contraption. There is a gover-



FIG. 1

nor unit on the pump very much like the one on the engine except for its speed range, and when you engage the pump you automatically switch a valve in the governor vacuum lines which turns control of the engine speed over to the pump governor. All you do is shift to the crane position, pull the rear throttle all the way out, and you are in business.

The hydraulic pump takes oil from the supply tank and provides it, under about 1200-pounds pressure, at the valve bank in the crane cab. From there, you send it to the crane cylinders, the hoisting motor, or the swing motor according to your needs.

'Ten—shun!

Sharpen one eye and point it frequently at the right $\frac{3}{4}$ " bolts that fasten the Boom Shipper to the mast. They need to be kept spinach-tight at all times or else you'll have wobbly fit or even worse . . . sheared bolts.

HOW TO OPERATE

That's **how** it works, now here's how you work it:

First of all, of course, you drive the wrecker to the job, picking the best position you can according to conditions. Then you size up your load to see if you need your outriggers. The **SAFE LOAD CHART** on the crane (shown below) will help you here. However, **if you are in any doubt at all**, put the outriggers out—it doesn't take long—and this wrecker will **not** pick itself up if you tip it over. Take out the L-shaped retaining pins and pull the outrigger out till it stops, then

SAFE LOAD CHART

RADIUS	2 PART HOIST LINE	
	WITH OUTRIGGERS LOAD IN LBS.	WITHOUT OUTRIGGERS LOAD IN LBS.
10 FT.	10000	6700
11 FT.	8400	5800
12 FT.	7150	5100
13 FT.	6300	4600
14 FT.	5600	4150
15 FT.	5000	3800
16 FT.	4550	3500
17 FT.	4250	3200
18 FT.	4000	3000

MAXIMUM CAPACITY WITH BOOM RETRACTED & BOOM SUPPORTED TO FRAME - 20,000* @ 10 FT. RADIUS WITH ALL OUTRIGGERS DOWN - 3-PART LINE.
20,000* @ 15 FT. RADIUS WITH BOOM JACKS TO GROUND, 3-PART LINE - REAR OUTRIGGERS UP.

swing it down and screw the plate to a firm footing on the ground. These plates are big enough for most ground conditions; but in real soft going, put planks, logs or even rocks under them to spread the load. When the inner hole on the outrigger boom lines up with the retaining-pin hole in the bed, put the pin back in. Chock your wheels if the ground is slippery.

Now your truck is in position, and you must next release the boom and the hook. Since this is easier to do with power on the crane, you fire up at this point. From the cab, start your engine and be sure your low-air-pressure buzzer has stopped buzzing, then apply your foot brake and turn the brake-lock switch on the instrument panel. This locks all six wheels to give you the best hold on the ground you can get.



Holding down your clutch pedal, you shift your transmission to fifth gear, and your transfer case to neutral. Now engage the power divider by unlocking

the lever (Fig. 2) at the left side of your seat (above the parking-brake lever) bringing it forward. Now when you ease out your clutch pedal, you'll have power back as far as the power divider.


Going back on the bed to the control position just in front of the rear winch (Fig. 3), you pull up the clutch-control lever which declutches your engine. Lift the safety latch and pull the pump-control lever forward to engage the pump. You may have to double-clutch to get it to slip into gear. You then ease down the clutch-control lever and slowly pull the throttle lever open all the way (your engine speed is governor-controlled, remember?)

THE CRANE

To use the crane, you stow the telescopic traveling-supports which are holding the fixed part of the boom—called Boom Shipper—by unpinning them from their rings on the truck bed, and swinging them up alongside the

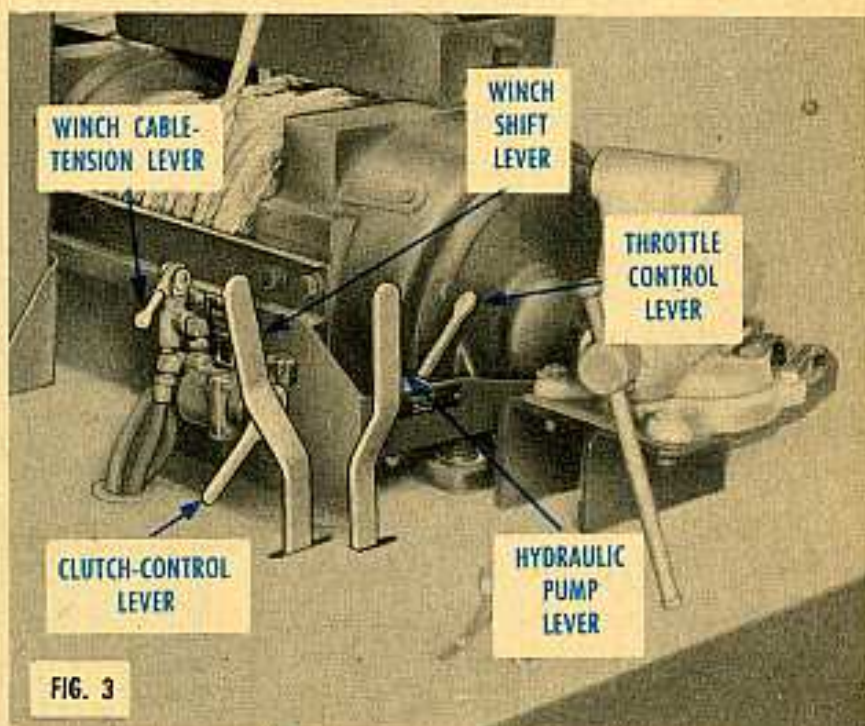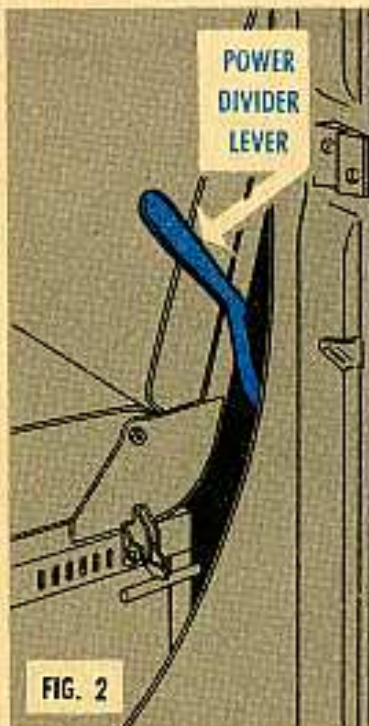

boom shipper. Then when you slack off the hook by moving the hoist lever in the crane cab (Fig. 4) away from the seat, you can remove the hook bridle and you are ready to use the crane.

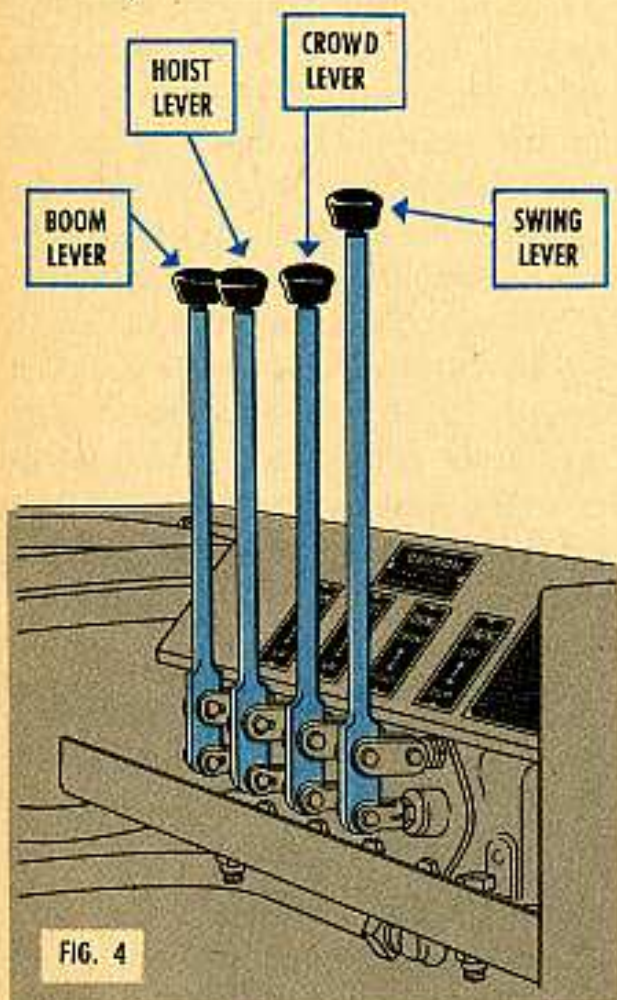

Looking at Figure 4 . . . you will see the four control-valve levers which control the operation of the crane. You will find the direction of motion on these levers agrees with your instinctive sense of which-way is where, and after very little practice you will handle this crane with skill and confidence.

Reading across from left to right as you sit in the cab (Fig. 4), the BOOM lever raises and lowers the boom. You pull to raise, push to lower. The HOIST lever controls the crane cable. Again you pull to raise, push to lower. The CROWD

lever extends and retracts the movable part of the boom. You push the lever away from you, the boom goes away, the load goes away. You pull the lever to you, the boom and the load come in to you. The SWING lever, on the far right, controls the swing motor. Push the lever out in front of you, and you and the cab move forward—turning to the left, that is. Pull the lever back to you, and you and the cab move backward—turning to the right.

When you've run this crane awhile and want to make compound moves with the hook, you'll find that the pump has enough capacity to allow use of any two levers at the same time.

Caution: Always push the crowd lever and hoist lever forward together. When you crowd or extend the boom, the hoisting motor and cable drum don't go out with the boom; so the hook comes up a ways. If there's not enough distance between the sheave and hoist block, you'll jam the block into the sheaves at the end of the boom.

Safety valve: There's an oil-pressure relief-valve in the hydraulic system that pops and prevents damage if you keep the valves open after the pistons reach the end of their stroke. This doesn't mean you can make a practice of operating the swing, crowd, or boom hoist until they stop themselves. . . a safety valve is no substitute for a good operator. Besides, you could break a hoist cable before the valve popped, so keep an eye on what you're doing. And remember not to jam that hoist block into the boom sheaves.

HEAVY LOADS

So much for the normal loads and

usage of the crane. Comes a time that you wish to make a heavy lift at full boom extension. It is possible to do so by supporting the boom. The boom jacks are those long telescoping tubes in the stowage. Feet for these jacks are provided, also a spreader bar. The boom jacks are attached, by means of a 1½" dia. pin, at the hole about 5' in from the boom end. The boom-jack feet when on soft ground, should be supported same as the outrigger feet. When using these jacks, lower the boom until the weight is off the boom-lift ram, and use only the cable hoist in lifting.

In lifting the average load, the two-part position of the cable is adequate. For heavy loads, or for more precise control, unpin the cable from the end of the boom, carry it over the right-hand sheave and pin it to the becket of the hoist block. This will give you a three-part hoisting rig with greater capacity, but with slower hook speeds.

Considering loads in general, the first thing to look at is your **SAFE LOAD CHART** on the crane (shown at bottom of page 555.) This gives you the proper loads for operation at the **side** of your rig, both with and without outriggers. It is true that your machine **can** lift larger loads at the rear, but it is also true that your big lift **can** result in bent booms, bent frames, and so on.

OTHER USES

This crane has many more uses than simply recovering vehicles and changing engines and gun tubes. By crowding the boom, it is possible to pick up boxes behind a truck and load them all the way to the front of the bed. You can also stack

loads to a considerable height by running the boom clear up.

To tow a disabled vehicle, you've got to rig the boom-shipper supports to take the strain off the boom-hoist ram and the swing gears. Extending the telescopic legs will let you ride with the boom high enough to lift the front wheels of the towed vehicle to a safe height off the road. But rig your tow bar from the wrecker pintle-hook to the towed vehicle's bumper tow-rings. In the absence of a tow bar, use your tow chains to take the towing strain from pintle to bumper—the crane cable should only lift the tow. (Remember to disconnect the towed vehicle driveshafts for tows of 50 miles or longer. Also, use your air jumper-hoses to operate the brakes on the towed vehicle.)

Note: It is possible to set up a two-man operation and run both the winch and crane simultaneously if recovery conditions call for it.

REAR WINCH

Now having considered the crane, consider the rear winch. The big difference between this winch and the older ones which are more familiar is the level-wind device (called a Spooler) on



top of the winch. This spooler is a sheave on rollers, running on a curved track across the top of the winch. When the cable is reeled in under tension, this spooler runs back and forth on its track, laying the cable in neat, level rows on the drum. Anyone who has pulled a bird's nest of heavy cable off an old-style winch will be sure to like this rig.

There's one feature of this winch that must be understood, however, or you'll get in all kinds of trouble. To work the spooler effectively, the tension on the incoming cable must be constant and even—more constant than the most careful winch man can provide under the various conditions of recovery work. To keep this constant tension, a set of air-operated tensioner-sheaves has been provided below the spooler. These tensioner sheaves retard the incoming cable just enough to be sure the spooler works right. This much is simple, but these tensioner sheaves can also hold the outgoing cable, making the swamper's job much harder, and almost surely making the cable come off the drum faster than it was pulled out. So you could have a bird's nest after all.

To solve this problem, there's one more control at the rear-control position—the tensioner-control valve. This valve must always be **off** when spooling out. It must be **on** when spooling in. Also, the spooler-sheave trolley has a lock pin which holds it for traveling. Be sure this pin is pulled out when winching.

WINCH OPERATION

To operate the rear winch, you set the cab controls up the same way as for crane operation—except that you can

use third gear for full-capacity loads. Back at the rear position, you make sure that the hydraulic-pump control is out and locked. Then use the clutch lever to disengage your clutch, and pull the winch-control lever forward to reel in, pull it back to reel out. You start the winch turning by pushing down the clutch lever, and control the winch speed with the engine throttle-control-lever.

Caution: Do your winching at engine speeds below 1000-rpm. Whatever you're pulling isn't going anywhere till you get it out. Better to take it easy and get it out undamaged than to rush things and tear up the equipment. Also remember that in winching position it is the engine governor, set for about 2800-rpm, that is in control—not the slower pump governor. In picking up your load, you'll need to work your clutch and throttle together just as you do in driving, but take it easy.

You'll find snatch blocks, ground anchors, chains, and so on in the stowage boxes which will let you set up sufficient mechanical advantage to handle whatever recovery jobs come your way. There are also spades that can be used to hold the wrecker against winch pull at any required angle. If possible, of course, it is best to pull straight to the rear.

When you are deciding whether or not you need to drive your ground-anchor stakes or deadmen and rig snatch blocks on them, be sure to consider one point. The capacity of your winch is listed as 45,000 pounds. Allowing for some safety factor, the cable may break anywhere above 50,000 pounds. Since there is no safety frame or Headache Rack between you and the winch, you'd

do well to drive a deadman in the ground with a block on it for dead-weight pulls in the high-weight bracket.

Your front winch is a spooler type, too. It works the same as the rear winch, except that the tensioners are manually controlled. This winch can be used like any other front winch, in connection with the low-gear low-range of the vehicle, to get out of a hole. Since this winch is primarily for getting your own vehicle out of holes, it is best not to use it for recovering other vehicles. Keep your ace in the hole and it'll get you out of one.

CARE AND FEEDING

Now as to the care and feeding of your new baby: You take care of the chassis as outlined in the vehicle lube order. The crane wants frequent greasing at the fittings, using GAA (Mil-G-10924) for all temperatures. The power divider, the crane-cable-hoist worm-gear case and the winch cases want Mil-L 2105 (SAE 90) above 0° (F), or Mil-10324 below 0° (F). The hydraulic-oil tank wants OE 10 from 0° to 90° (F), OE 30 above 90° (F), and OES from 0° (F) on down. Needless to say, the oil in the hydraulic system wants to be clean oil.

On the other hand, as long as the oil is right for the temperature range, and stays clean, it need not be changed. **Caution:** Always check the level of hydraulic oil before operating the crane. Fill to top mark on the dipstick.

There is one thing you should never forget. Once in a rare while you may hear squealing or clattering noises from your hydraulic pump. If and when you

do, stop the pump, check the oil level and then make sure the shutoff valve at the tank outlet is fully open. (This valve should be closed **only** for major disassembly and repair of the crane.) If there's plenty of oil and the valve is open, be sure the screen on the oil filler has not been broken or removed. If you find it gone, send the vehicle to Ordnance for check and repair.

LAST, BUT NOT LEAST

Be gently reminded that the wrecker man is the last resort of a driver who can't get his vehicle home any other way. If you bolix up your wrecker, there's nobody to come after you and bring you in. You will never hear the end of it if you have to go with your hat in your hand and get some other outfit's wrecker man to tow you home. On the other hand, that same wrecker man will generally be right willing to come out and hook on to an overload **with** you—he knows you'll help him if he needs it.

Be smart. You are the wrecker-man people call when they need help, and you oughta be available. So when **you** need help, get it **before** you pull your rig to bits.



CAUTION:

When securing for the road, be sure the pump and the winch gears are in neutral. (You don't want to hear ripping noises when you next engage the power take-off in the cab.)

generator and regulator grab bag



Speaking of generators and regulators for the 24-volt vehicles—since Auto-Lite generator and regulator parts are not interchangeable with^o Delco-Remy generator and regulator parts, you might think the units themselves aren't mixable. But they are.

No need to knock yourself out hunting for a Delco-Remy regulator to match that Delco-Remy generator, or an Auto-Lite generator to match that Auto-Lite regulator—they can be switched around any which-way. You can also use the two-brush-type generators as replacements for the four-brush-type generators (and vice versa) no matter what kind of regulator is in the truck.

The only thing you must remember is that the shock mount, if any, goes with the vehicle, not with the regulator. It seems that while both the Delco-Remy and the Auto-Lite regulators are designed to work OK in the midst of the vibration they get from the vehicles, some installations were found to be troubled by real low-frequency vibrations and the shock mount was the best answer. So you leave the shock mount

where it belongs and switch only the regulators. (This is the only way you **can** do it anyhow—the holes for mounting the shock mount on a vehicle don't match the holes that let you put the regulators on the shock mount. Clear?)

Another thing: The regulator you're using for replacement was calibrated for either a vertical or horizontal mounting position, and you are maybe going to use it the other way around. For this reason alone, it's good to remember that when teaming unmatched components, they should always be recalibrated as a team—by people who know how to use the right instruments. However, as a field expedient, the variation in voltage is so slight that you can go about your mission unconcerned till you can get to an adequate shop.

This whole business of interchangeability of generators and regulators as units might cause confusion in areas where radio bonding is important. Why? Because Delco-Remy worked radio suppression into the generator and regulator both, while Auto-Lite put it all in the regulator. Which means an Auto-Lite generator mated with a Delco-Remy regulator equals no radio suppression, but a Delco generator and an Auto-Lite regulator will be quiet. Tell it to the Signal Corps if they start scratching their heads over your vehicle.



Connie Rodd's "SHORT 'N SWEET DEPT"



Radiator hose

Because something slipped a cog somewhere along the way, ORD 8 SNL G758 doesn't list a radiator hose to carry the M38A1's water back into the radiator from the engine. If you've been improvising (the hose isn't straight like the M38's) for replacements, your troubles are over. Add this number in your ORD 8 and start your requisition: Hose, water inlet, radiator (moulded); Stock No. G758-8328457.

If you need it now and it isn't in local stock, here's a quick solution for you: Get yourself an inlet hose (Lower) for the M38—Stock No. G740-7697589. Remove the reinforcement spring and hold the new hose along side the old one to see how much to cut off. A small piece off each end and it'll sluice your M38A1 till the right hose comes along.

Truck-tractor gearshift

Been wondering how to lubricate the gearshift linkage on your M26 or M26A1, 12-ton truck-tractor? If you have, here's how you'll do it.

Put your transmission gearshift-lever in neutral and shove it to the right as far

as you can. Keep it there until you've finished the job that's coming up, or you might drill into the gearshift-lever housing and run into trouble.

Measure $\frac{3}{4}$ " from the bottom, on the left side of the gearshift-lever bell (Fig. 1) and mark it with a center punch. Drill a $\frac{1}{8}$ " hole—in the bell only, please don't go into the housing.

Take some red paint and smear a big circle around the drilled hole. This will remind you to lubricate the gearshift linkage every 500 miles with seasonal oil (TB 9-767-3, 28 Oct 52). And when you lubricate, push the lever over into neutral position to make for an easier oiling job.

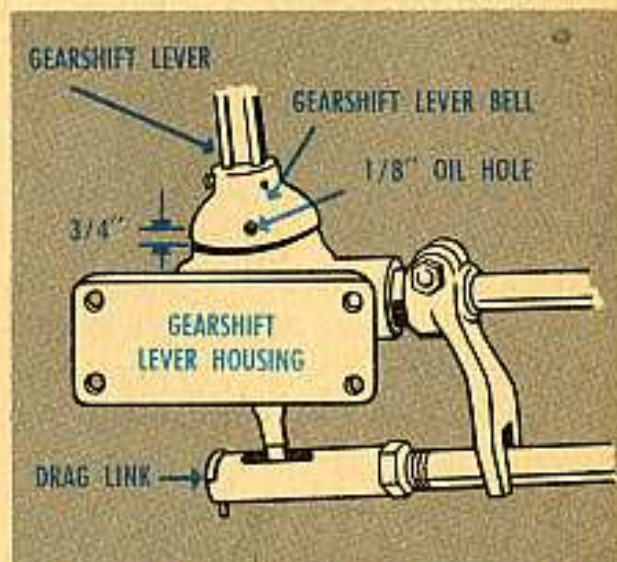


Fig. 1—A little $\frac{1}{8}$ " hole with some red paint around it makes stick pushing easy.

Rear-axle-vent baffle

Wiping your M38's differential-housing cover won't stop this lube from oozing its way out of the vent and messing up the cover. It'll keep squeezing out and pick up dirt the way fly-paper collects flies, clogging the vent. Next thing you know pressure builds up in the unit forcing grease the wrong way—like the horse who blew first when given a pill through a blow-pipe—blowing out your oil seals.

You can keep the vent clear by putting a baffle over the opening on the housing cover's inside. Make the baffle out of a piece of scrap you have left over from some No. 18-gage steel, Stock No. 47-S-2667-60 (Fig. 2).

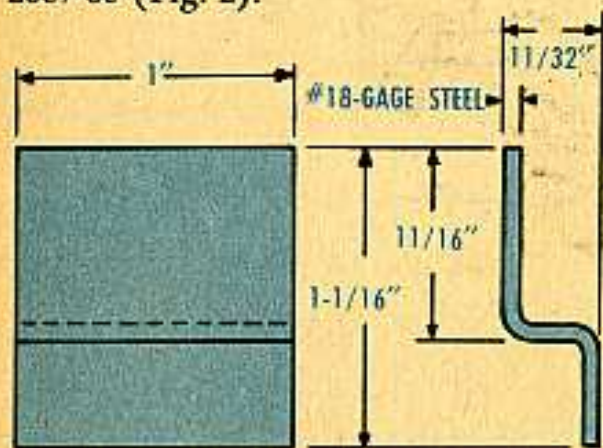


Fig. 2—It's as simple as ABC to make an M38 vent-baffle from left-over steel scrap.

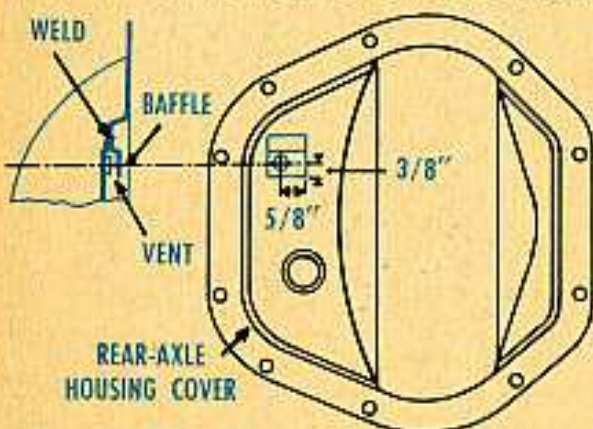


Fig. 3—Welded in place, it'll keep the differential-housing cover neat 'n tidy.

Then take out the rear-axle drain-plug, drain the lube, and take off the housing cover by removing the ten screws holding it in place. Now braze the baffle inside the cover (Fig. 3).

Put back the cover, fill the axle housing with GO and take another problem off your books.

M51 Tailgate-wing hook

Some of these hooks aren't bent closed enough (Fig. 4) and the chain slips off the hook and lets the wing swing outward knocking down anything in its way like a bunch of tenpins.

To make sure you're not behind a ball, press the wing to the dump body and slip the chain over the hook. If you've got too much clearance, take the chain off the hook and tap the U-shaped hook inward with a hammer. How much? Well, it should take a little force to slip the chain over the hook.

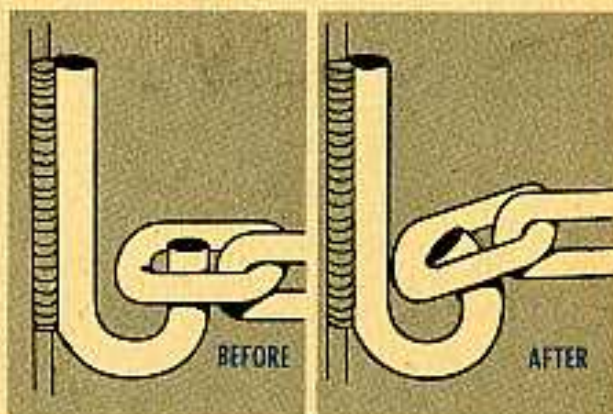


Fig. 4—If the chain slips off in "Before" tap the hook so she'll stay in hereafter.

Front-clutch failures

Too much or too little oil in your M135 Hydramatic transmission will get you an erratic oil pressure which, in turn, will help knock out your front clutch. The oil-

level dipstick is marked for either a hot or cold check, and the level should be at the right mark. Follow the oil-check instructions mighty close (TM 9-819A, page 68) to stay on the road instead of on the fence.

Another thing that will help goof up that front clutch is using F-1 position when terrain, traffic, or road conditions say that the transmission-control lever ought to be in F-2. Otherwise you'll get too much shifting or "hunting," and pretty soon you'll be hunting for a new clutch.

Winch-adjusting bolts

When the Sarge says, "An' now get out there and tighten evvy bolt, nut and screw on that truck," don't take him too literally. He doesn't mean for you to tighten the winch-drag-brake adjusting-screw or the automatic-brake adjusting-bolt. The

former is a slotted-head adjusting-screw located at right side of winch and the latter has a hex head and sits on the under side of the worm housing at left side. Turning these screws is to be done strictly according to TM data for winch adjustment—you don't just run 'em up to keep the winch from falling apart.

And while we're on the subject—when your winch acts like some guy has tightened the adjustments instead of adjusting them, but you know he hasn't (you being that guy), then look for rust on the surface of the brake disc under the lining. Condensation in the winch housing sometimes rusts the disc surface making the winch action erratic—if at all. In some dampish posts they pull the cover occasionally to clean up any rust deposits. And it is SOP to use the winch now and anon to keep the surface of the disc clean.

Move your tail-light out of danger



The tail-lights are slung a little too low under the frame of your 2½-ton, 4x2, GMC Dump (1951). They get banged and bruised when you dump your load.



To make it safer, take 'em both (one's not in the picture) off the cross-member. Reverse the bracket, and weld it to the top of the rear cross-member-subframe.

Disconnect the M47's override

relay and save the traverse gear-box.

don't override, commander, sir —or you will strip your gears.

Until such time as a permanent fix gets to you, the commander's override-relay in the dump-valve circuit on the M47 tanks should be disconnected so that the commander cannot override while the gunner's in manual traverse.

Trouble comes when the turret power-control-system is on and the gunner has used his dump valve to make the final lay with manual control. If the commander overrides at this particular time, the gear box automatically shifts back into power. Then the commander releases his override control—the turret is still moving, but the gear box wants to shift back to manual operation immediately. This forces two mating gears to engage (or try to engage) while they're rotating in opposite directions. No can do.

What results is a damaged differential assembly, and, in turn, a turret that surges—if you're lucky. It could also mean you'll need a whole new traverse gear-box.

So you take it from here: Disconnect the single-wire circuit #623 by unscrewing the single-pin Scintilla-connector on the rear of the commander's control (see figure). Tape it, as it is, someplace on the harness to keep it from dangling and getting tangled in

the turret ring gear. Vinyl insulating tape (Stock No. 17-T-1745-60) will do a professional job. It would also be a good idea to cover the open socket on the commander's control with the same tape—just to keep out whatever wants in.

With this circuit disconnected, the commander will not be able to override when the gunner's in manual traverse. When the gunner's strictly in power control, however, the commander can still override.



Fig. 1—By disconnecting this single-pin Scintilla-connector, the commander will not be able to override while the gunner's in manual control—meaning no stripped gears.

THE DOUBLE-SPRAG CLUTCH

NOTE: All M44-series, 2½-ton Reo and Studebakers should have double-sprag overrunning clutches (MWO G742-W3). The production change was made with Vehicle Serial No. 90475; trucks prior to that number should have swapped their single-sprag clutches for the new double-sprag unit.

When your front wheels seem to be dragging their feet and are not turning as fast as the back ones, does it mean your M34 2½-ton Reo or Studebaker is hung-over from trucking the day before? Or do you suspect that the new double-sprag overrunning-clutch-linkage is out of adjustment? You are probably right.

Here's how you can know for sure if your double-deal is adjusted properly:

1. Jack up one front wheel.
2. With transmission in reverse: The wheel should be free to

turn backwards—it should be locked against forward rotation.

3. With transmission in neutral: The jacked-up wheel should turn forward—it should be locked against backward rotation.

If, by chance, it doesn't check out this way, the shifter linkage between the transmission and transfer case has some lost motion and needs adjusting. So arm yourself with a wrench and screwdriver, remove the floor covers (in the cab) to get a birds-eye view of what's going on, and make the adjustment by the pictures.

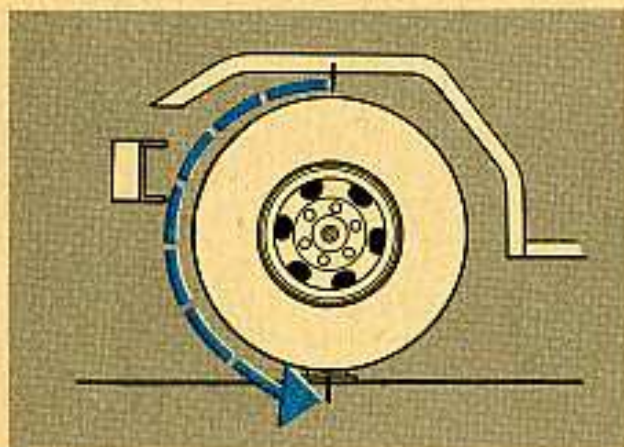


Fig. 1—Jack up one front wheel (if it's not already up). Shift into first gear, and turn the wheel ½ turn forward.

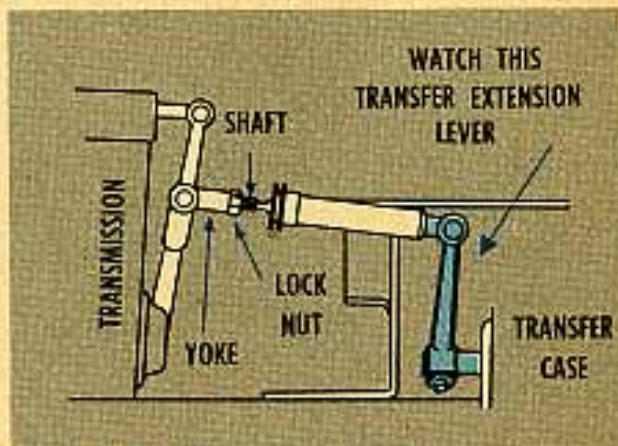


Fig. 2—While you watch this linkage, have someone shift into neutral. The transfer extension-lever should not move during the shift.

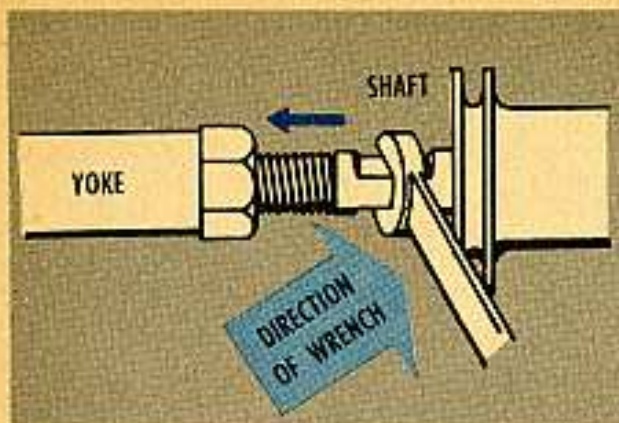


Fig. 3—If the extension lever does move, the link must be shortened. Back off lock nut and turn shaft into yoke.

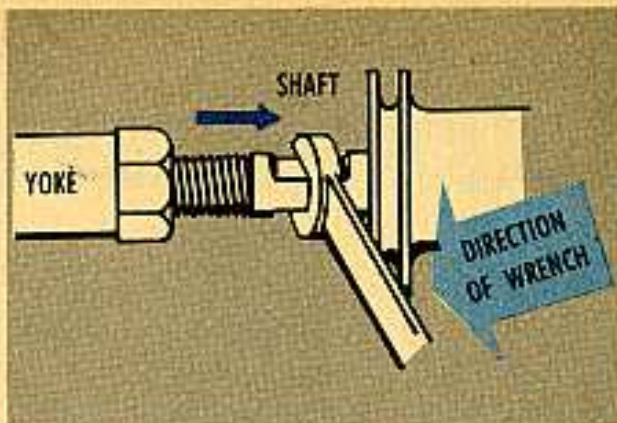


Fig. 4—If lever doesn't move (and adjustment still isn't OK), back off lock nut and turn shaft out of yoke to lengthen link.

THIS IS THE RULE

When the transmission reaches neutral after a shift from first gear, the extension lever should be on the verge of moving but it should not actually move. You make the adjustment by turning the shaft either in or out of the yoke until the linkage reaches this borderline condition.

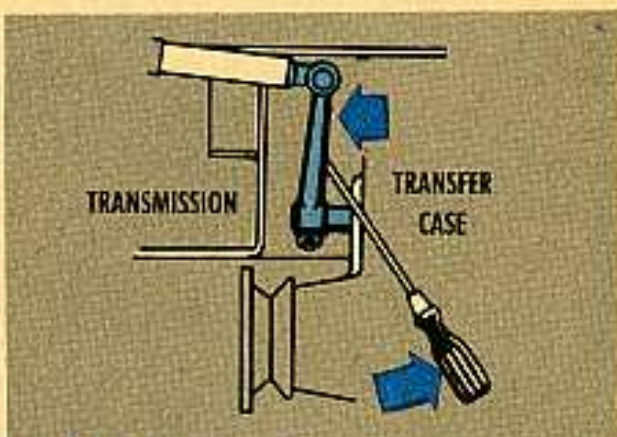


Fig. 5—Check the adjustment: with transmission in neutral, stick screwdriver between lever and transfer case; if lever can't be pried away from transfer, you're OK for forward speeds. If it moves away shorten the link.

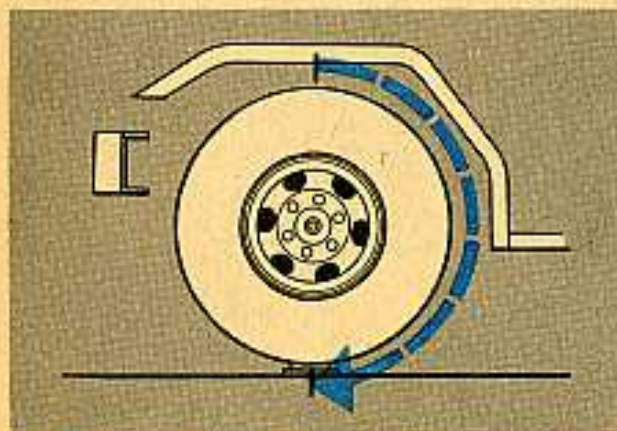


Fig. 6—Shift into reverse. Turn the wheel $\frac{1}{2}$ -turn backwards. (When you make these shifts, always turn wheel in direction the shift calls for—also make sure the transmission stays all the way in gear while you're working.)

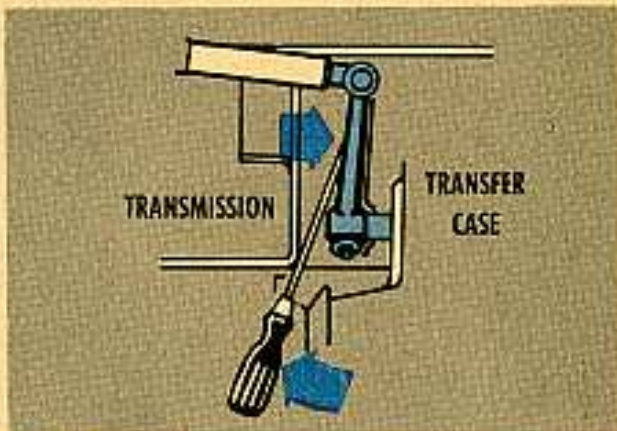


Fig. 7—In reverse gear, try to pry lever towards transfer case. If it moves less than $\frac{1}{16}$ " , you're OK in reverse. If it moves more than $\frac{1}{16}$ " , lengthen the link. Last, you check again as shown in Fig. 5. And that is all.

LOCKING WIRES

A few tanks are on the prowl with cap-screws maybe coming loose in their innards. And the guys who build them aren't the only ones who make mistakes—seems that many people repeat the error when rewiring cap-screws.

In general, cap-screws should be wired together in pairs according to size, and if there's an odd number of screws, wire the last three together (Fig. 1). Twist both ends of the wire together the full length

between the screws. The wire tension should be in the same direction used to tighten the screws.

Threading all the screws on a single wire (Fig. 2) is a waste of time. A break at any point in the strand will affect all the screws.

Look over your tank—check the final drive, engine, transmission, and universal joints—and see if the cap-screws have that single strand.

Most production vehicles have all the screws on any one unit wired together instead of in pairs. Pairing them off is easier on the back—but either way is OK as long as you have two strands of wire, twisted, with the tension in the tightened direction.

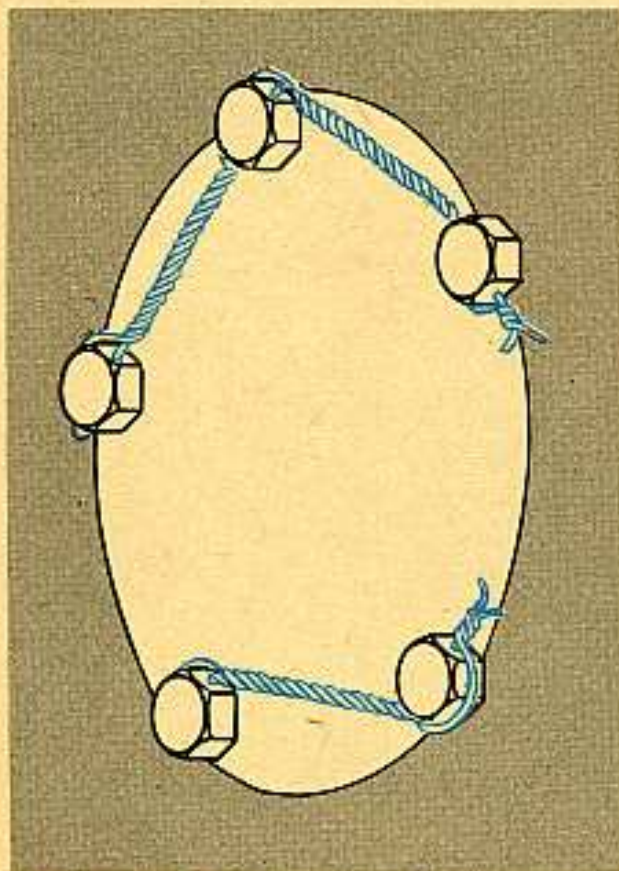


Fig. 1—This is the right way to wire those cap-screws. When they look like this, you know someone's done a real professional job.


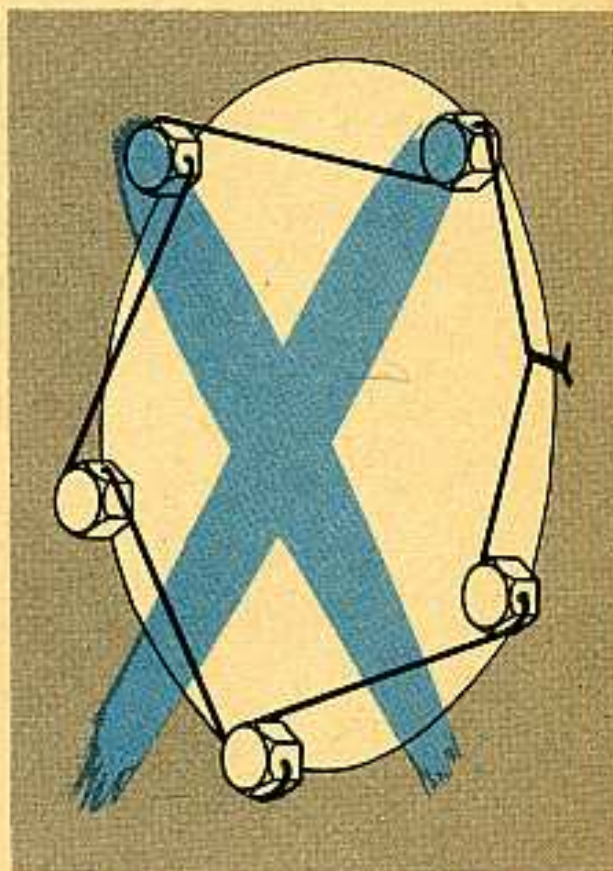


Fig. 2—This is the wrong way. If the wire breaks at any one point along the stretch, you'll have all five cap-screws on the loose.

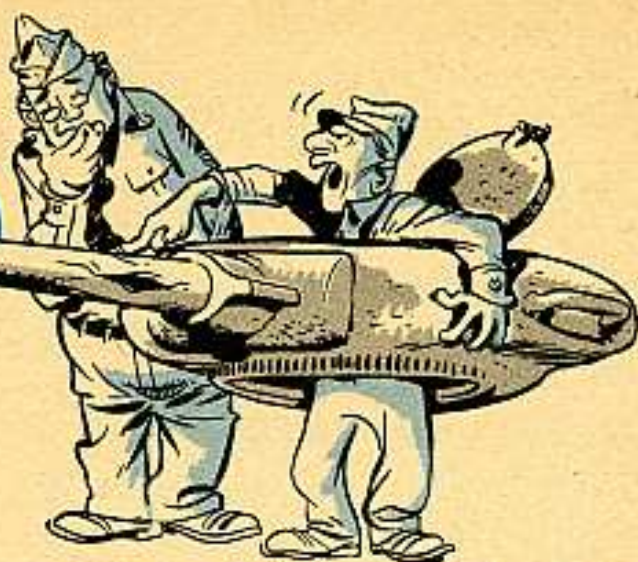

EXHAUST-STACK EXTENSION

Dear Half-Mast,

I suggest the use of an extension on the M62 wrecker exhaust-stack to divert the blast behind and away from the outrigger shoe. As now made, the exhaust gases soot up the outrigger and the truck bed.

MSgt V. G.

Dear MSgt V. G.,

If you want to soot someplace else, you go right ahead, pal.

Half-Mast

HOLES IN THE BUMPER

Dear Half-Mast,

Those large holes in the front bumper of the GMC M135 have me baffled. What are they for? I've asked around but nobody's got the answer.

WOJG J. M.

Dear WOJG J. M.,

Those holes are just holes—like the hole in a doughnut. There's no stress at the hole location; so-o-o to make a heavy bumper a little lighter, and

maybe save a little metal, that's where they punched 'em.

Some people, who think they know all the answers, have been using those holes for the tow-line. Don't know why the heck they do it—it ain't fun to tear off a piece of bumper. Use the shackles. If the shackles have disappeared, replace them. They're an "H" item.

Half-Mast

WELDING MILD STEEL

Dear Half-Mast,

I am looking for information if you can help me. Is there any kind of Welding Flux for a Mild Steel Rod? If there is, is there a publication explaining how to get it?

MSgt A. A.

Dear MSgt A. A.,

Since the electric welding-rods for mild steel are in most cases flux-coated at the factory, I assume you are talking about gas welding. But I am a little at a loss as to why you feel you need a flux for mild steel. Mild steel is one of the few metals that welds beautifully

without fluxes if all the other conditions are right.

If you are having trouble with your mild steel welds, I suggest you check for:

Dirty or corroded base metals or rusty rods.

Improper torch adjustment or wrong size tip.

And are you sure it **is** mild steel you are trying to weld? Lots of the stuff that used to be plain steel is now made of one or another of the alloys, which may call for special treatment in welding.

After checking all this, if you still feel you **gotta** have a flux, use the stuff you have at hand for cast iron or for brazing—or get some Borax, which is the base of most fluxes anyhow. Using these materials won't do you any harm, but all a flux does is remove the oxides, dirt, etc., from the metal and float them up out of the weld to where they can be scaled off later without weakening your joint.

Half-Mast

SPOOK CURRENT

Dear Half-Mast,

In testing around to try and find why some batteries were discharging, I have found that if you ground a Low-Voltage Circuit-Tester voltmeter to your truck and suspend the other lead in the vehicle coolant it will show a reading of about four-tenths of a volt. Where does this "Spook Current" come from?

WO P. M. D.

Dear WO P. M. D.,

Your "Spook Current" is the voltaic

current which is always found when two different metals are in the same solution. Frankly, I am surprised that it goes as high as .4 volts—but that's what I think it is. Try filling a tin can with water and a few drops of battery acid and making the same test. It'll show a reading, betcha.

Half-Mast

INTELLIGENCE BULLETINS

Dear Half-Mast,

Strange as it may seem I have just seen PS #1 and 2, and while I'm not in Ordnance (I'm in infantry weapons), I am greatly interested none-the-less. Not only for the information it contains, but because it heralds (I hope) the return of other information booklets such as we had during the last war. Can you tell me if anything comparable to the Enemy Intelligence bulletins is being published or planned?

Also, how can I get PS regularly? I doubt that it will show up in our company again, it being the Marines.

Sgt T. Y. H.

Dear Sgt T. Y. H.,

Cheer up—things are better than they look. The Marine Corps has been Semper Fidelis by getting PS in bulk for redistribution according to automatic formula set up by your headquarters in Washington. They should be available to your unit, for the asking, through your regular supply channels for directives and such.

And there is information available on the handling and usage of foreign ordnance equipment. Your Ordnance officer can write to Chief of Ordnance,

Washington 25, D.C., Attn: ORDGU-IN, and ask for the ST-F series of guides, handbooks, training aids, etc. As for other intelligence information, latest cook-house rumor has it that OCAAF is doing something on it. They could give you more dope on that.

Half-Mast

LOOK BEFORE YOU LUBE

Dear Half-Mast,

Painting a red circle around lubricating fittings and oil holes may be OK, but I've found some vehicles with red circles painted on practically everything from the radiator cap to the brake bleeder-valves. For example, one vehicle had the differential ring-gear thrust-pad and lock-nuts painted red.

To mistake the thrust pads for a level plug could be a costly error—they could be screwed out of adjustment and cause differential failure.

F. L. G.

Dear F. L. G.,

You are right, friend. People who get paint-happy oughta remember that not everyone's gonna know what all the trimming's supposed to mean—to lube or not to lube, perchance to become a nightmare.

The only cure for this calamity is to spread the good word—teach your drivers and mechanics to use the LO when doing a grease job, and not just depend on paint marks. Considering the crime, any method used to carry out this education (including mayhem) should be permissible.

Half-Mast


PARKING YOUR M100 TRAILER

Dear Half-Mast,

Would you like to play chaplain and wise us up on this problem?

We got an order that's been causing a lot of arguments to park our M100, ¼-ton trailers **upside down**, with the front elevated and the wheels in the air. Most of us can't buy the idea. The grease gets washed off all the fittings when it rains, water gets in the spring bushings, and the water that gets in the fender wells can't get out because there's no drain there. Another thing that makes us think they should be parked on their wheels is that there's a drain in the bed to let your water out.

PFC A. R.

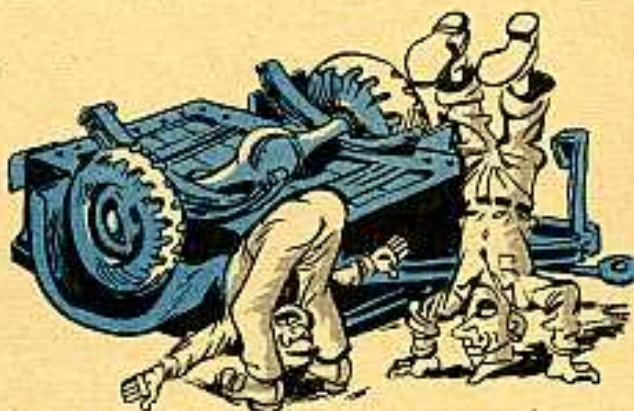

Dear PFC A. R.,

Your argument holds water. SB 9-4 (9 June 52) p. 29, #11 says:

Elevate front end of small 2-wheel open-type trailers and block rear off of ground to eliminate accumulation of water in body. Open drain on ¼-ton trailer.

But, be sure you keep that drain open—open from snow, ice, dirt, or anything you can think of that'll clog it up.

Half-Mast

JOE DOPE

how to adjust headspace on the cal. .50 modified Browning M2 machine gun

As Any Good Gunner Can Tell You . . .

Was a time when headspace adjustment on the cal. .50 M2, heavy barrel, Browning machine gun was something of a curse—the old-type barrel-locking spring was a mite temperamental.

But, those days are past. MWO Ord A39-W13 gave the M2 a $\frac{3}{8}$ " hole in the right-side receiver-plate and a barrel-locking-spring assembly that really locks.

A small lug on the end of the spring is what makes the big difference. It protects headspace adjustment because it locks the barrel so it can't be budged, either by hand or during firing.

The modification has been around long enough for all M2's to have it—the new headspace adjustment has been around just as long. Still and all, some gunners plugged their ears when headspace adjustment was the subject for the day—others scoff that they can set headspace blindfolded with both hands tied. But when the M2 jams, these people will lose their noses despite their space. The M2, with the wrong headspace adjustment, blows its receiver cover crazy and showers the vicinity with ruptured brass.

If you haven't seen Change 4 (para. 11) to FM 23-65, read on, chum.



WHAT A CRUMMY DEAL...WE JES' GET BACK FROM A 3 DAY PASS AND THEY SHOVE US ON THIS GUN...DEEP IN GOONYLAND.... THE GUYS WOT HAD IT GOT ROTATED LAS' NIGHT.



WOW!
A SNIPER...
I'LL GIVE
HIM A
BLAST!

YOU HAVEN'T
USED THIS
GUN BEFORE,
CHECK YOUR
HEADSPACE!



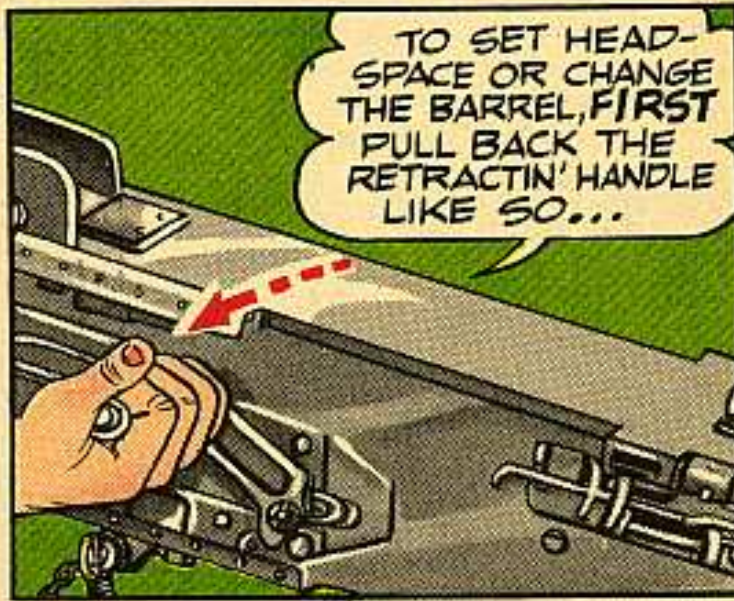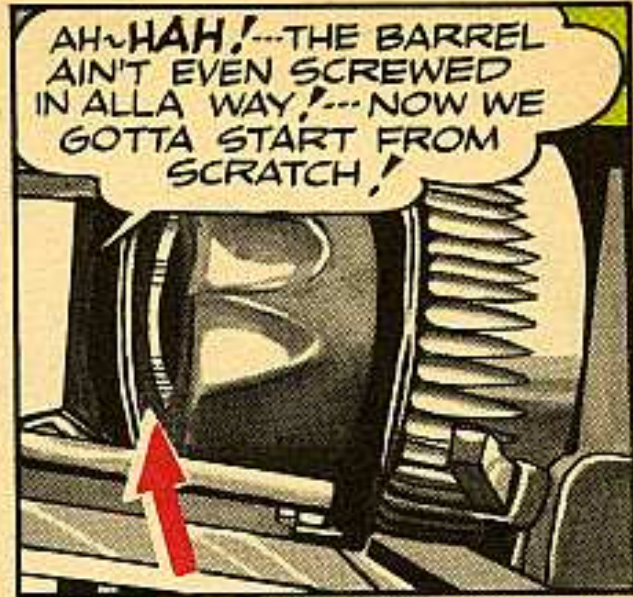


LIFT THE RECEIVER COVER AND CHECK TO BE SURE THAT THE BARREL STICKS OUT O' THE BARREL EXTENSION A BIT...



NOW Y'READY TO SET THE HEADSPACE. **UNSCREW THE BARREL TWO CLICKS** AND LEGGO THE RETRACTIN' HANDLE...AN' IT'S DONE.



NOW TAKE A LOOK AGAIN... IF IT LOOKS LIKE THIS... **Y'R READY F'R ACTION!!!!**

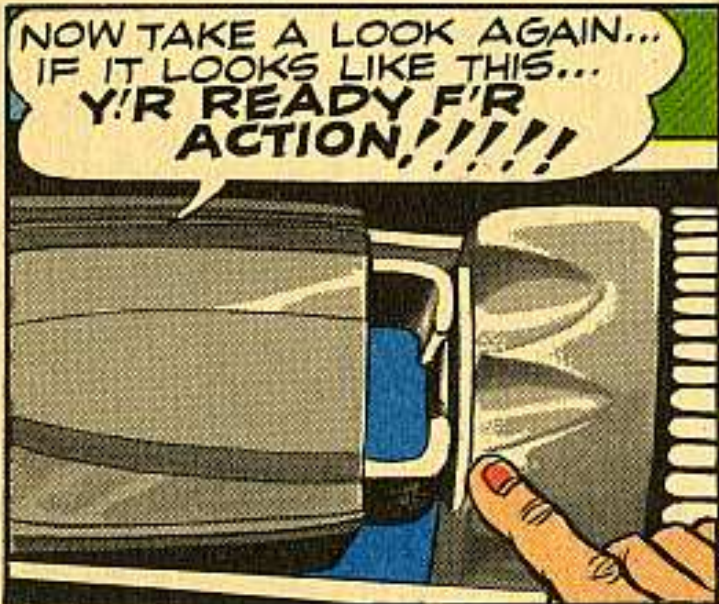


PING!

THAT SNIPER AGAIN!



WHERE IS THAT MONKEY ????

SAY, THAT GUN ACTS SLUGGISH...YA BETTER UNSCREW THE BARREL ONE MORE CLICK! BUT NO MORE!

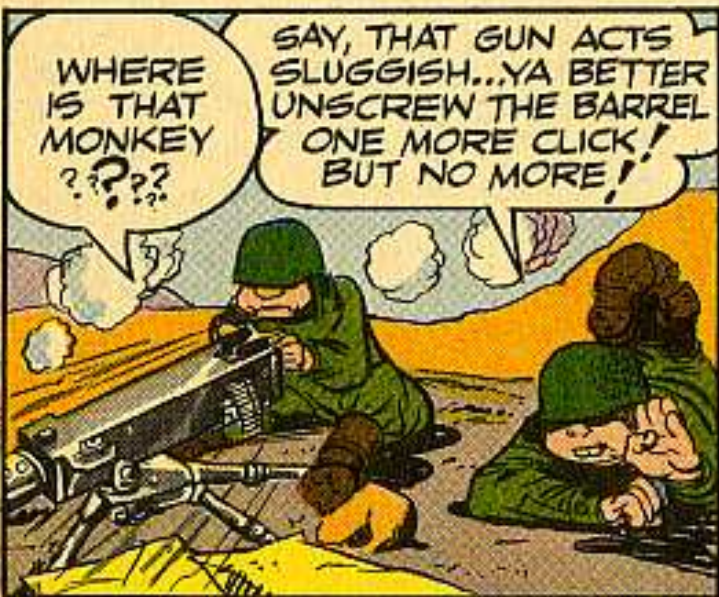

OKAY! YA DON'T EXPECK ME TO GO THROUGH THAT OPERATION **ALONE**...?...WITH THIS HOT BARREL AND ALL...

WHY NOT ?





A HEFTY GUY WITH A REACH CAN SET HEADSPACE BY HIMSELF! USE THE CARRY'N HANDLE IF IT'S HOT!



...OR ANYBODY CAN DO IT WITH A CAL. .50 LINK! RAISE THE RECEIVER COVER...PULL BACK THE RETRACTIN' HANDLE AGAIN 'TILL THE LUG'S IN THE HOLE AND...




...STICK THE LINK'S SMALL END BETWEEN THE BARREL EXTENSION AN' THE TRUNNION BLOCK...THIS'LL HOLD THE GUN OUTA BATTERY WHILE YA TURN THE BARREL.



AGAIN!

HOLD YA FIRE...I'LL GET 'IM!

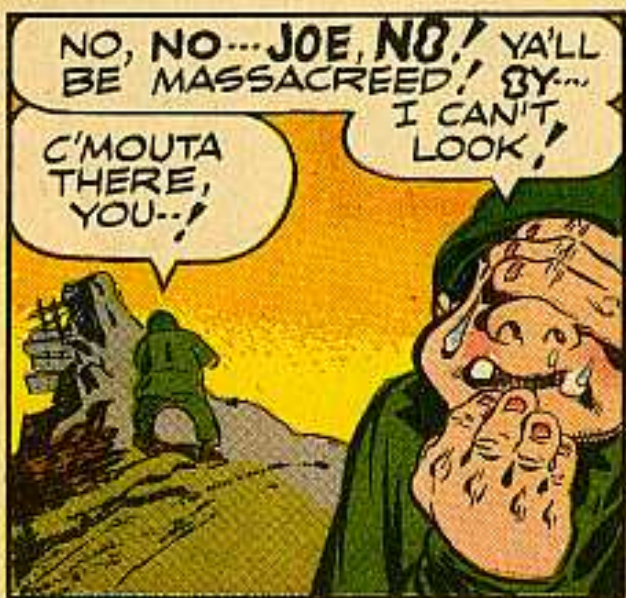

NO, NO...JOE, NO! YA'LL BE MASSACREED! BY... I CAN'T LOOK!

C'MOUTA THERE, YOU--!



I GOT 'IM! HEY, FOS... *... * HUH... HE PASSED OUT!

Joe's Dope Sheet

Who's to blame for each massacred tank?
'Tis a problem---on that you can bank
For the things your men do
You're responsible, too
It goes with the glories of rank.



WE HAVE THE WORLD'S BEST EQUIPMENT... Take care of it

Once A Year, In Anybody's Business, It's Time To

TAKE STOCK

Since you first got what you're rolling, crawling, or towing over the countryside, there's been some changes made. Anywhere from a few to a few thousand—depending on which items of stock you're T/E'd with.

It is hoped that all the changes have been for the best—either in performance, economy, comfort, safety, or main thing of all, my friend, to make you happy.

In any case, the following list of clues is offered as your guide to good sources of information which PS hopes'll help you get the most out of most everything.



M38 and M38A1, UTILITY, 1/4-ton 4x4 WILLYS JEEP

DIRECTIVES

TB Ord 445	Fuel-Tank Pressure
TB Ord 487	Fuel Filters
TB 9-804-1	Oil Filter Line
TB 9-804-2	Brake-Line Rupture
TB 9-804-3	Shackle-Pin Retaining Clip
TB 9-804-6	Vapor Lock
TB 9-1859-1	Time Schedule Guide
TB 9-2855-2	Personnel Heater Kit
TB 9-2855-3	Power Plant Heater Kit
TB 9-2855-4	Hard Top Kit
MWO Ord G1-W35	Positive Polarizing Device
MWO Ord G740-W1	Relocate Circuit Breaker
MWO Ord G740-W2	Deactivate Primer Pump
MWO Ord G740-W3	Rear-Axle-Housing Baffle
MWO Ord G740-W4	Bell Housing
MWO Ord G740-W5	Ignition-Switch Positions
LO 9-804	M38
LO 9-804A	M38A1


PS MAGAZINE ARTICLES

M38 Truck

<u>PAGE NO.</u>	<u>ISSUE NO.</u>	<u>SUBJECT</u>
13	1	Missing electrical connections
82	2	Flexible-oil-line fix
82	2	Oil-filter-disc adjustment
83	2	Longer low-tension leads
83	2	Circuit breaker move
83	2	Brake-hose-clamp fix
88	2	Lifting sling
90	3	Cylinder head leaks
101	3	Fan blades revamped
137	4	Using the new instruments
166, 266	4, 6	Safety-chain fix
166	4	Cracked windshields
167	4	Speedometer cable caution
168	4	Fuel filter care
168	4	Valve adjustment
169	4	Valve number mix-up
188	5	Battery-post caution
200	5	Erratic engine idling
201	5	Kinks in oil lines
201	5	Slip-joint alignment
202	5	Tailgate-support fix

PAGE NO.	ISSUE NO.	SUBJECT	PAGE NO.	ISSUE NO.	SUBJECT																
202	5	Steering-housing lube	368	9	Distributor vacuum																
202	5	Water in manifold	368	9	Trailer connector fixes																
202	5	Air in gas lines	395	9	Proper engine oil																
203	5	Front wheel rubbing	426	10	OE discoloration																
203	5	Crankcase oil diluting	453	10	Circuit-breaker fix																
215	5	Brake-pedal hazard	453	10	Lock washer remover																
3C, 225	5, 6	Gas in air cleaners	3C	10	Tire inflation data																
3C	5	Starting the M38	3C	10	2HN batteries																
225	6	Engine hood fix	503	11	Valve-adjusting tool																
226	6	Easy hub removal	504	11	Fuel pump removal																
226	6	Sluggish carburetors	512	12	Valve rotator-cap breakage																
227	6	Ignition timing	513	12	Loose 24-volt connectors																
227, 329	6, 8	Spark-plug resistor fix	M38A1 Truck																		
230	6	Brake-cylinder cap change	137	4	Using new instruments																
233	6	Pressure in gas tank	414	10	M38 and M38A1 comparison																
233	6	Gas-tank drain caution	418	10	New steering ratios																
250	6	Exhaust deflector	418	10	Ignition timing																
251	6	Fuel pump removal	3C	10	Tire inflation data																
251	6	Seat fix	465	11	New F-head engine																
257	6	Avoid vapor lock	466	11	Sealed bell-housing																
276	7	Rid oil of gas	466	11	Timing-mark location																
282	7	New shock absorbers	466	11	Universal-joint care																
290	7	Cooling system fix	503	11	Valve-adjusting tool																
290	7	Turning radius fix	504	11	Fuel pump removal																
290	7	New brake bolts & cables	530	12	Battery repair																
291	7	Grease in speedometer	<div style="border: 2px solid blue; padding: 10px;"> <p style="text-align: center;">TECHNICAL MANUALS & CATALOGS</p> <p style="text-align: center;">M38</p> <hr style="width: 20%; margin: auto;"/> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">TM 9-804</td> <td style="width: 50%;">Operators Manual</td> </tr> <tr> <td>TM 9-1804A</td> <td>Engine & Clutch</td> </tr> <tr> <td>TM 9-1804B</td> <td>Power Train</td> </tr> <tr> <td>SNL G740</td> <td></td> </tr> </table> <p style="text-align: center;">M38A1</p> <hr style="width: 20%; margin: auto;"/> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">TM 9-804A</td> <td style="width: 50%;">Operators Manual</td> </tr> <tr> <td>TM 9-1804AA</td> <td>Engine & Clutch</td> </tr> <tr> <td>TM 9-1804AB</td> <td>Power Train</td> </tr> <tr> <td>SNL G758</td> <td></td> </tr> </table> </div>			TM 9-804	Operators Manual	TM 9-1804A	Engine & Clutch	TM 9-1804B	Power Train	SNL G740		TM 9-804A	Operators Manual	TM 9-1804AA	Engine & Clutch	TM 9-1804AB	Power Train	SNL G758	
TM 9-804	Operators Manual																				
TM 9-1804A	Engine & Clutch																				
TM 9-1804B	Power Train																				
SNL G740																					
TM 9-804A	Operators Manual																				
TM 9-1804AA	Engine & Clutch																				
TM 9-1804AB	Power Train																				
SNL G758																					
291	7	New ignition plate																			
292	7	Brake lines chafe horn wire																			
292	7	Wet map-compartment																			
312	7	Remove drain plug																			
321	8	Battery lifter																			
324	8	Loose brake cap-screws																			
340	8	Starter-pinion travel tool																			
358	8	Rear-axle oil leak																			
360	8	Sending-unit fix																			
3C	8	Steering-wheel hole																			
366	9	Throttle tube care																			
366	9	Cuno filter fix																			
367	9	Differential cover UER																			
367	9	Fuel line relocation																			

M37 3/4-ton, 4x4 DODGE CARGO TRUCK

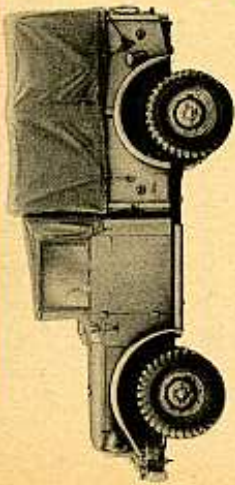

TB 9-840-4	Shift-Diagram Plate Markings
TB 9-1840-1	Rear Axle Replacement
TB 9-1859-2	Time Schedule Guide
MWO Ord G1-W35	Positive Polarizing Device
MWO Ord G741-W1	Deactivate Primer Pump
LO 9-840	

PS MAGAZINE ARTICLES

PAGE NO.	ISSUE NO.	SUBJECT
55	2	Body bolt maintenance
98	3	Transfer-case UER
137	4	Using the new instruments
162	4	Starter-switch fix
163	4	Hard steering fix

DIRECTIVES

TB Ord 483	Transfer Linkage Adjustment
TB Ord 487	Fuel Filters
TB 9-840-1	Transfer Assembly Shift
TB 9-840-2	Door Glass and Weatherstrip

M34 2-1/2-ton 6x6 CARGO TRUCK (REG & STUDEBAKER)

DIRECTIVES

TB Ord 444-3	Hoist & Towing Tool Set #7
TB Ord 444-7	Auto Basic Shop Set Layout
TB Ord 444-8	Welding Shop Set Layout
TB Ord 487	Fuel Filters
TB 9-819-2	Common Tool Set #2 Layout
TB 9-819-3	Engine Exhaust Nuts
TB 9-819-4	Truck Mount M36A1
TB 9-819-5	Brake Cylinder Filler Cap
TB 9-819-6	Steering-Knuckle Boot
TB 9-819-9	Wheel Bearing Adj. Nut
TB 9-819-10	Water Pump Inner-Bearing
TB 9-819-11	Flywheel Housing Drain Plug
TB 9-1819B-1	Transmission Roller Bearings
TB 9-1859-3	Time Schedule Guide
MWO Ord G1-W35	Positive Polarizing Device
MWO Ord G742-W1	Battery Hold-Down-Frame
MWO Ord G742-W2	Cab Assembly Reinforcement
MWO Ord G742-W3	Over-Running Clutch (Reo)
MWO Ord G742-W4	Fan Radiator Core

580

PAGE NO.	ISSUE NO.	SUBJECT
163	4	Fuel-line fix
164	4	Window weatherstripping
171	4	Transfer-case fix
232	6	Brake-shoe setting
233	6	Gas-tank-cap switch
248	6	Seating brake linings
251	6	Fuel-pump removal
276	7	Rid oil of gas
321	8	New battery lifter
323	8	Transfer-case shifting
324	8	Pioneer-bracket fix
422	10	Brake-line relocation
453	10	Brake-spring-plier guide

TECHNICAL MANUALS & CATALOGS

TM 9-840	Truck, M37
TM 9-1840A	Engine & Clutch
TM 11-2725, C1	Radio Equipment Installation
SNL G741	

PAGE NO.	ISSUE NO.	SUBJECT
188	5	Battery post caution
189	5	Winch shear-pin caution
215	5	Air-compressor care
216, 281	5, 7	Lubing wheel bearings
218	5	Throttle stop-screw caution
218	5	Towing tips
219	5	Hood support-rod use
219, 312	5, 7, 8	Oil clutch fix
359	8	
220	5	Water in gas tank, cure
230	6	Brake-cylinder cap change
233	6	Gas-tank cap caution
275	7	Steering-gear bolt care
323	8	Insulating battery terminals
328	8	New flat-bed M35
341	8	Steering-knuckle assembly
341	8	Fuel strainer care
343	8	Transfer-case tool
357	8	Hood safety-catch fix
359	8	Oil-pan tool
373	9	Winch adjustment
374	9	Piston skirt breakage
421	10	Cooling system caution
424	10	New tire pressure


MWO Ord G742-W6	Deactivate Primer Pump
LO 9-819	

PS MAGAZINE ARTICLES

PAGE NO.	ISSUE NO.	SUBJECT
13	1	Axle-lube revision
50	2	Radiator relocation
50	2	Fan blades shortened
51, 77	2	Fording tips
51	2	Correct oil readings
77, 187, 2, 5, 310, 406, 7, 9	2, 5, 7, 9	CV-joint boot UER
77	2	Exhaust fixes
77	2	Gas-tank pressure
77	2	WB oil-seal caution
77	2	Brake assembly painting
81	2	Spring-seat care
87	2	Transfer-shift fix
96	3	Breather valve caution
97	3	Ignition cable care
137	4	Using the new instruments
160	4	Oil-pan tool
162	4	Starter-switch fix
173, 360	4, 8	Exhaust fume cure
3C	4	Battery-cable short fix

TECHNICAL MANUALS & CATALOGS

TM 9-819	Truck, M34
TM 9-1819A	Engine
TM 9-1819B	Power Train
TM 9-1826D	Holly Carburetors
TM 11-2709	Radio Equipment Installation
SNL G742	

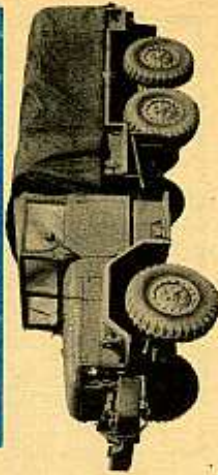

581

M135 2-1/2-ton 6x6 CARGO TRUCK (GMC)

DIRECTIVES

TB Ord 487	Fuel Filters
TB 9-819A-1	Hydramatic Front-Band
TB 9-819A-2	OE Dipstick Guide-Tube
TB 9-819A-4	Rust Preventive Oil
TB 9-1859-4	Time Schedule Guide
TB 9-2815-16	Power Plant Heater Kit
MWO Ord G1-W35	Positive Polarizing Device
MWO Ord G749-W2	Primer Pump Deactivation
MWO Ord G749-W3	Eliminate Oil Leaks
MWO Ord G749-W6	Oil Leaks Output Shaft
MWO Ord G749-W7	Reduce Leakage
MWO Ord G749-W8	Increase Clutch Lube
LO 9-819A	

TECHNICAL MANUALS & CATALOGS

TM 9-819A	Truck, M135
TM 9-1819AA	Engine
TM 9-1819AB	Hydramatic Transmission
TM 9-1819AC	Power Train
SNL G749	

PS MAGAZINE ARTICLES

<u>PAGE NO.</u>	<u>ISSUE NO.</u>	<u>SUBJECT</u>
137	4	Using the new instruments
233	6	Gas-tank-cap switch
252	6	Transmission operation
276	7	Rid oil of gas
283	7	Transmission adjustment
283, 438	7, 10	OE dipstick fixes
283	7	Brake backing-plate caution
283	7	Radiator-brace-rod clip
322	8	Starter linkage fix
328	8	New flat-bed XM211
376	9	Air-hose-coupling fix
376	9	#6 exhaust-valve caution
376	9	Steering trunion fix
405	9	Blackout-marker fix
423	10	Transmission dipstick fix
468	11	Gas valve protector
469	11	Generator bracket fix
501	11	Electric-brake kit
504	11	Grab-handle installation
509	12	Battery hold-down fix
512	12	How to reverse the M135
530	12	Battery repair

M52 5-ton 6x6 TRUCK-TRACTOR (DIAMOND-T)

DIRECTIVES

TB Ord 279	W/S Wiper Regulator Valve
TB Ord 487	Fuel Filters
MWO Ord G1-W35	Positive Polarizing Device
MWO Ord G744-W1	Cab Assembly Reinforcement
MWO Ord G744-W2	Deactivate Primer Pump
LO 9-837	

TECHNICAL MANUALS & CATALOGS

TM 9-837, C1 & C2	Truck, M52
SNL G744	

PS MAGAZINE ARTICLES

<u>PAGE NO.</u>	<u>ISSUE NO.</u>	<u>SUBJECT</u>
137	4	Using the new instruments
206	5	Winch troubles
250	6	Winch-roller fixes
342	8	New brake air-pressure
342	8	Trailer brake-hose fix
422	10	Fractured fender fix
483	11	Oil-filter leak fix
501	11	Electric brake kit
3C	11	Oily clutch fix
530	12	Battery repair
3C	12	Oil-cooler leak fix

M41 5-ton CARGO TRUCK 6x6 (IHC) M51 5-ton DUMP TRUCK 6x6 (IHC)



DIRECTIVES

TB Ord 279	W/S Wiper Regulator Valve
TB Ord 445	Fuel Tank Pressure
TB Ord 487	Fuel Filters
TB 9-837-1	Splash Shield Ext. (M51, only)
TB 9-837-2	Tailgate Wing Chain Hook
TB 9-1859-5	Time Schedule Guide
MWO Ord G1-W35	Positive Polarizing Guide
MWO Ord G744-W1	Cab Assembly Reinforcement
MWO Ord G744-W2	Deactivate Primer Pump
LO 9-837	

PS MAGAZINE ARTICLES

<u>PAGE NO.</u>	<u>ISSUE NO.</u>	<u>SUBJECT</u>
86, 259	2, 6	Fan belt failures
137	4	Using the new instruments
3C	4	Battery cable shorts
207	5	Tailgate lock fix (M51 only)
208	5	Engine-oil dipstick UER
208	5	Transmission oil level
209	5	Oil sending-unit relocation
209	5	Deiseling action
210	5	Clutch return-spring fix
210	5	Fan shroud interference
210	5	Engine removal
211	5	Loose governor mounts
211	5	Transfer linkage fix

<u>PAGE NO.</u>	<u>ISSUE NO.</u>	<u>SUBJECT</u>
212	5	Emergency-brake fire hazard
212	5	Loose w/s wiper mountings
213	5	Gas tank protector
233	6	Gas tank pressure
250	6	Winch-roller-support fix
258	6	Winch-clutch caution
276	7	Rid oil of gas
342	8	Clutch-plate cap-screws
342	8	New brake air-pressure
422	10	Fractured fender fix
483	11	Oil-filter leak fix
501	11	Electric brake kit
3C	11	Oily clutch fix
530	12	Battery repair
3C	12	Oil-cooler leak fix

TECHNICAL MANUALS & CATALOGS

TM 9-837	Truck, M41, M51
TM 9-1837A	Engine & Clutch
TM 9-1837B	Power Train
TM 9-1837D	Dump & Hoist (M51 only)
SNL G744	





LIGHT TANK M24, 75mm GUN

DIRECTIVES

TB Ord 191	Hydraulic Valve Lifter
TB Ord 255	75mm Gun
TB Ord 456	Track Link Wedge Bolts
TB Ord FE 49	Mounting, Cal. .50 M2
TB 9-1313-1	Recoil Oil Leaks
MWO Ord A55-W13	Machine Gun Modification
MWO Ord A55-W15	Clip Chute Bag Hook-up
MWO Ord A55-W17	Ammunition Jamming
MWO Ord C66-W1	Recoil Support Cylinder
MWO Ord C66-W2	Clip Chute & Bag
MWO Ord C66-W3	Breech Ring Key
MWO Ord G1-W17	Azimuth Indicator
MWO Ord G1-W18	Tow Cable Coupling
MWO Ord G200-W1	Horn Replacement
MWO Ord G200-W2	Fan Vibration
LO 9-729	

PS MAGAZINE ARTICLES

PAGE NO.	ISSUE NO.	SUBJECT
43	1	Transmission-transfer case caution
91	3	Driving Pointers
92	3	Frozen hatch-latches
92	3	Clogged carburetors
93	3	Ammunition stowage
93	3	Tactical precaution
217, } 233 }	5, 6	Engine over-heating

PAGE NO.	ISSUE NO.	SUBJECT
246	6	Platinum-tip plug salvage
372	9	Operating precautions

TECHNICAL MANUALS & CATALOGS

TM 9-313	M6 Gun, M64 Mount
TM 9-1313	M6 Gun, M64 Mount
TM 9-729	Tank, M24
TM 9-1602	Periscope Mounts
TM 9-1729A	Cooling & Fuel Systems
TM 9-1729B	Power Trains
TM 9-1729C	Tracks, Suspension, Hull and Turret
TM 9-1731D	Azimuth Indicators
TM 9-1825D	Electrical Equipment (Westinghouse)
TM 11-2754	Radio & Telephone Equipment
FM 17-75	Crew Drill
SNL A55, Sec 38	Mount Cal. .50
SNL A55, Sec 46	Mount Cal. .30
SNL G66	Gun and Mount M64
SNL G200	Tank, M24
SNL J16, Sec 46	Tool Sets

MEDIUM TANK M4A3, 75mm GUNS M2 & M3

DIRECTIVES

TB Ord 11	Turret Bearing-Race
TB Ord 30	Hydraulic Traverse- Mechanism
TB Ord 41	Rear Idler Track
TB Ord 70	Descending Steep Grades
TB Ord 83	Steering-Brake Adjustment
TB Ord 95	Spark Plugs
TB Ord 96	Electric Oil-Pressure-Gages
TB Ord 116	Bogie Wheel Interchangeability
TB Ord 125	Track Connecting Fixture
TB Ord 131	Oil Level Data
TB Ord 148	Fuel Tank Seal & Vent
TB Ord 151	Transmission Oil-Return-Line
TB Ord 152	Disc-Type Idler Wheel
TB Ord 154	Pinion-Gear Shimmy
TB Ord 180	High-Idle Control Removal
TB Ord 381	Ammudamp Discontinues
TB Ord 1731B-5	Engine Conversion
TB Ord FE 5	Tachometer Installation
TB Ord FE 29	Fuel-Line Safety-Valve
TB 9-307-4	Trigger Adjustment
MWO Ord A55-W16	Clip Chute & Bag
MWO Ord A55-W17	Ammunition Jamming
MWO Ord G1-W17	Azimuth Indicator
MWO Ord G1-W18	Tow Cable Hook-up
MWO Ord G1-W19	Hatch-Door-Bolt Pin
MWO Ord G1-W31	Gun-Traveling Lock
MWO Ord G104-W75	Door Lock
MWO Ord G104-W108	Machine Guns
MWO Ord G104-W113	Bulldozer Tank Periscope
MWO Ord G204-W1	Commander's Vision Cupola
LO 9-759	Tank, M4A3
LO 9-759-1	105-Howitzer
LO 9-759-2	76mm Gun

PS MAGAZINE ARTICLES

PAGE NO.	ISSUE NO.	SUBJECT
42	1	Track Idler care
72	2	Spark-plug tool
91, 136	3, 4	Driving pointers
92	3	Frozen hatch-latches
92	3	Clogged carburetors
93	3	Ammunition stowage
93	3	Tactical precaution
136	4	Clogged radiators
144	4	Obsolete magnetos
246	6	Platinum-tip plug salvage
292	7	Oil-pressure sending-units
372	9	Operating tips
425	10	Tach speed caution

TECHNICAL MANUALS & CATALOGS

TM 3-362	Flame Thrower
TM 9-307	Guns & Mounts
TM 9-757	Twin 40 Motor Carriage
TM 9-759	Tank, M4A3
TM 9-1307	Guns & Mounts
TM 9-1731B	Ford Engine
TM 9-1731D	Azimuth Indicators
TM 9-1731E	Electric Traverse
TM 9-1731F	Hydraulic Traverse
TM 9-1731G	Hydraulic Trav. (Oil Gear)
TM 9-1731K	Auxiliary Generator
TM 9-1750 & 1750A	Power Train 3 pc dif.
TM 9-1750B	Power Train 1 pc dif.
TM 9-1750K	Tracks, Suspension, Turret & Hull
TM 11-2704	Radio and Telephone
TM 11-2748	Install. Radio Equipment
FM 17-67	Drill, Service & Storage
SNL A55, Sec 11	Mount, Cal. .30
SNL A55, Sec 38	Mount, Cal. .50
SNL C44	Gun, M34, M34A1
SNL G204	105-Howitzer
SNL J16, Sec 9	Tool Sets



MEDIUM TANKS M46 & M46A1, 90mm GUN M3A2

DIRECTIVES

TB Ord 371	Flarebacks	TB 9-718-3	Engine Installation
TB Ord 379	Supplies in Open Storage	TB 9-718-4	Exhaust-Pipe Clamps
TB Ord 399	Telescopes	TB 9-718-5	New Cupola-Door-Seal
TB Ord 428	Oil Reserve in Recoil	TB 9-718-6	Transmission Signal-Light
TB Ord 443	Headlight Adjustment	TB 9-718-7	Final Drive Assemblies
TB Ord 454	Shifting & Backing Precautions	TB 9-718-8	Fan-Clutch Coil
TB Ord 457	Gun Traveling-Lock	TB 9-2853-4	Deep-Water Förding
TB Ord 459	Procedure Prior to Starting	MWO Ord A55-W17	Ammunition Jamming
TB Ord 461	Fuel Pump Pressure	MWO Ord G244-W1	Telephone Box Door
TB Ord 462	Fuel and Spark Plugs	MWO Ord G244-W2	Radio-Antenna Mounting-Bracket
TB Ord 464	Silicone Oil Seals	MWO Ord G244-W3	Turret Traversing Lock
TB Ord 469	Bore Evacuator Care	MWO Ord G244-W4	Under Vehicle Resistance to Detonation
TB Ord 474	CD850 Oversize Studs	MWO Ord G244-W6	Switch-Controlled Battery-Charge
TB Ord 482	Brake Oil-Valve Adj. Stud	MWO Ord G244-W7	Generator, Engine, Lubrication
TB Ord 484	Staking 2nd Idler Gear	MWO Ord G244-W8	Positive-Brake-Lock
TB Ord 489	Replace Transmission	MWO Ord G244-W9	New Primer Nozzles
TB Ord 490	CD850 Breather Filter	MWO Ord G244-W10	Bevel-Gear Bearing
TB Ord 9-1718A-1	Continental Engine (AV 1790-5B)	MWO Ord G244-W11	New Fuel Line
TB Ord 9-1718F-1	Steering-Clutch Plate	MWO Ord G244-W12	Relocate Battery Cable
TB 9-718-1	Telescope Errors	MWO Ord G244-W13	Cold Weather Warm-up
TB 9-718-2	New Master Switch		

		PAGE NO.	ISSUE NO.	SUBJECT
MWO Ord G244-W14	Cooling-Fan Clutch			
MWO Ord G244-W15	Engine Smoking	369	9	Track-jack fix
MWO Ord G244-W17	Fan-Rotor Housing	462	11	Stripping electrical connectors
MWO Ord G244-W18	Grille & Fuel-Tank Locks	462	11	Bore evacuator care
MWO Ord G244-W19	Trans. Oil Filter Cap	463	11	Frozen counterweights
MWO Ord G244-W20	New Oil Lines	463	11	New primary nozzles
MWO Ord G244-W21	CD850 Retainer Screw	463	11	Commander's hatch seal
MWO Ord G244-W22	Hand Refueling Pump	471	11	CD850-4 transmission
MWO Ord G244-W24	Final Drive Output Shaft	474	11	Headlight aiming
MWO Ord G244-W25	Eliminate Oil-Line Failures	492	11	Using the M71E5C scope
MWO Ord G244-W28	Locking-Bar Tension Spring	3C	11	Cold-weather warm-up
LO 9-718		510	12	New master switch
		530	12	Battery repair

PS MAGAZINE ARTICLES

PAGE NO.	ISSUE NO.	SUBJECT
8	1	General Information
9	1	Master-junction-box care
10	1	Voltage regulator hook-up
74	2	Low-battery expedient
91, 277, 317, 372	3, 7, 8, 9	Driving Pointers
92	3	Clogged carburetors
93	3	Ammunition stowage
93	3	Tactical precaution
156	4	CD850-4 dipstick
157	4	Transmission oil-filler fix
158	4	Silencer for Little Joe
181	5	Ignition timing
214	5	Track care
246	6	Platinum-tip plug salvage
260	6	Reversing generator polarity
263	6	Oil-cooler fix
271	7	Air-maze-filter care
277	7	Muffler-shield screen
278	7	Final-drive gear-ratios
278	7	Wrong fuel and plugs
279	7	Oil-cooler-clutch fix
279, 326	7, 8	Oil-filter cleaning
326	8	Overheating transmission
327	8	New spark-plug wrench
365	9	Turret-drift fix

TECHNICAL MANUALS & CATALOGS

TM 9-374	Gun
TM 9-718	Tanks M46 & M46A1
TM 9-1374	Guns and Mounts
TM 9-1718A	Continental Engine
TM 9-1718B	Transmission (CD850-3)
TM 9-1718C	Wisconsin Auxiliary Engine
TM 9-1718D	Hydraulic Turret-Traversing
TM 9-1718E	Oil-Cooler Fan, Drive, Brake Cam
TM 9-1718F	Transmission (CD850-4)
TM 9-1731D	Azimuth Indicator
TM 9-1825C	Electric Equipment (Eclipse-Pioneer)
TM 9-1825D	Electric Equipment (Westinghouse)
TM 9-1825E	Electric Equipment (Bendix Scintilla)
SNL A55, Sec 38	Mount Cal. .50
SNL A78	Mount (7722408)
SNL C69	Gun, M3A2
SNL D47	Mount, M73
SNL G244	Tank, M46, M46A1
SNL J16, Sec 52 & C1	Special Tools

MEDIUM TANK M47, 90mm GUN T119M1



DIRECTIVES

TB Ord 443	Headlight Adjustment
TB Ord 454	Backing & Shifting Precautions
TB Ord 457 & C1	Turret Traversing-Lock Assembly
TB Ord 459	Procedure Prior to Starting Engine
TB Ord 461	Fuel Pump Pressure
TB Ord 462	Fuel and Spark Plugs
TB Ord 464	Silicone Oil Seals
TB Ord 469	Bore Evacuator Care
TB Ord 474	CD850 Oversize Studs
TB Ord 482	Brake Oil-Valve Adj. Stud
TB Ord 484	Staking 2nd Idler Gear
TB Ord 490	CD850 Breather Filter
TB 9-718A	Ammunition Authorized
TB 9-718A-2	Main-Engine Air-Cleaner Care
TB 9-718A-8	Elect. Output During Training
TB 9-718A-4	Selector Valve Identification
TB 9-1718A-1	Continental Engine (AV 1790-5B)
TB 9-1718F-1	Steering-Clutch Plate
MWO Ord G262-W1	Trans-Oil Filter Cup
MWO Ord G262-W3	Ready-Round Racks
LO 9-718A	

PS MAGAZINE ARTICLES


PAGE NO.	ISSUE NO.	SUBJECT
43	1	Transmission-transfer case caution
91	3	Terrain caution
92	3	Hatch-latch care
92	3	Clogged carburetors
93	3	Ammunition stowage
93	3	Tactical precaution
246	6	Platinum-tip plug salvage
271	7	Air-maze-filter cleaning

PAGE NO.	ISSUE NO.	SUBJECT
277	7	Driving tips
277	1	Muffler-shield screen
278	7	Final-drive gear-ratios
278	7	Detonation causes
279	7	Oil-cooler-clutch failures
279	7	Oil-filter cleaning
317, 372	8, 9	Operating tips
320	8	Stall speeds and checks
326	8	Oil-filter cleaning
326	8	Transmission overheating cure
327	8	Spark-plug wrench
369	9	Track-jack fix
413	10	Transmission filler-cap fix
462	11	Battery wing-nut caution
462	11	Sticky hotspot butterfly
462	11	Bore evacuator care
463	11	Gun tube care
471	11	CD850-4A transmission
474	11	Headlight aiming
492	11	Using the M71ESC scope
3C	11	Cold weather warm-up
530	12	Battery repair
552	12	Fuel line caution

TECHNICAL MANUALS & CATALOGS

TM 9-718A	Tank, M47
TM 9-1374AA	Gun, T119E1
TM 9-1730E	Turret
TM 9-1730F	Aux. Gen. & Eng.
SNL A55, Sec 3B	Mount (6580030)
SNL A78	Mount (7722408)
SNL A90	Mount (7351999)
SNL D54	Mount, M78
SNL G52	
SNL G262	Tank, M47
SNL J16, Sec 52 & C1	Special Tools

TIRE-MEASURING TOOL

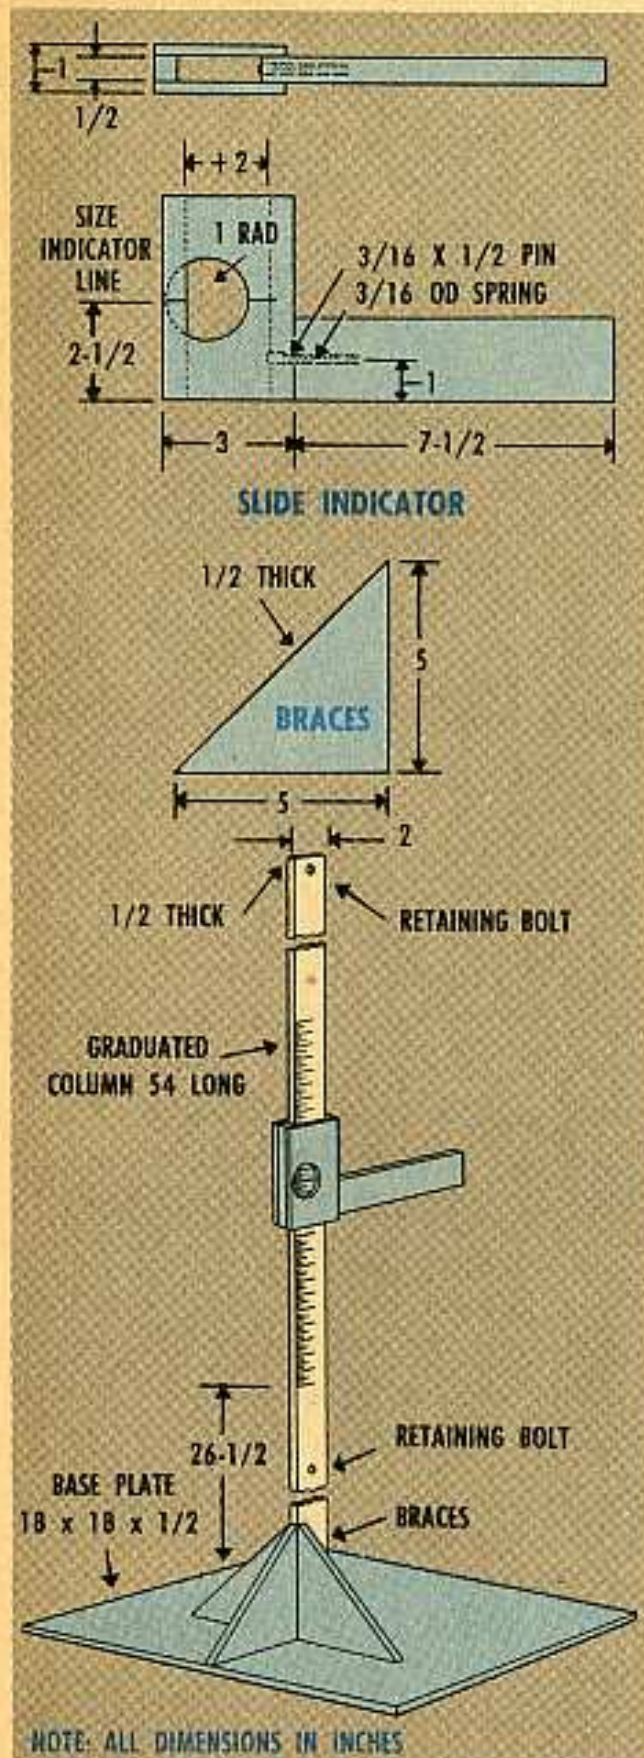

A good way to match those used tires you'll be getting in on your requisitions is shown below. It can be made out of scrap metal at the discretion of your CO. It's a quick way to group tires according to the specs in TM 31-200.

Be sure to make allowances for 2-1/2" between the size indicator line and slide-indicator bottom that rests on top of the tire—your 24" mark will actually be 26-1/2" from the base plate. And grind smooth any roughness on the slide indicator to eliminate casualties.

To use, inflate your tire as you would for normal use and place it snugly against the column. Slide the indicator down on top of the tire and read the size through the hole in the indicator.



ARMAMENT & AMMUNITION



HE M329 AMMO

A good thing to keep in mind when dropping HE M329 ammo with a full propellant-charge in your M30, 4.2 mortar, is that all the increments must be forward of the flash-holes in the cartridge-container extension.

Cluttering up these flash-holes with increments can get you erratic burning of the charge which can interfere with the ammo's sending-off power; and, in turn, your M30 may not always give you the range you asked for.

The propellant-holder will keep the increments ahead of the holes where they belong—all it needs is firm anchorage in its slot in the extension.

And when your M30 gets this ammo with 25½ increments (or less), and you remove the shell's container-extension—like it says in paragraph 390b of Change 3 to FM 23-92, 17 Oct 52—don't discard the wire holder. Slip it in the

holder-slot in the cartridge container so it'll hold the increments safely ahead of the striker nut.

HE M329 ammo, as you know, is also fed to the M2, 4.2 mortar—but, without its container extension. And 25½ increments is the full charge for the shell when it's fired from the M2 mortar. So in this case you abide by the caution-tag on the round (and beforehand, better bone-up on TB Ord 417, 28 June 52).

And whether you're firing the M30 or the M2 mortar, this ammo never goes in with less than five increments. In some cases when the M329 shell's equipped with the M51A5 fuze, you're likely to get duds if you don't use at least seven increments.

Also, in using this ammo—minus its extension—in either the M30 or the M2 mortar, the weather has something to say about the range it'll give you. There's a temperature-restriction on increments and it's set-up like this:

IN TEMP AS LOW AS	MAXIMUM INCREMENTS
60° F	full charge
20° F	23
0° F	20
-40° F	17

There's no temperature-restriction when HE M329 is used with its extension in the M30, 4.2 mortar. For further information on ammo for 4.2 mortars, back track to PS #7, p. 297.

NIX ON PRESSURE-CLEANING FOR AAA EQUIPMENT

A scrub-job on any piece of anti-aircraft artillery by means of pressure—air, steam or water—is out. Pressure cleaning can damage the piece itself, or some of its delicate assemblies.

So the next gentleman you see running this risk of ruination, better wave TB Ord 478 (28 Nov 52) under his nose, and tell him to leave pressure-cleaning to the rebuild boys—they know when and how to use the method safely.

RIFLES RUBBED RAGGED

In devoting too much loving care to their rifles and carbines, some guys are caressing them right into the scrap heap. Lots of rifles and carbines have been tagged unserviceable because they have been rubbed down by something besides the recommended materials.

The surface finish is sometimes completely removed by the abrasive cleaners used (probably picked up in the kitchen or shop). The blue finish on the weapon protects the steel surface from oxidation and reduces light reflection. Rubbing off the finish is finis for both.

This loving ministrations with unauthorized abrasives can also

Unless specific LO's and TM's say otherwise, volatile mineral spirits or dry-cleaning solvent are the prescribed de-greasers and de-oilers for all metal parts—except of course, those parts that come in contact with primer salts. For them (gun bore, breech and firing mechanism) the prescription is rifle-bore cleaner.

And, as a reminder, gasoline is not for cleaning purposes, either. Also, any parts that need lubrication must be dried after cleaning and given their prescribed coat of lube—and muddy parts should be sponged-off with soap and water, rinsed and thoroughly dried.

spell murder for the M1 rifle's barrel-bearing where tolerances are measured in fractions of gnats' whiskers. A few deft passes with an abrasive at carbon or rust particles on the bearing's surface and Ordnance's check with the Go-No-Go gauge gives it the final kiss off.

Take a shine to Oil, Lubricating Preservative (Special) instead.

M2 CARBINE

When assembling or disassembling the M2 carbine, you'll save breaking the disconnecter lever (usually at the rivet) if you first check to see if your M2 is one of those that has a groove in the disconnecter. To get it safely in or out, you have to pivot the lever so it'll clear the groove.



TELESCOPE RETICLE

So's to raise your batting average, the M86C Telescope you're using with your 57mm recoilless rifle has been changed. Its new how-de-do is M86F and the big change is the addition of stadia lines to its reticle (Fig. 1).

With the '86C, you estimate the distance between you and the target and raise your sight accordingly—the reticle having graduations in terms of hundreds of yards. But with stadia lines on the reticle, guessing goes down and your chances for a first-time hit go up—if you're going after tanks.

The new lines are figured for a 20' target which is a tank's average length. The space between the lines is wide at the top and narrows as it goes down the reticle and range increases. When aiming at a tank broadside, raise your sight so that the outer ends of the target just touch the two stadia lines. And

since a tank's about half as wide as it's long, figure on using half the space and center the tank between the lines when looking at it head-on. Use your best judgement when seeing it at an angle. For any bull's-eye that can't be figured on the basis of a 20' target, forget about the stadia lines and tackle it the way you would with an '86C reticle.

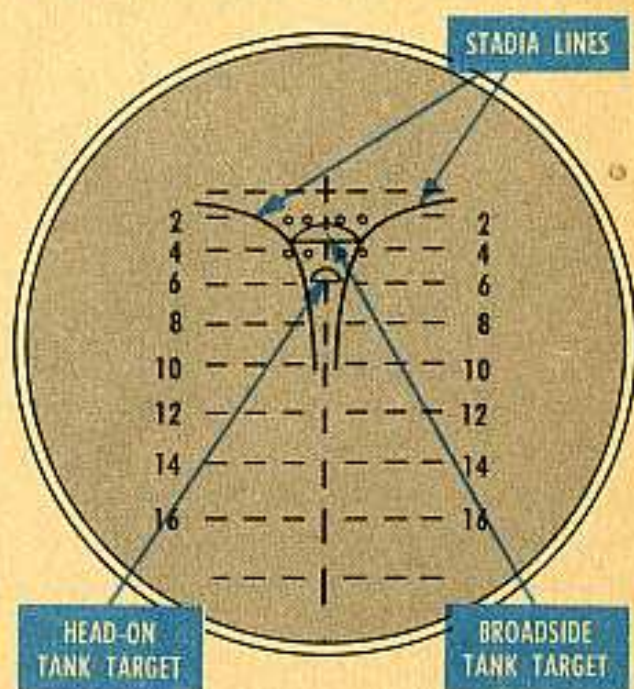


Fig. 1—You get more holes-in-1 on enemy tanks with stadia lines on the M86F reticle.



WHEN IS A SIGHT MOUNT A SIGHT?

— when you do it the hard way


The M74 Sight Mount → on 57mm, M18, recoilless job isn't tough to handle, but forcing the mount's parts can make a mess of it. TB 9-314-3 says to hold it firm, then move what's movable and put what goes together neat and easy like.



Seat the M86 scope's clip → evenly in back and then squarely up front—the arrows point the way to a cozy undamaged set-up. Too much muscle always breaks something, so if you meet resistance find and move the roadblock.

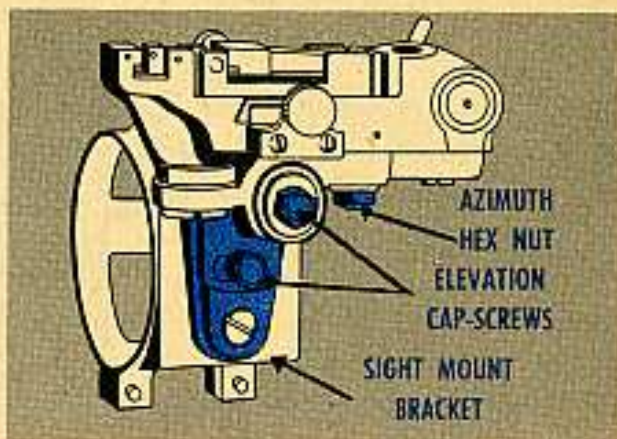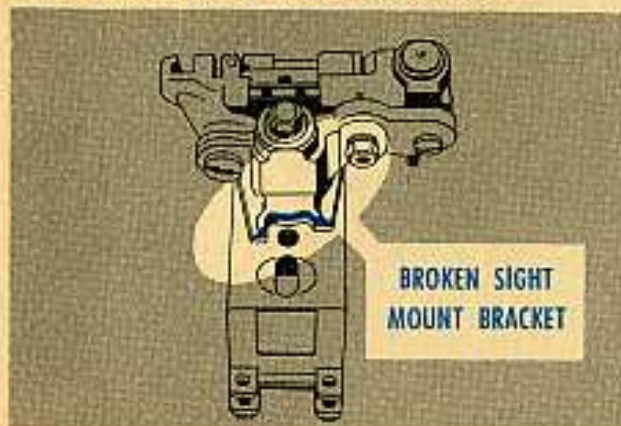


← Easy-does-it can save your mounting lugs from the same fate as these. It happened while an M86 Telescope was being put in place and the Joe jerked his hand without thinking. Take that second look when setting yours up.

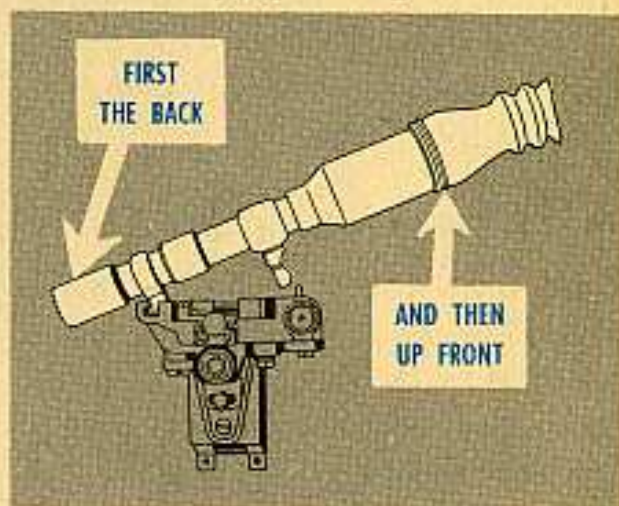

← Forcing the sight-mount bracket while boresighting did this. To swing the bracket without breaking it, loosen the two elevation-eccentric cap-screws or the azimuth-eccentric hex-nut. With its screws loose, it can't break.

ARMY AIRCRAFT

Kunfucyus say: It couldn't happen to you, of course, but he who starts whirly-bird with blades tied down looks sadder and wiser while waiting for new clutch, and/or blade socks, and/or blades.

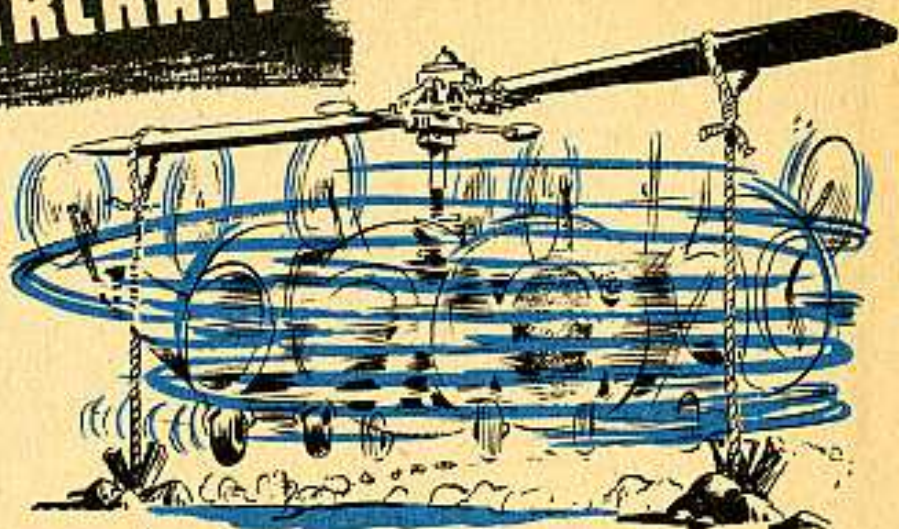

H-19C FREE WHEELING UNIT

Remember that even though the H-19C rotor-free-wheeling-unit (Sikorsky) has a grease fitting, the correct lubricant is GO 90. Stuffing it full of CG will louse up the unit. You will find it pays to fill a gun with GO 90 to lube these units. You will find it also pays to go darn easy on pumping it in—it's real easy to blow the grease seals.

BATTERY CHECKS

Strange as it sounds, some people will insist on waiting the full seven days between battery checks, no matter how hot the weather is. It won't do—you gotta take a look at that battery every three days or so in extreme hot weather. You'll be surprised how thirsty it gets.

H-19C CLAMSHELLS

You don't know what grim catastrophe might come of flying a Sikorsky with the clamshells not

locked. You do know that failure to hook them back when open gets some shells punctured when they fly back and hit the hooks.

H-13 STARTER PARTS

Your H-13 uses a Delco-Remy starter, Delco No. 18364; this starter uses a clutch drive assembly, Delco No. 1873789.

Your administrative motor pool has Delco-Remy starters for Chevrolet sedans and GMC commercial type trucks. These starters use clutch drive assembly, Delco No. 1873789, Stock No. G508-6226420—same number, same part, not a bit of difference. Manufacturer picks 'em both up from the same box and hooks one on a 6-volt motor for the car, the next one on a 12 or 24-volt motor for the aircraft.



Now, no one's telling you to use automotive starter-parts on your fly wagon. Just be sure you put on a clutch drive assembly, Delco No. 1873789.

The Story of the

SAFETY BAR

for LC-126 Engines

Once upon a time it seems that a handsome young prince-of-a-soldier had an LC-126C engine swing back on him while he was in behind it. This was said to be most painful. When **Mr. Felix S. Davis**, a civilian aircraftsman at Fort Knox, heard about it he devised an angle-iron safety-bar to supplement the existing lock. As shown below, the one he built was carefully tailored to fit the mounts, and has its own bolts. Actually, the only thing you must have is a bar with the appropriate bolts and holes, with 19" between hole centers.

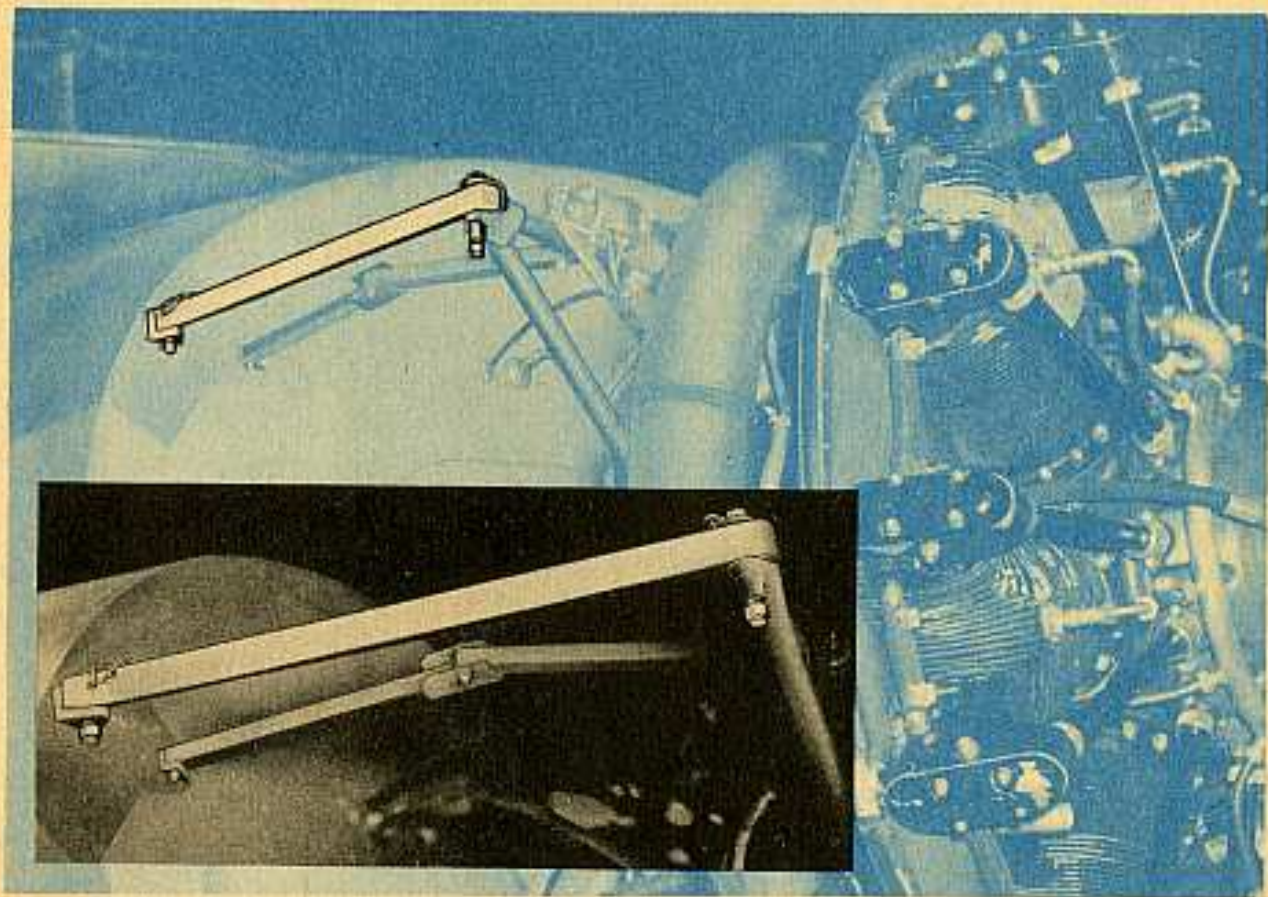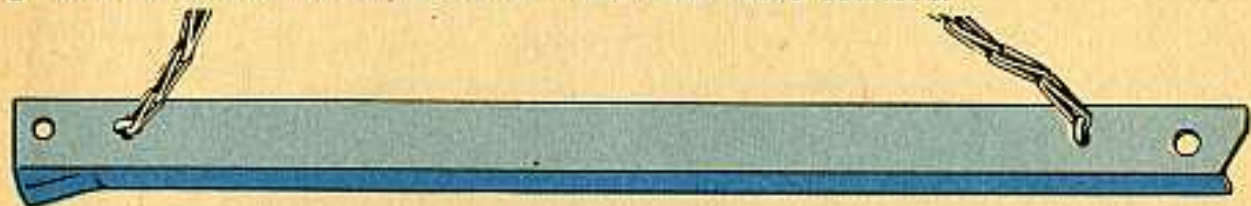

SUPPLY & DIRECTIVES

PRODUCTION-LINE PM

Some units build up 1000 miles mighty fast and PM services have to be done as often as once a week instead of every month or two. That's mighty tough on organizational maintenance in a busy organization.


If the malady sounds familiar, why not consolidate your organizational maintenance people with those of other companies and set yourselves up a production-line maintenance system?

You'll need pits or ramps with lights and something in the way of shelter from the weather. Supplies of the most commonly used parts will be a must at each "station."

Here's a layout for a jumbo-sized production-line maintenance system—change it around to suit your needs.

NOTE: With the following personnel on the production line, it is estimated that 10 to 30 vehicles per day can be given the Commander's PM Service.

STATION	PERSONNEL
1	1 to 3
2	1 to 3
3	2 to 6
4	4 to 8
5	2 to 6
6	2 to 6
7	1 to 3
TOTAL 13 to 35	

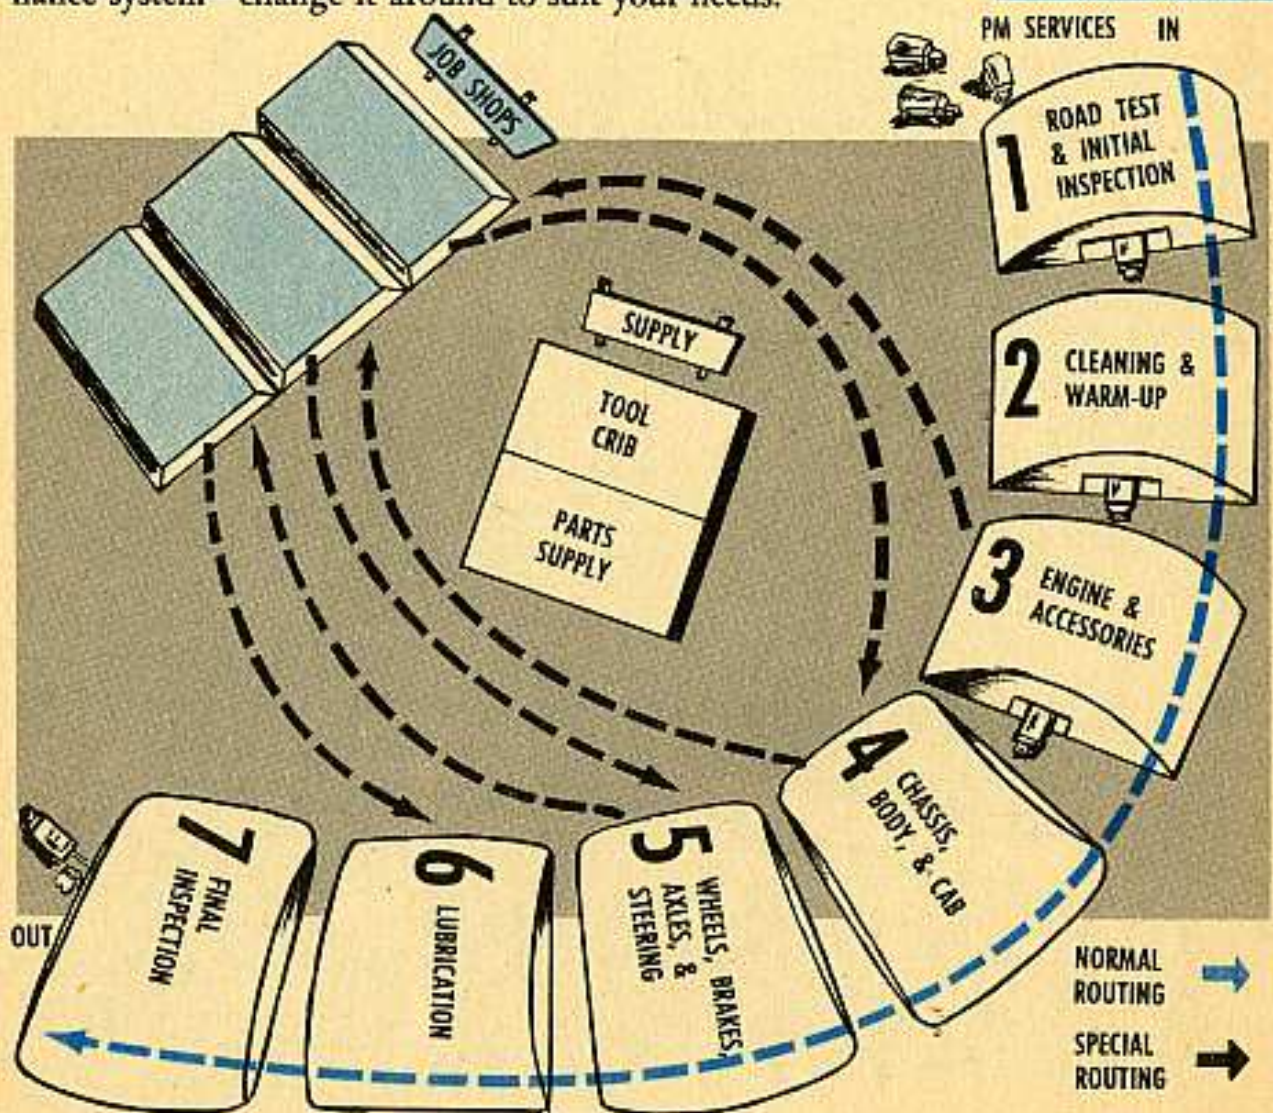

STEERING-KNUCKLE- BOOT KIT

Having trouble with your M34 steering-knuckle boots in Service Replacement Kits #G742-7410883? The joker in the deck is that there's a coupla different varieties of outmoded boots still in the supply system, which you might get when you requisition under that number. Here's how you can help the supply guy: Try adding a note on your requisition that only the moulded all-rubber boot with the vulcanized zipper will be acceptable, and see what happens.

M135 Supply Catalog

If you're using Ord 8 SNL G-749, page 60—torus assemblies, look twice before you leap. If you don't—you'll get a retainer for a nut or a spring for a retainer sure as you read straight across. But if you look real close, you'll see the printer has slipped a cog. The dope in columns 6 thru 11 has been jumped one line.

Might save a heap of headaches if you get out your copy right now and draw some lines under the items and the entries that really belong to them—lest you forget.



PUBLICATIONS LISTINGS

SB 9-1 (11 June 52) is still the latest listing of publications on Ord Major Items and rumor has it there won't be another one any time soon.

But cheer up, there's a shiny new SR 310-20-4 (Nov 52) to supercede the older one and its changes, and it'll do the job till a new SB 9-1 gets around.

TIRES, TUBES AND FLAPS


Judging from the letters you've been writing in to PS, you'd like to know just what goes and what to expect from your tire requisitions. Change 1 to AR 750-137 (AFR 65-2A) makes things a lot clearer than they were under the old AR of the same monniker.

F'rinstance, if you're wanting tires for fire department vehicles or crash trucks, or for research and development purposes, you can get all new ones for the asking. Only don't forget to say so on your requisition.

Except for that, ZI requisitions'll be filled with new tires only if your distribution depot is out of the serviceable used or reconditioned ones. Overseas-command requisitions get handled just vice versa.

You'll want a copy of this change—it throws a new slant on the tire situation.

CONTRIBUTIONS

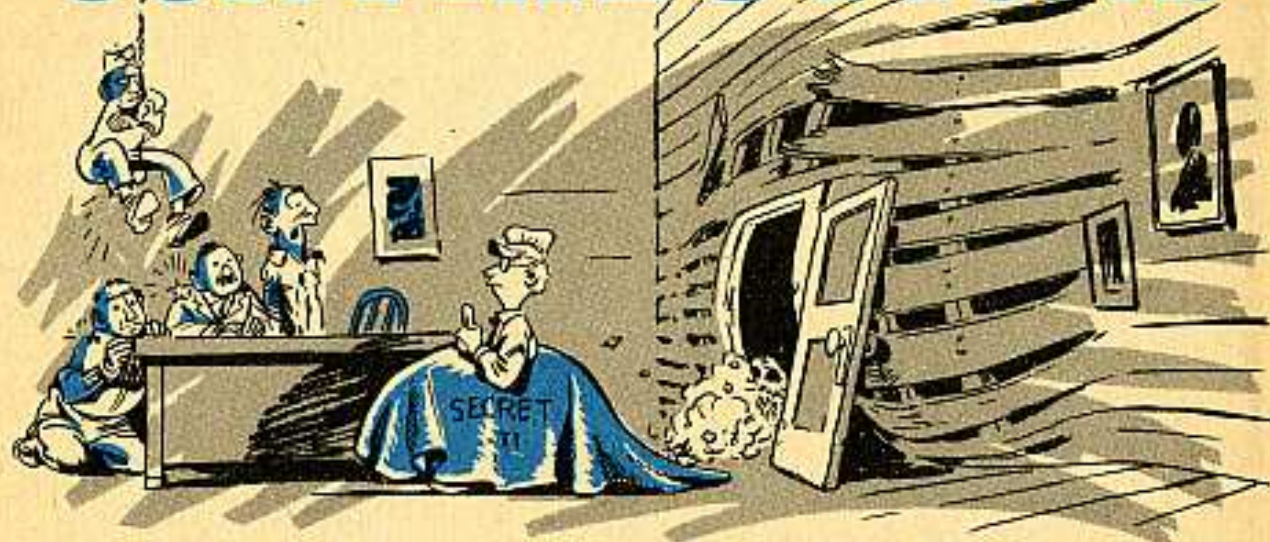

SUPPORT DRAIN-HOLES

Dear Editor,

Gravity can get rid of any water accumulating in the $\frac{3}{4}$ -ton M37's radiator support-bracket (Stock No. G741-7373720) if you drill a couple of holes in it. The bottom center is raised a little, so put the openings at the lowest point on each side— $\frac{1}{8}$ " holes should take care of it.

**Forrest L. Gibson, OCT
Fort Lewis, Washington**

(Ed Note—Nice relief for a sore spot. You'll find the latest '37's coming out with the holes already in the bracket.)

BLACKOUT MARKER-LAMP SPONGE


Dear Editor,

PFC Jack Hinson had trouble with condensation accumulating in the B. O. marker lamps on his M135 GMC. He had his supply sergeant save him some 4-ounce bags of desiccant used to absorb moisture in spare parts packages. Hinson dried out what moisture had collected in his lamps, put a 4-ounce bag in each one (Fig. 1)

and reinstalled the cover—no more condensation.

**T. W. Winter, Jr., OCT
Camp Edwards, Massachusetts**

(Ed Note—If you've got condensation, dessicants will get rid of it. But, first check to see why you're getting moisture in the sealed unit to begin with. If you've replaced a bulb and used the same O-ring for reassembly, that can be your trouble—these O-rings take a permanent set. If you're using dessicant, though, be sure to keep checking—when they're damp, use heat to dry 'em out and restore the absorbing power.)

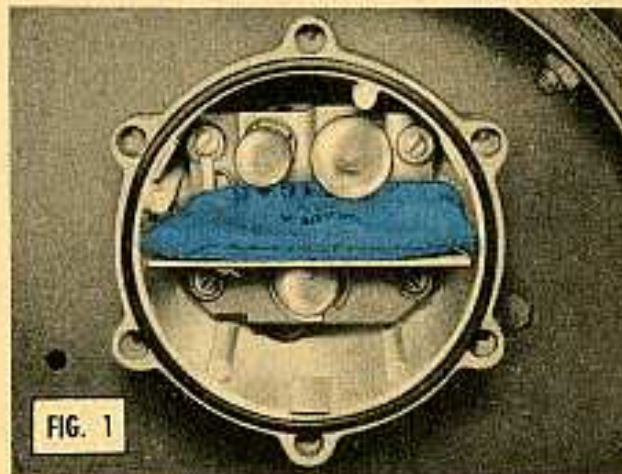

SHIFTER-SHAFT-BOOT SAVER

Dear Editor,

Here's how our field maintenance shop saves a lot of power-takeoff shifter-shaft boots, seals, and oil leaks, on the M51 5-tons. These seals (SN H013-0500010) and boots (SN G742-7061278) are right above the exhaust pipe and are taking a beating from its hot breezes. The heat also thins out the oil, and you might have leaks even after you stick in new seals.

To give the boots and seals some protection and help keep the oil from thinning, you can make up a baffle plate out of sheet metal (Fig. 2) and stick 'er between the exhaust pipe and the power-takeoff like you see in Figure 3.

H. E. Gray, OCT
Fort Leonard Wood, Missouri

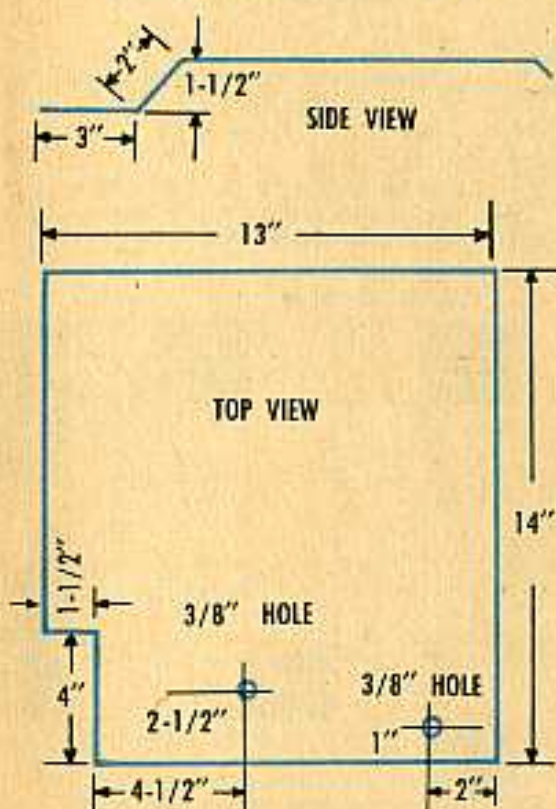


Fig. 2—This is how to make the gadget that'll save your M51's boots and seals. Choose your own thickness of sheet metal.

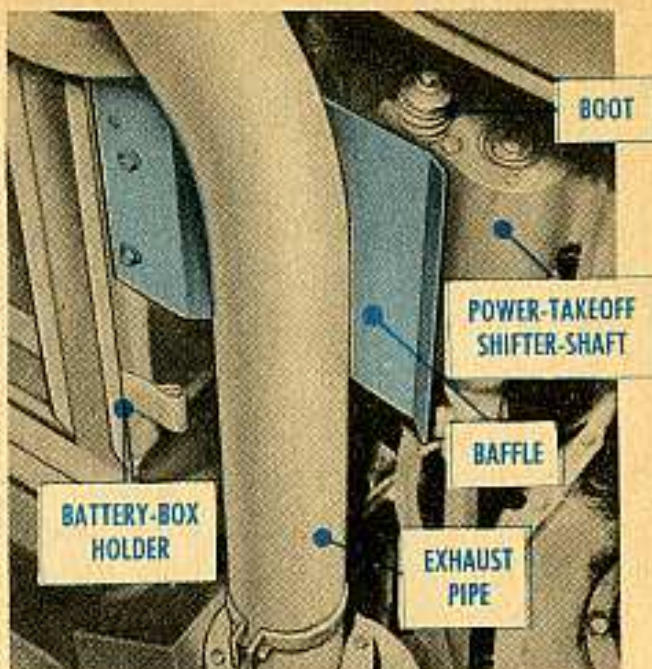


Fig. 3—Mount the baffle to the battery-box holder. Drill two holes in the baffle and holder for $\frac{3}{8}$ " bolts. There's vibration here, so don't forget to use lock washers.

GO EASY ON THE DONALDSON VALVE

Dear Editor,

We couldn't find the reason for a fast idle in a couple of M38A1's until somebody slowly turned the left-side fording valve a little on one of them and it idled fine. Looking further we found the Donaldson valve (Fig. 4) in the ventilator didn't always seat tight and our guess is that the vacuum pressure that controls it got lost traveling the long vacuum line—the line's crooks and bends probably act as restrictions. Sometimes we have no trouble at all so it seems the valve seats just loose enough where at times it works OK and other times it doesn't.

Since we didn't want to keep the fording valve partly closed and confuse the fording valves' linkages to their hand lever, we reduced the size of the orifice (opening) at the end of the Donaldson

valve by peening it a **little** with a center-punch. This cut down the amount of air getting through the loose valve.

Now when an 'A1 idles too fast, we first try closing the fording valve slowly. If that does it, we know it's the Donaldson valve again. If closing the valve a little doesn't work, we look to the carburetor.

**Ralph James
APG, Maryland**

(Ed Note — Peening the orifice too much could end-up with pressure build-up in the crankcase and oil leaks all over the place. Check your vacuum booster first, and clean the valve and fuel line

of oil and carbon. Make peening a last resort after you've tried everything else.)

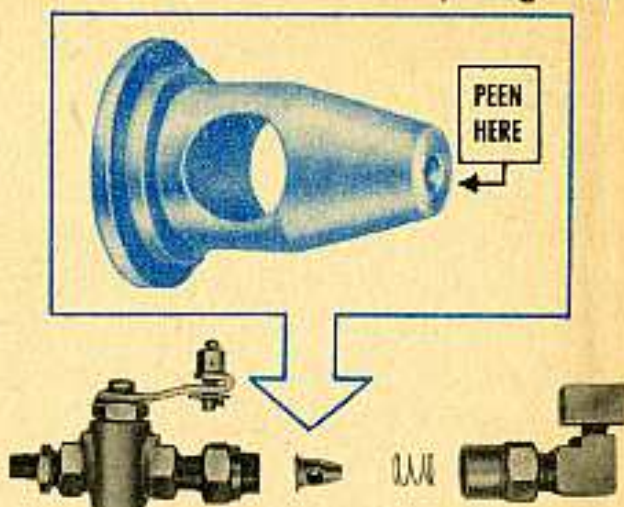


Fig. 4—Go easy on the Donaldson-valve. Too little a hole is worse than too big.

**you ask for a puzzle
—you get a puzzle**

PS Double-Crosser

HOW TO DO IT

The diagram squares spell out a familiar saying. The word definitions were taken from information in this issue of PS Magazine—unless it's something you know well enough to answer in your sleep. When you find the word to fit the definition, write it in the blank spaces provided. Each space has a number—a corresponding number appears in the diagram below. So when you find a word, transfer the letters to the matching numbered squares. In no time at all, you'll solve the familiar saying.

WORD DEFINITIONS

A) Operation of this is necessary when adjusting the clutch

29 13 5 40 19 9 30 50 33 22 39 47

B) Description of vehicle when PM is neglected

24 8 2 17 21 32 23 34

C) The commander should avoid doing this to turret-traverse gears

49 25 37 3 16

D) Word you'd most like to hear from a tomato

38 48 42

E) Location of drain, on M100 trailer, that makes parking in the rain no problem

27 41 12

F) Describing generator and regulator interchangeability if from different manufacturers (2 words)

43 26 28 11 46 31 45

G) Before you do this to the M62 Wrecker, you'll need to read story on page 602

44 4 14

H) If safetied wrong, all the cap screws come loose when the wire does this

15 18 10 1

I) What the Sarge will strain again if you foul up the winch's brake-adjustment when you're just supposed to be tightening nuts and bolts

35 7 20 6 38

1	2		3	4		5		6
			I			A		
7	8		9	10	11	12		
			M			D		
	R	14	15	16	17	18	19	
				P			S	
20	21	22	23	24	25	26		
		I			T			
	B	28	29		30	31		
			T					
32	33		34	35	36	37	38	
	S					R		
39	40	41	42			43	44	
	O	N	E					
45	46	47	48	49	50			
		N		S	S			

"You find the one that hurts..."



This is Stubborn Sam . . .
he's the mule-trader who wouldn't
tell which tooth hurt 'cause he figured the
dentist oughta know his *own* business . . . "He's gettin'
paid for it, ain't he?" The dentist hadda pull every tooth
in Sam's thick head afore Sam blurted out, "Id was da las one!"
It was years before he ate a steak. What's it got to do with you??
It's the same as when you send an item back to Ordnance and
don't tell 'em what hurts. Takes longer to find the
ache and fix it. So tag your bunged-up stuff
to tell your support shop what happened.
Tell 'em which tooth hurts.
Please, would you?